



Document Title:

**ARGUS version 5**

**USER MANUAL**

Document prepared by ITM Limited

Man-Av5	2	31/03/2010	Draft	David Farnham	Sheridan Elliott	
<b>Manual No.</b>	<b>Revision</b>	<b>Date</b>	<b>Status</b>	<b>Originator</b>	<b>Checked</b>	<b>Authorised for Issue</b>

## Contents

<b>Section 1 :</b>	<b>Introduction .....</b>	<b>5</b>
<b>Section 2 :</b>	<b>Using Argus .....</b>	<b>6</b>
2.01	Login .....	6
2.01.1	Username .....	7
2.01.2	Password .....	7
2.01.2.1	Lost Password .....	7
2.02	Login Access Levels .....	8
<b>Section 3 :</b>	<b>Menu Bar .....</b>	<b>9</b>
3.01	Select Projects .....	9
3.02	Select Project Plot .....	11
3.03	Select Plan View .....	11
3.04	Change Password .....	11
3.05	Info .....	12
3.06	Logout .....	12
<b>Section 4 :</b>	<b>Plan Views .....</b>	<b>13</b>
4.01	Plan Format .....	13
4.01.1	Site Plans .....	13
4.01.2	Cross Sections .....	13
4.01.3	Photographs .....	13
4.02	Map Tool Bar .....	14
4.02.1	Map Time .....	14
4.02.2	Refresh Rate .....	14
4.02.3	Recalculate Measurements .....	14
4.03	Sensor Locations .....	14
4.03.1	Sensor Boxes .....	14
4.03.2	Sensor Mark .....	17
4.04	Latest Readings .....	18
4.05	Sensor Pop-up Window .....	19
4.06	Pop-up Plots .....	20
4.07	Graphs on Plan Views .....	20
<b>Section 5 :</b>	<b>Project Plots .....</b>	<b>21</b>
5.01	Chart Types .....	22
5.01.1	Single Chart .....	22
5.01.2	Multi Chart .....	22
5.01.3	Profile Charts .....	23
5.02	Chart Icons .....	23
5.02.1	Changing Time Range .....	24
5.02.2	Fixed / Auto Scale .....	25
5.02.3	Using Temporary Datum .....	26
5.02.4	Remarks .....	27
5.02.5	Tabular Data .....	28
5.03	Zooming in .....	29
<b>Section 6 :</b>	<b>Project Configuration (Administrator Only) .....</b>	<b>30</b>
6.01	New Project .....	30
6.02	Edit Project .....	32
6.03	Project Import/Export .....	33
<b>Section 7 :</b>	<b>Sensor Configuration Menu (Administrator Only) .....</b>	<b>34</b>

7.01	Replacing Sensors .....	36
7.02	Sensor Formula .....	37
7.03	General functions.....	38
7.03.1	Calculated Sensors .....	39
7.03.2	Mathematical expressions .....	39
7.04	Function .....	40
7.05	Alarm Formula .....	40
7.05.1	Rate Of Change Alarm .....	40
7.06	ASCII files / position in ASCII .....	41
7.06.1	ARGUS Format.....	41
7.06.2	ASCII Export-2-Format .....	41
7.06.3	Campbell Format .....	41
7.06.4	Campbell Table based Format .....	42
7.06.5	Geodetic Format.....	42
7.06.6	CR Based TCA .....	42
7.06.7	CR Based Radio .....	43
7.06.8	Radio CSV Data .....	43
7.06.9	Manual CSV Data .....	43
7.06.10	Ref File I-Ris .....	44
7.07	Data Reduction (beta status).....	45
7.08	Editing the Sensor configuration.....	46
7.09	Exporting and Importing the Sensor configuration .....	46
7.10	Multi-value Sensors .....	47
<b>Section 8 :</b>	<b>Edit Plan Views (Administrator Only) .....</b>	<b>48</b>
8.01	Positioning sensors and project-plots on the plan view .....	48
8.01.1	Positioning project-plots on the planviews .....	49
8.01.2	Editing sensor and plot positions on the plan view.....	49
<b>Section 9 :</b>	<b>Edit Project Plot (Administrator Only).....</b>	<b>51</b>
9.01	Type of Plot.....	52
9.01.1	x-t Plot.....	52
9.01.2	x-y Plot.....	52
9.01.3	x-yt Plots .....	52
9.01.4	Horizontal & Vertical Virtual Plot.....	53
9.02	Configuration of x-t Plot .....	54
9.03	Configuration of x-t Plot .....	55
9.04	Configuration of x-yt Plot .....	56
9.05	Plot Titles and Legends .....	57
<b>Section 10 :</b>	<b>Create One Time Plot Create One Time Plot (Administrator and User).....</b>	<b>58</b>
<b>Section 11 :</b>	<b>Reports (Administrator Only) .....</b>	<b>61</b>
11.01	PDF Reports .....	61
11.02	Report Layout .....	61
<b>Section 12 :</b>	<b>Alarms (Administrator and User).....</b>	<b>63</b>
12.01	Maximum and Minimum Alert Levels.....	63
12.02	Alert Window.....	64
<b>Section 13 :</b>	<b>Data (Administrator and User) .....</b>	<b>66</b>
13.01	Download Data (Administrator and User).....	66
13.02	Input Manual Data (Administrator Only) .....	67
13.03	Edit Data (Administrator Only).....	68
13.04	Archive/Backup (Administrator Only) .....	69
<b>Section 14 :</b>	<b>Users (Administrator Only).....</b>	<b>70</b>
14.01	Edit Users .....	70
14.02	Edit Email Groups.....	71
14.03	Change Password .....	71
14.04	Check Import .....	72
<b>Appendix A.</b>	<b>Add-Ins .....</b>	<b>74</b>
A.1	Logbook .....	74

## Argus User Guide

---


A.2	Filemanager .....	75
A.3	Inclinometer Data .....	76
A.4	ASCII export.....	79
A.5	Virtual Sensors.....	82
<b>Appendix B.</b>	<b>Troubleshooting .....</b>	<b>85</b>
<b>Appendix C.</b>	<b>End User License Agreement .....</b>	<b>87</b>

## Section 1 : Introduction

ARGUS Monitoring Software is a web-based data-management, calculation and presentation tool. It provides a reliable and cost efficient method for processing and monitoring ASCII files with numerical data.

ARGUS will handle all data processing requirements, starting with storage of data into a MySQL database, performing the required calculations on the data, presenting the results in graphical and numerical format, generate alarm messages, creating automated PDF reports and much more.

ARGUS Monitoring Software is server based. Users interact with the software using their web-browser. Working with ARGUS is therefore platform-independent and can be accomplished from the local network or, when connected to the Internet, from any location in the world

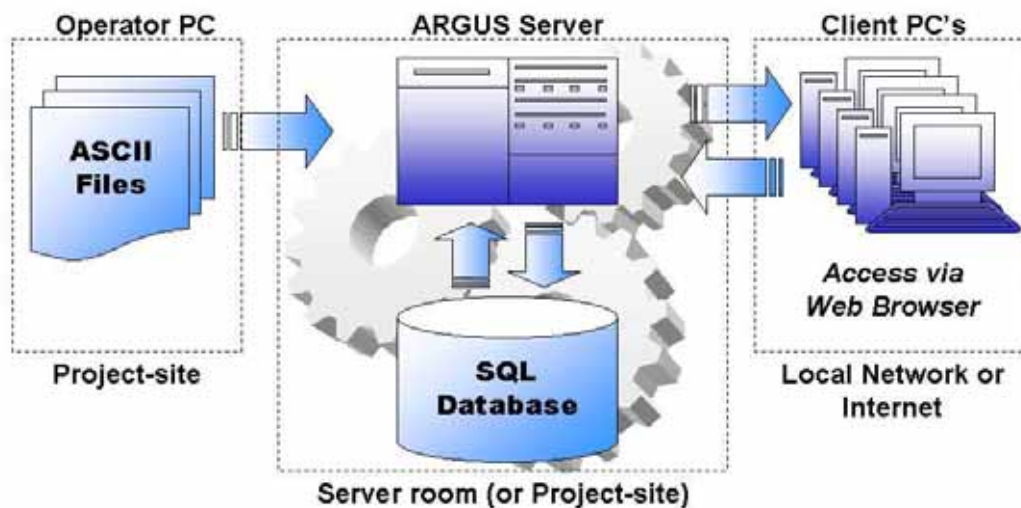

The most distinctive feature of ARGUS is its ability to store 'raw' data in the database and present the calculated results 'on-the-fly' to the user. This implicates that the presented results are always up-to-date, a change in the calculation method or the raw data is instantly visible.

Another important feature is that you are in 100% control of the software. Once you have purchased ARGUS or use an ARGUS hosting account you no longer need our assistance. You can create projects, change or add logo's, edit the (sensor) configuration and everything else there is to configure about a project - all by yourself over an easy to use webinterface.

ARGUS is always on-line and is a true multitasking data management and presentation tool. It can import data from automated systems, allow manual data entry, allow changes to its configuration, present plots and reports all at the same time, from different locations and for multiple users.

You are able to work with more than one administrator at the same time to setup large projects. You are able to send alarms to multiple people and view and evaluate the latest results together on-line in your web-browser late at night at home or from different offices around the world. All you need is a web-browser and Internet connection - there is no PC software to install or licenses to pay, you are able to use ARGUS on any computer with Internet access.


ARGUS is an open system, it is based on a reliable open-source operating system, webserver, database and programming language, and it's design will allow you to import data from any source. All ARGUS needs is a simple ASCII file with timestamps and numeric data.

## Section 2 : Using Argus

---

### 2.01 Login

In order to access the ARGUS server you need to know the URL (web page name) or the IP address of the server which is running ARGUS Monitoring Software. Enter this IP address or domain name in your web browser:

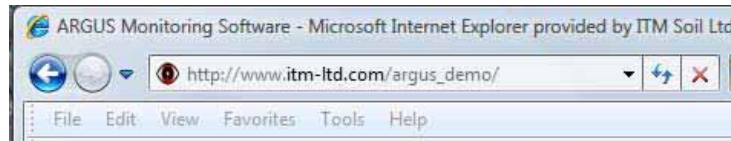

---

Note: For secured web servers you have to enter https instead of http

---

You will be presented with the login screen, which requires you to enter your name, password and preferred language.


If you are a registered user enter your name, password and select the language in which you would like to work. Press the button 'login' to start.



Unregistered users have to contact the administrator to grant them access to a project and provide them with a username.

### 2.01.1 Username

The system administrator will add you as a user to the project, at which time the Argus server will email you your login name and password.

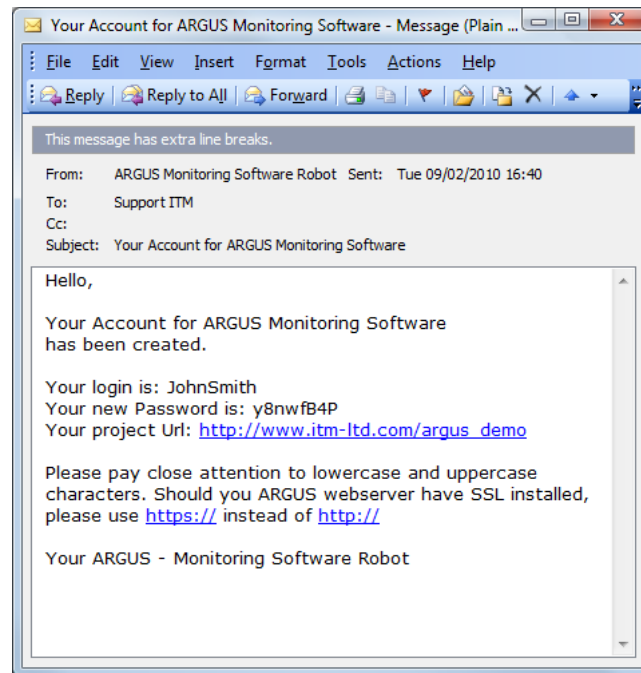

### 2.01.2 Password

The login email will include a randomly generated password, it is advisable to change this to something easier to remember.

#### 2.01.2.1 Lost Password

In case users require a new password, on the login screen please use the link 'Password lost' and enter your email address in order to receive a new password. If the email address exists in the user database a new password is forwarded by email.

**LOGIN**  
Please enter your E-Mail address and you will receive a new password by mail.  
E-Mail  
  
  
[back](#)

---

**Note:** The system administrator does not have access to the passwords.

---

## 2.02 Login Access Levels

ARGUS has three main levels of access:

- Administrator
- User
- Guest

The administrator has full access, the user is able to work with the software, set and confirm alarms, enter and edit manual data and download data from the database. A guest is only able to view data and not modify data in any way.


Within each level various options can be turned on/off by the administrator by adjusting the menu list for a user.

Permission	Enabled
Select project	<input checked="" type="checkbox"/>
Select project plot	<input checked="" type="checkbox"/>
Edit project	<input type="checkbox"/>
Edit sensors	<input checked="" type="checkbox"/>
New project	<input type="checkbox"/>
Select plan view	<input checked="" type="checkbox"/>
Edit plan views	<input checked="" type="checkbox"/>
Select plan view plot	<input checked="" type="checkbox"/>
Create one-time plot	<input checked="" type="checkbox"/>
Edit project plots	<input checked="" type="checkbox"/>
PDF reports	<input checked="" type="checkbox"/>
Alarms	<input checked="" type="checkbox"/>
Plan view alarms	<input checked="" type="checkbox"/>
Download data	<input checked="" type="checkbox"/>
Project import/export	<input checked="" type="checkbox"/>
Input manual data	<input checked="" type="checkbox"/>
Edit data	<input checked="" type="checkbox"/>
Archive/Backup	<input checked="" type="checkbox"/>
Accelerometer	<input checked="" type="checkbox"/>
ASCII export	<input checked="" type="checkbox"/>
Data Analysis	<input checked="" type="checkbox"/>
Filemanager	<input checked="" type="checkbox"/>
Inclinometer Data	<input checked="" type="checkbox"/>
Logbook	<input checked="" type="checkbox"/>
Virtual Sensors	<input checked="" type="checkbox"/>
Edit users	<input type="checkbox"/>
Edit email groups	<input checked="" type="checkbox"/>
Change password	<input checked="" type="checkbox"/>
Check import	<input checked="" type="checkbox"/>



## Section 3 : Menu Bar

After a successful login you will be presented with the main menu. In this menu all functions are listed based on the access level you have been granted. Depending on the configuration of your server, more or less menu items could exist, and in some instances dependant on “Addins” that have been installed and activated.

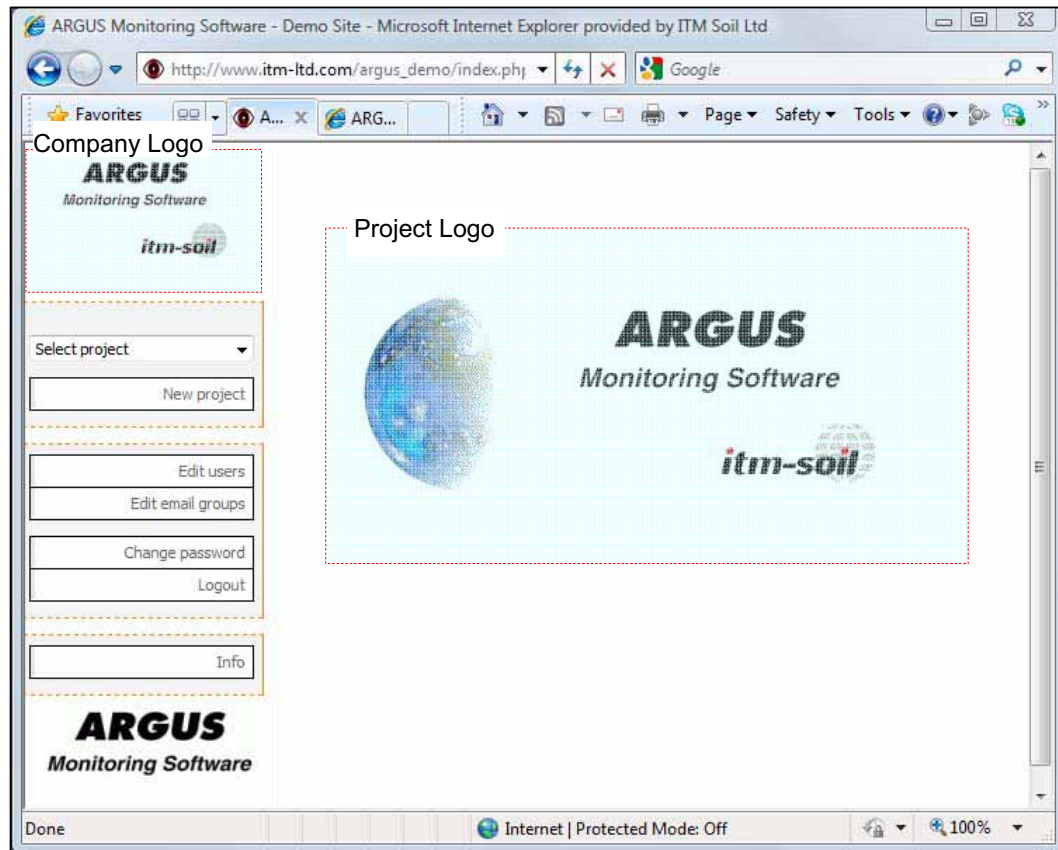

### 3.01 Select Projects

If you have access to multiple projects within the database opened, then you will see a drop down selector at the top labelled 'Select Project'. By clicking here you will see all of the projects that you have access to.


You can also perform the following administrative tasks

- Create a new project within the database here.
- Edit Users details.
- Edit email groups
- Change your password
- Logout
- Argus Info.

We will cover these items later in this manual.

Once you select a project from the drop down list, you will see the full menu bar.

The toolbar provides simple access to the functions within Argus.

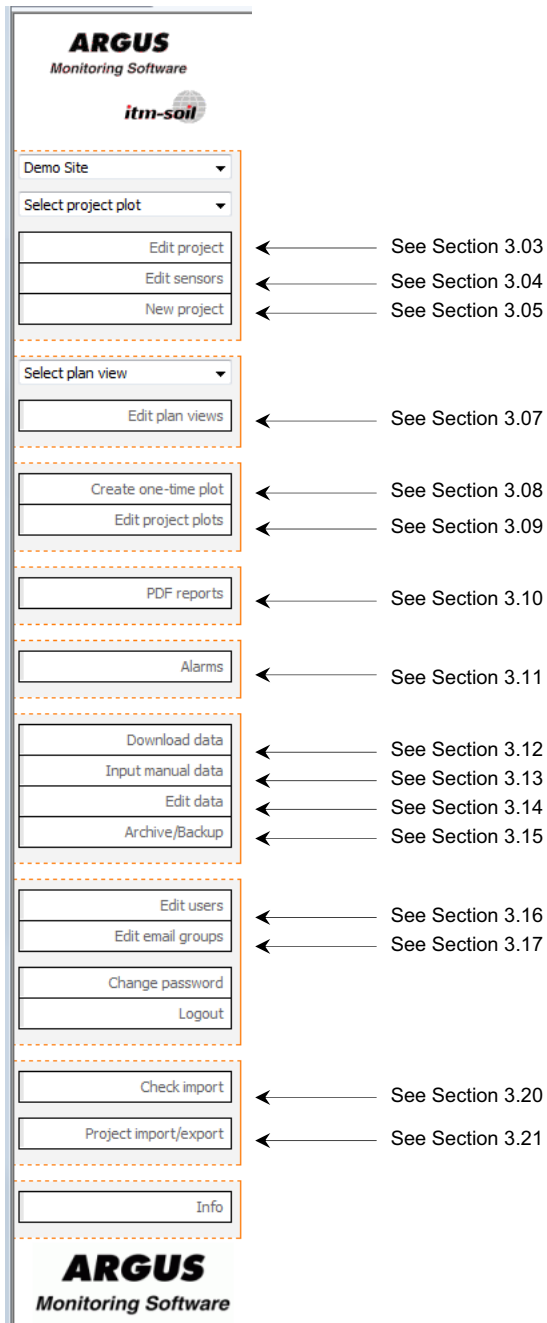


### 3.02 Select Project Plot

This drop-down selection box holds all the project graphs that have been created by the administrator. These graphs are configured to display a time-period ranging from the newest / latest measurement to a specified number of days ago. This way the graphs will always show the latest developments in measurement results.

Please note: ARGUS re-calculates all measurement points (the server – not your PC) from raw data to engineering-units, hence the creation of a graph could take some time.

After you selected a graph a new window will be opened in which the graph is displayed:

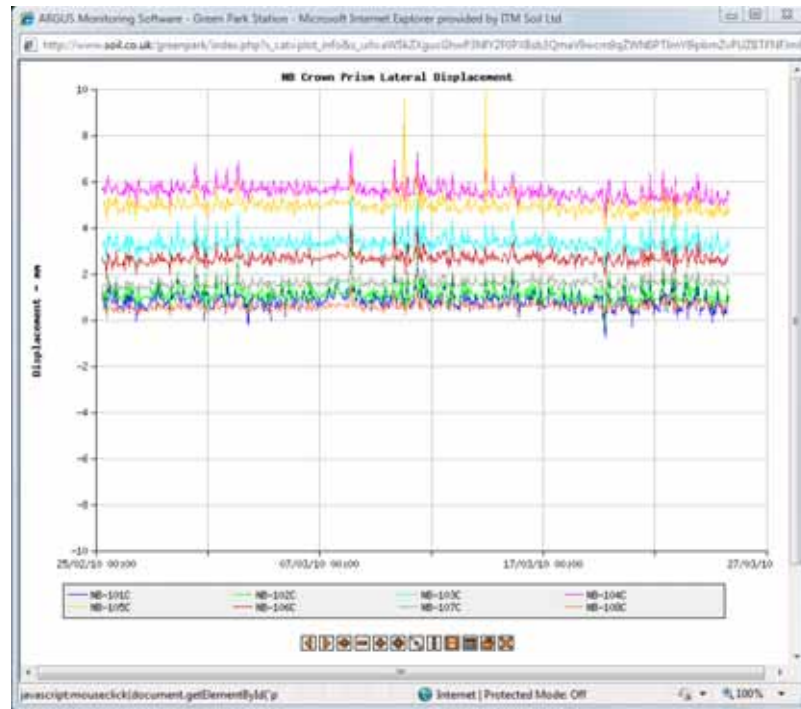

The graph is an image (no measurement data is transferred to your PC), which you can download to your PC by right-clicking your mouse and selecting 'Save Image As'. It is possible to zoom-in on the graph by left-clicking your mouse once on a certain area of the graph. Move your mouse to another position on the graph and click again with the left mouse button. The area you have selected will form the basis for a new graph. The scales are adjusted to fit the area you selected, in case you would like to retain the scales in the graph, click outside the axes. For more information see Section 5.

### 3.03 Select Plan View

Select plans currently set up for the project. Click on the drop down arrow and select the plan to view.

A plan view is a view of your project by using a JPG, PNG or GIF image on top of which the installed sensors are displayed. This image can be a copy of a CAD-drawing, a photo or a sketch. The sensors will display their newest / latest measurement result and the current alarm level.

For more information see Section 4.

### 3.04 Change Password

Here the user can change their password to something easier to remember than the automatically generated password.

The user must enter their old password and then enter and confirm the new password.

### 3.05 Info

This shows information on the version installed, as well as licence details.



### 3.06 Logout

Click to exit Argus. The user is then returned to the initial login screen.

## Section 4 : Plan Views

### 4.01 Plan Format


A plan view is a view of your project by using an image on top of which the installed sensors are displayed. This image can be a copy of a CAD-drawing, a photo or a sketch. The sensors will display their newest / latest measurement result and the current alarm level.

The Site Maps can be in various formats, drawings, photos, plans etc. The file format of these can be JPG, GIF or PNG

#### 4.01.1 Site Plans



#### 4.01.2 Cross Sections

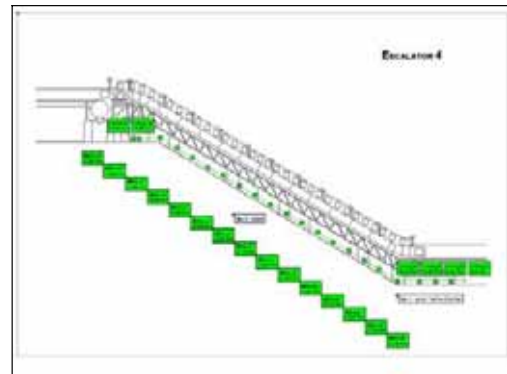


#### 4.01.3 Photographs




## 4.02 Map Tool Bar

 The toolbar shows the Map Time, along with buttons for printing or re-calculating the data shown, along with a refresh option.




### 4.02.1 Map Time

 The timestamp on the left upper corner will display the newest / latest measurement value from the sensors in the selected plan view.



### 4.02.2 Refresh Rate

 The plan view has an option to select a "refresh-rate".



Depending on how often sensors are read, you may select a refresh-rate in order to update the measurement values in the plan view with the latest results. Activate by clicking the refresh button.

Alternatively you can manually update the plan view by clicking the **refresh** button without selecting an interval.

### 4.02.3 Recalculate Measurements

This should only be done by an Administrator. This causes Argus to recalculate all data on the screen, this is only required if the sensor configuration is changed and you cannot wait for the next import to update the values.

Once running no data can be imported.


## 4.03 Sensor Locations

Two different types of graphic sensor representations are available for positioning a sensor on the image. The '**sensor box**' will display a box with the sensor name (short) and the current measurement value. A '**sensor mark**' will only position a small box, when the user moves his mouse over this box the sensor name (short) and measurement value will be shown.

### 4.03.1 Sensor Boxes

The box show the sensor name, the last reading and the measurement units. The colour of the box indicates that sensors current alert status.

Colour	Status
Green	Normal Condition
Blue	Raising Alert Levels
Amber	
Red	
Black	Watchdog
Grey	

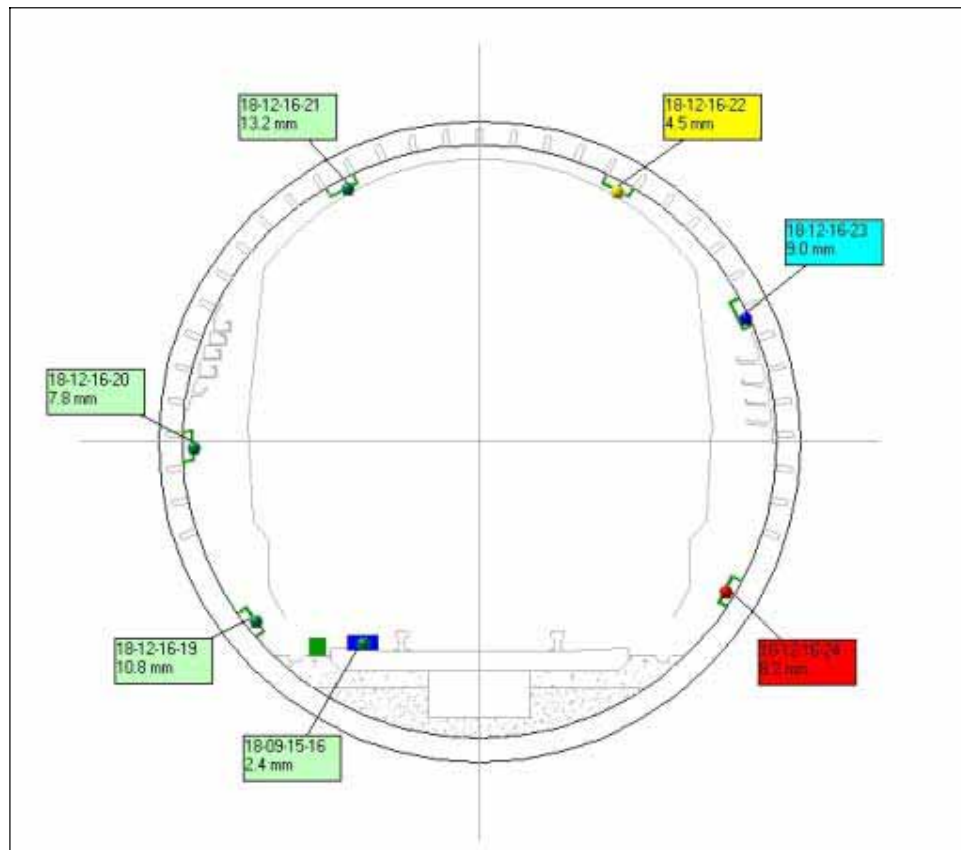


Where a sensor is a multi value sensor the status colour is for the highest alert for any value.

Map boxes show the sensor name along with its current reading and units.

## Standard Sensor

Displays

- Sensor Name
- Value
- Measurement Units

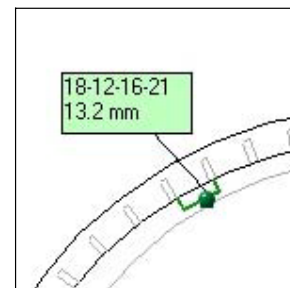


## Multi-value Sensor

Displays

- Sensor Name
- 1<sup>st</sup> value
- 2<sup>nd</sup> value
- 3<sup>rd</sup> value
- Measurement Units


In this example the sensor has three values, but a sensor could have any number of values.

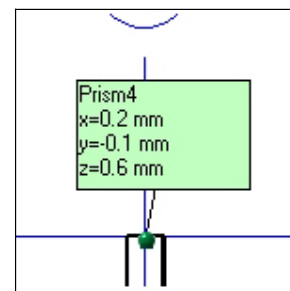






### 4.03.2 Sensor Mark

Here the sensor is shown by a coloured square . The colour of the square indicates that sensors current alert status. By moving the mouse pointer over the mark a sensor box will open showing the sensor name, the last reading and the measurement units. The colour of the box indicates that sensors current alert status.

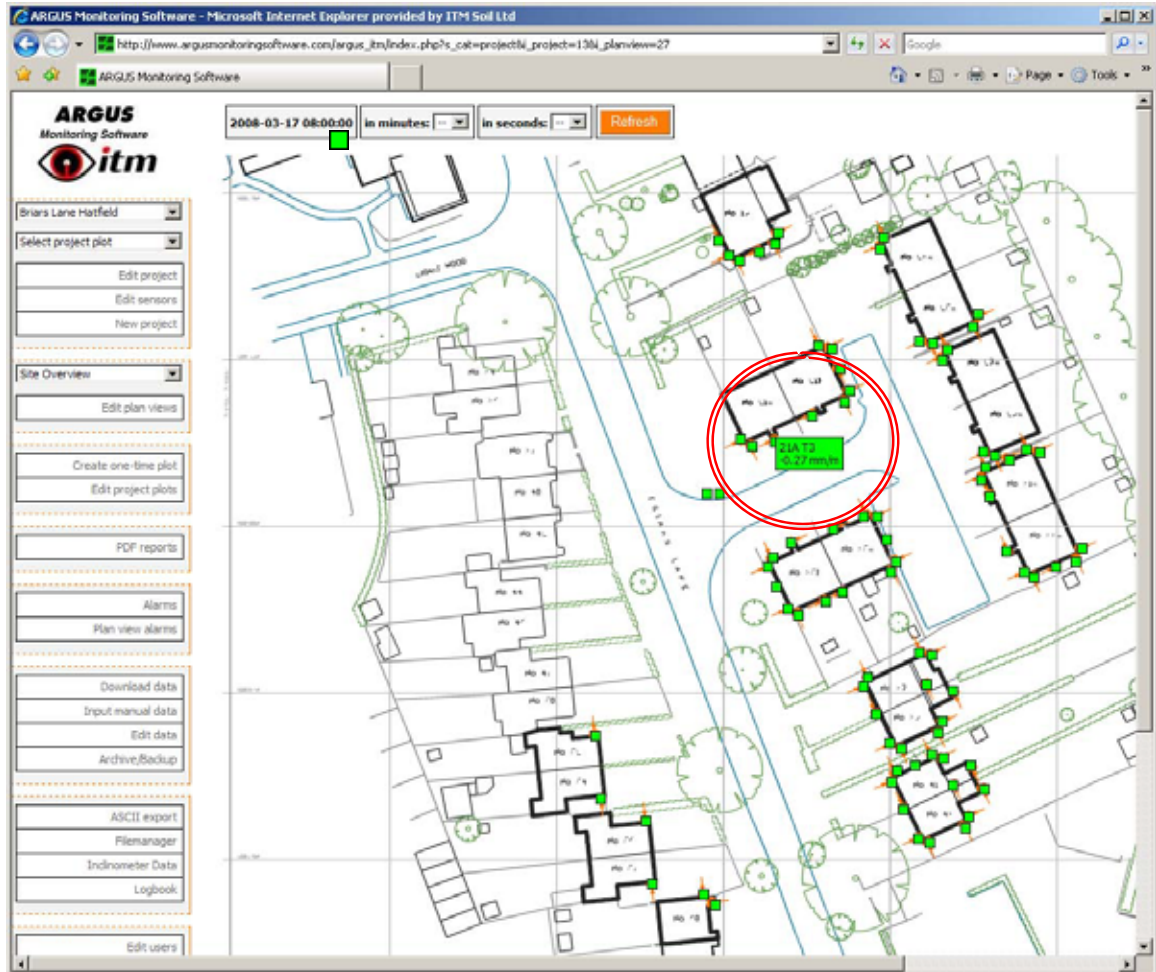


## 4.04 Latest Readings

The label boxes show the last reading for the sensor, this may or may not be the time of the latest data (map time).

There may be different reading intervals for different sensors, or points may be obscured, so the map time may not apply to all sensors.

To differentiate between sensors whose reading is the same as the map time and sensors whose data is older, the label boxes are shown with dark colours for sensors with data for the map time and light boxes for sensors with older data.

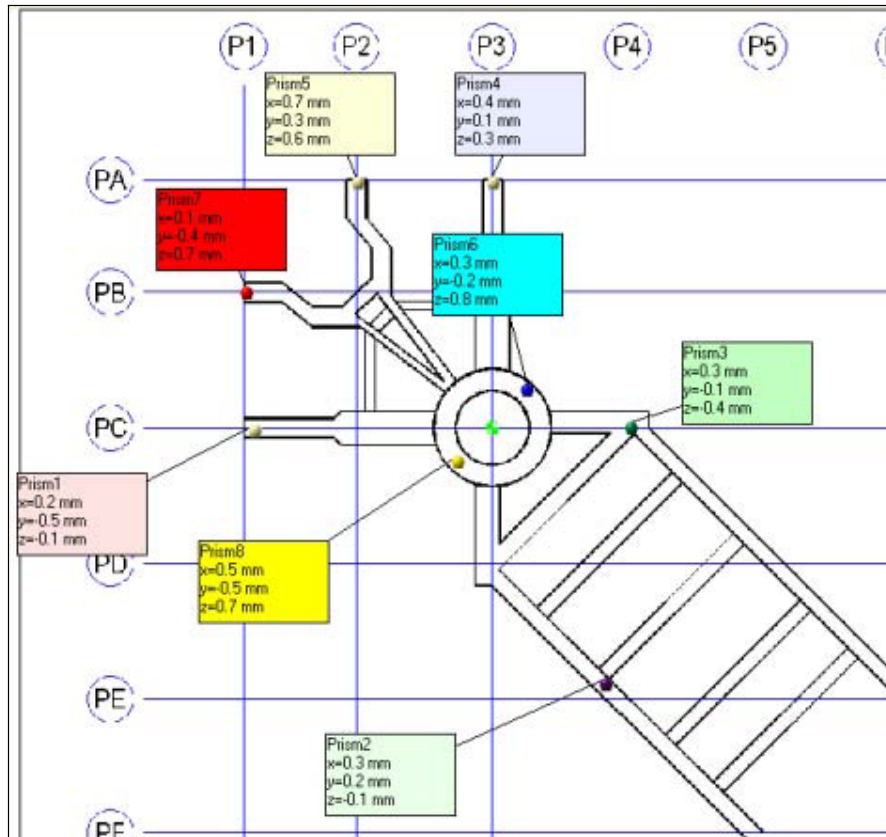

The alert status colour is still shown even on the lighter labels.

## 4.05 Sensor Pop-up Window

By clicking on the sensor name in a sensor box, a new window will open, displaying the current alert values set for the sensor. It is possible to modify these values in this window as long as access for the user is permitted.

Long Name →

Short Name →

Current Reading →

How many readings to wait until raising alert →

Generate Black Alert when reading is greater or equal to this value →

Generate Red Alert when reading is greater or equal to this value →

Generate Amber Alert when reading is greater or equal to this value →

Generate Blue Alert when reading is greater or equal to this value →

Generate Blue Alert when reading is less than or equal to this value →

Generate Amber Alert when reading is less than or equal to this value →

Generate Red Alert when reading is less than or equal to this value →

Generate Blue Alert when reading is less than or equal to this value →

Sensor Image →

ARGUS Monitoring Software - The Olde Coffee...

http://www.itm-ltd.com/argus\_itm/index.php?s\_cat=alarmsettin

**Electrolevel 16**

**EL\_16**

**1.71 mm/m**

suppress Alarm X-times: 0

**Black Alarm Level - Upper:** 15.5

**Red Alarm Level - Upper:** 12.75

**Amber Alarm Level - Upper:** 9.5

**Blue Alarm Level - Upper:** 5

**Blue Alarm Level - Lower:** -5

**Amber Alarm Level - Lower:** -9.5

**Red Alarm Level - Lower:** -12.75

**Black Alarm Level - Lower:** -15.5

save

Close Window


Internet | Protected Mode: Off

100%

## 4.06 Pop-up Plots

By clicking on the measurement value a trend-plot will be created in a new window. A trend-plot is a quick view (mostly a few days) of measurement data from a single sensor. Especially when alarm levels have been reached the trend-plot will show the “trend” of the last days.


Note: You can set the Y-scale, tick-levels, line-type and time notation in the sensor configuration.

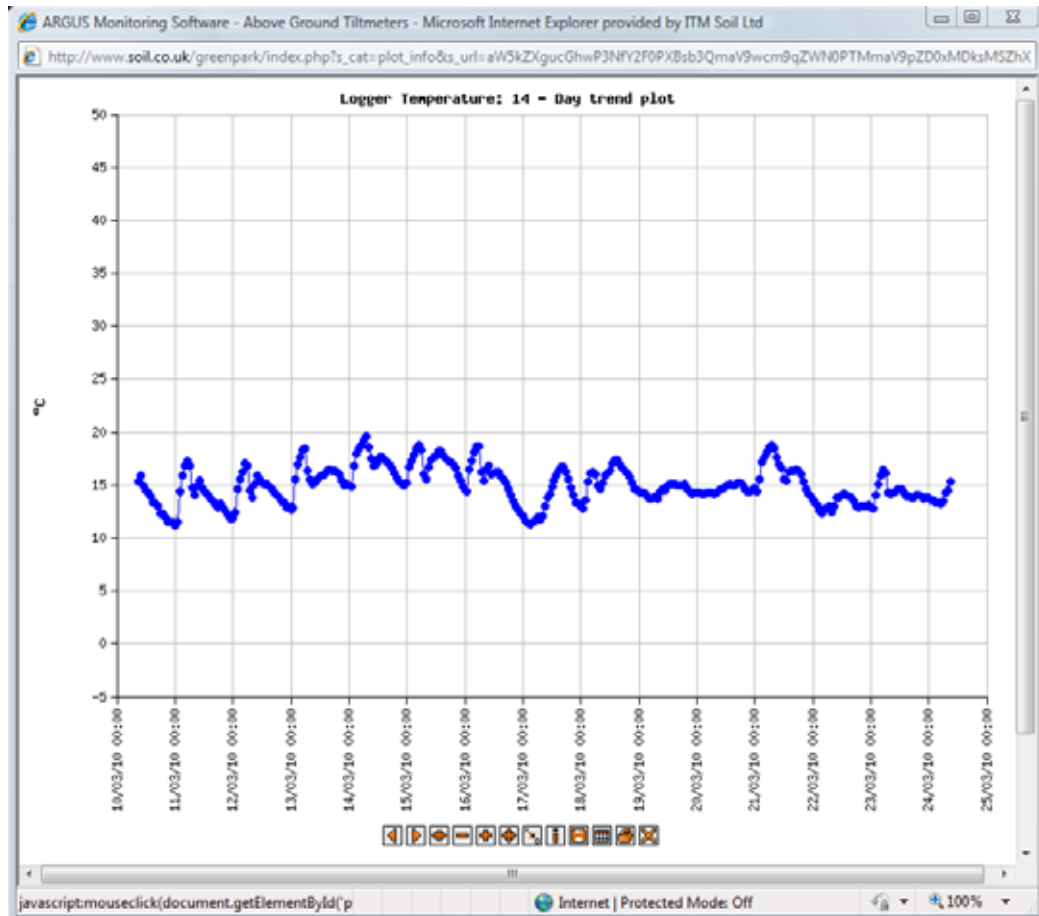

## 4.07 Graphs on Plan Views

It's also possible to place project-graphs as a graph-box or graph-mark directly on the planview. Clicking on the Graph- Box or Mark will open the associated project-plot in an extra window.

 Graph Box:



Graph Mark:




The tooltip reveals the plot-name:



## Section 5 : Project Plots

This drop-down selection box holds all the project graphs that have been created by the administrator.

These graphs are configured to display a time-period ranging from the newest / latest measurement to a certain amount of days ago. This way the graphs will always show the latest developments in measurement results.

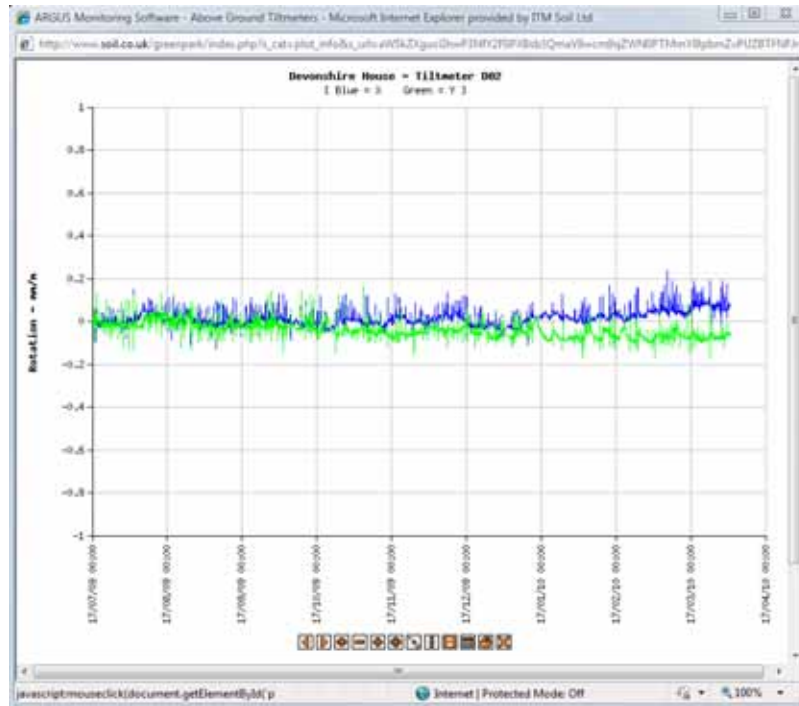

**Please note:** ARGUS re-calculates all measurement points (the server – not your PC) from raw data to engineering-units, hence the creation of a graph could take some time.  
After you selected a graph a new window will be opened in which the graph is displayed:

The graph is an image (no measurement data is transferred to your PC), which you can download to your PC by right-clicking your mouse and selecting 'Save Image As'.

It is possible to zoom-in on the graph by left-clicking your mouse once on a certain area of the graph. Move your mouse to another position on the graph and click again with the left mouse button. The area you have selected will form the basis for a new graph.

The scales are adjusted to fit the area you selected.


## 5.01 Chart Types

### 5.01.1 Single Chart

These are plots with a single X axis (time) and one or two Y scales.





Multiple Sensors with one Y axis

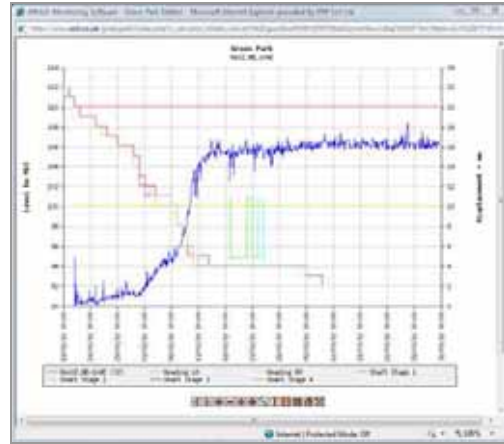

Multiple Sensors with two Y axis

### 5.01.2 Multi Chart



Here two or three plots can be shown in a single view. These are called virtual plots.

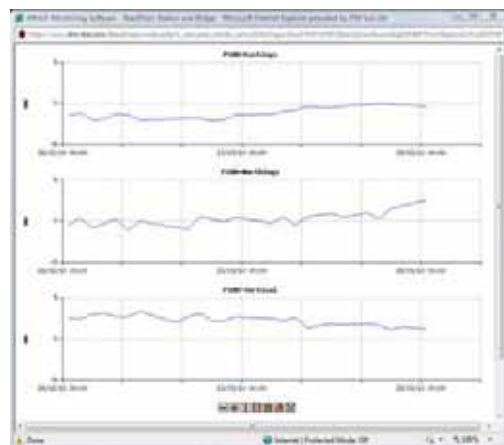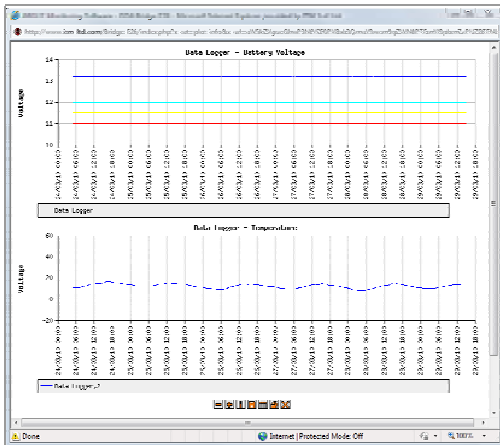

### 5.01.3 Profile Charts

Profile Charts display a profile through a group of sensors.

These may be a physical string of sensors, such as an in-place inclinometer or a row of electrolevels, or a profile through a series of manual survey points.

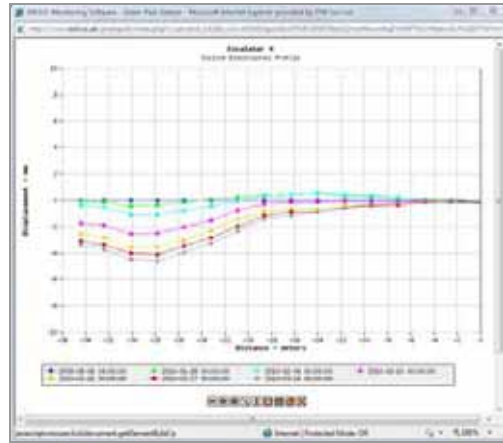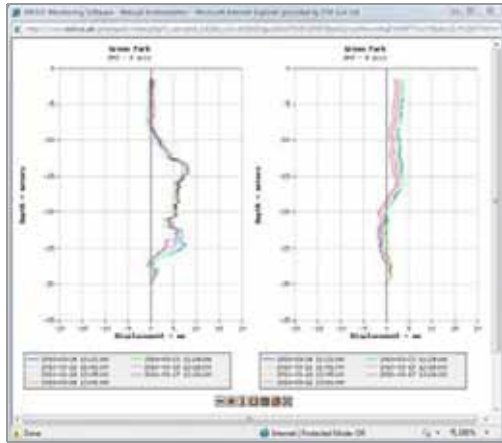

## 5.02 Chart Icons

Below a profile plot is a row of icons, these are used to change various settings on the chart and to save and print the plot.



Browse through the data by skipping a ½ time-period forward or backward.



Change Time Range



Create a smaller or larger image.



Toggle between chosen fixed scale and auto scaling. Auto scaling uses the highest and lowest values plotted for the Y axis.



Temporary Datum. Use the first value plotted as a temporary datum.



Write remarks for the plot and sensors displayed in the graph.



Save the graph data to your computer clicking the disk-symbol. This data is tab separated.

Importing into Excel is possible by selecting the A-column in Excel and select the menu 'Data' option -> Text to Columns.



View the data in tabular format. It can then be copied into Excel.



Print the shown graph.



Close the graph window.



### 5.02.1 Changing Time Range


On all trend charts the default time range is specified in the sensor configuration table, this is a set number of days from the time of the last data.

Clicking on this icon displays two date boxes at the bottom of the chart allowing the user to change the plotted time range.


In the plot to the right the default time range is two months from the last data time.

In the plot the last data is 30/03/2010, so the chart starts at 30/01/2010.

The time period currently displayed is displayed in the Start and End Time boxes.

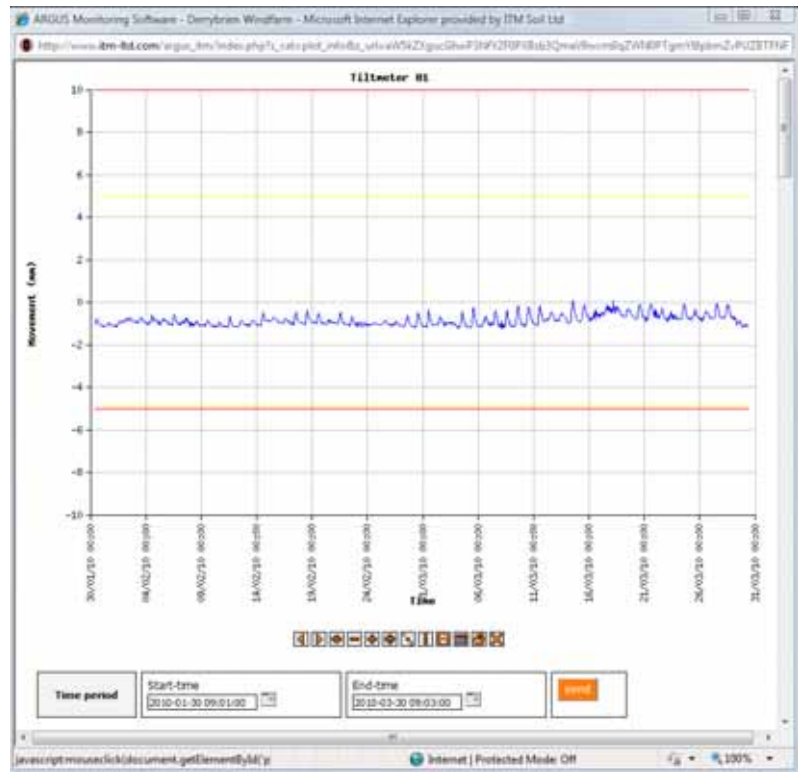


If we change the start time for this plot to 30/01/2005, and press **send**, we will now plot this sensor from 30/01/2005 to 30/03/2010, plot right.

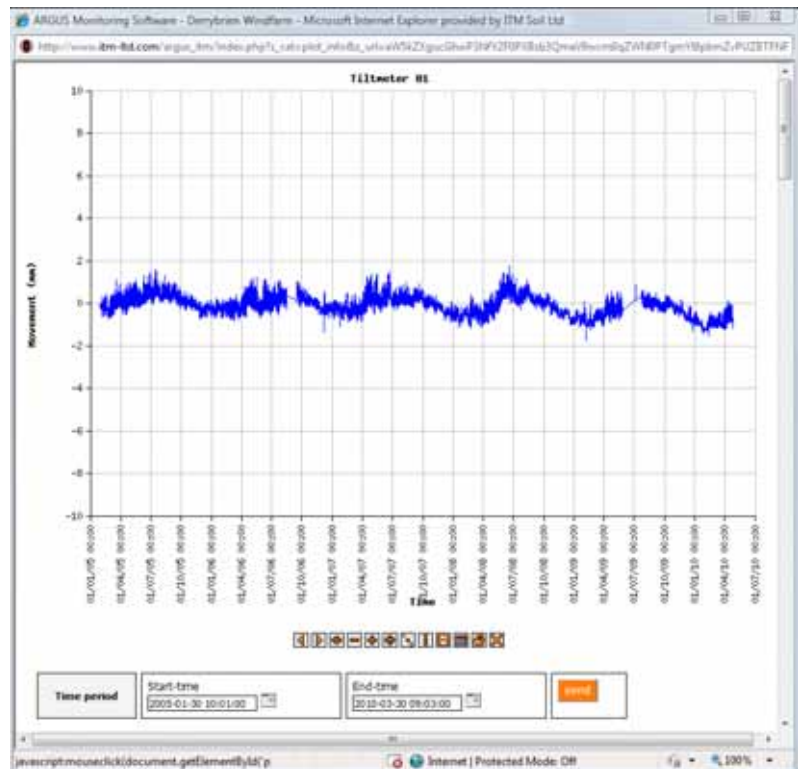




### 5.02.2 Fixed / Auto Scale

This toggles between a fixed scale for the graph and automatic scaling, where the graphs displacement axis range is from the minimum value to the maximum value for data in the time range specified.

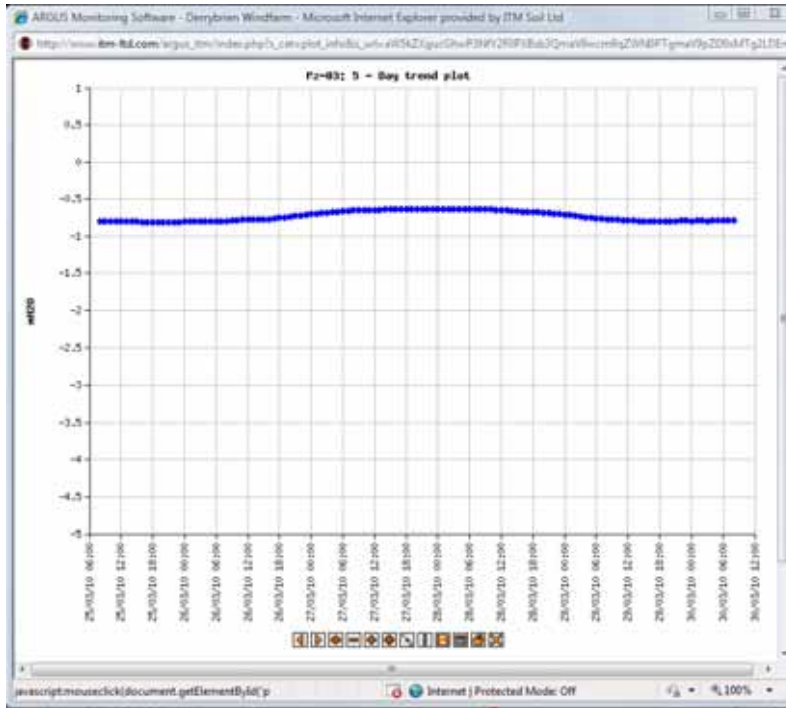


Fixed Scale

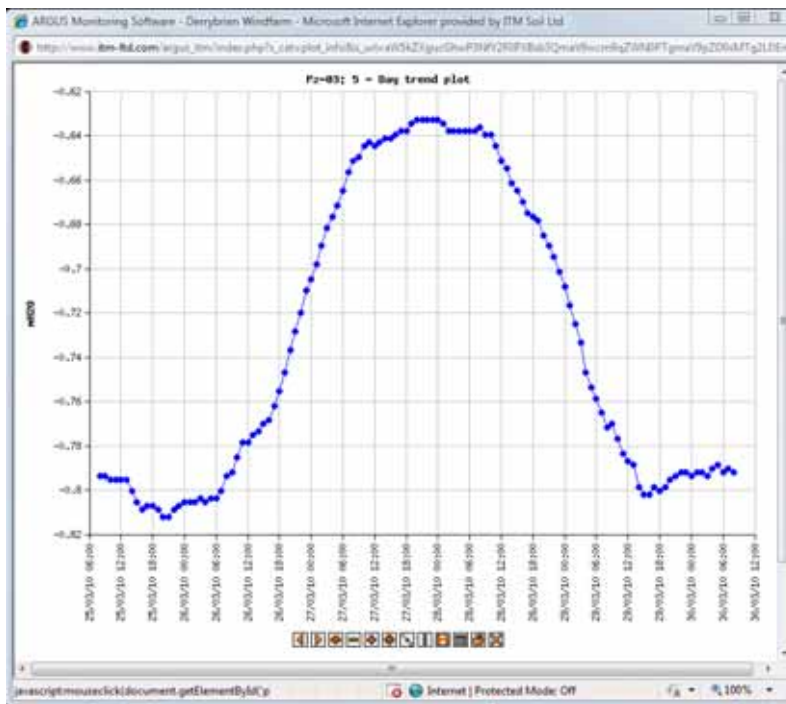


Auto Scale

## 5.02.3 Using Temporary Datum

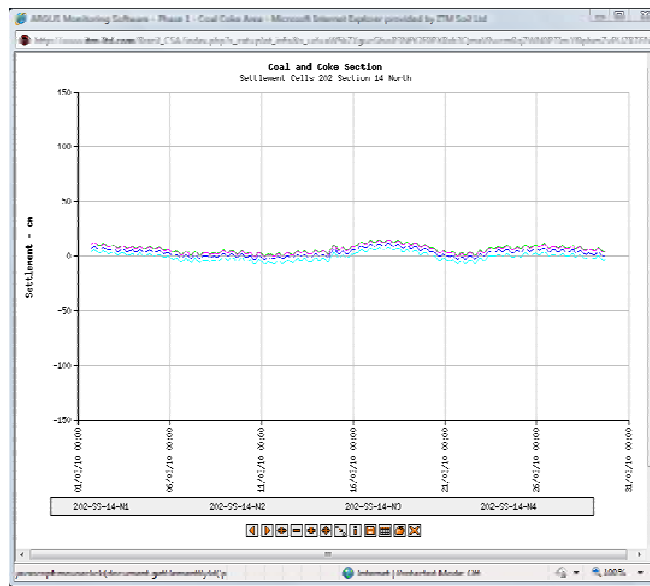

Before Temporary datum

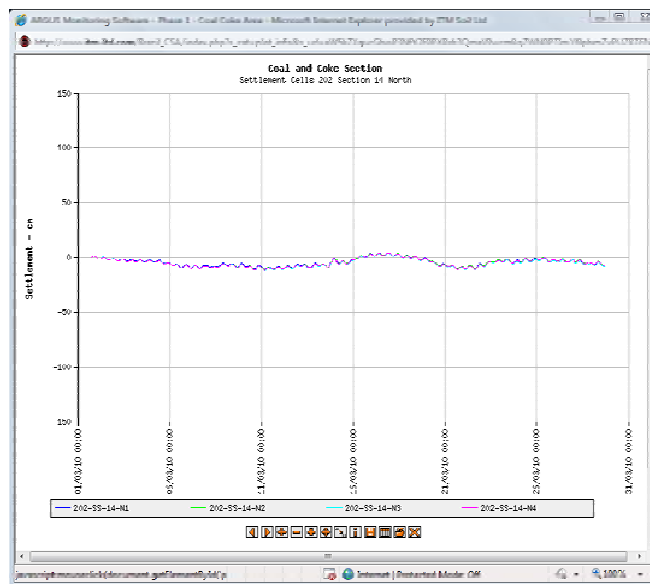


With Temporary Datum

First point on chart used as new datum for each sensor.


### 5.02.4 Remarks

On all plots the user can add remarks, for example to explain movement seen.

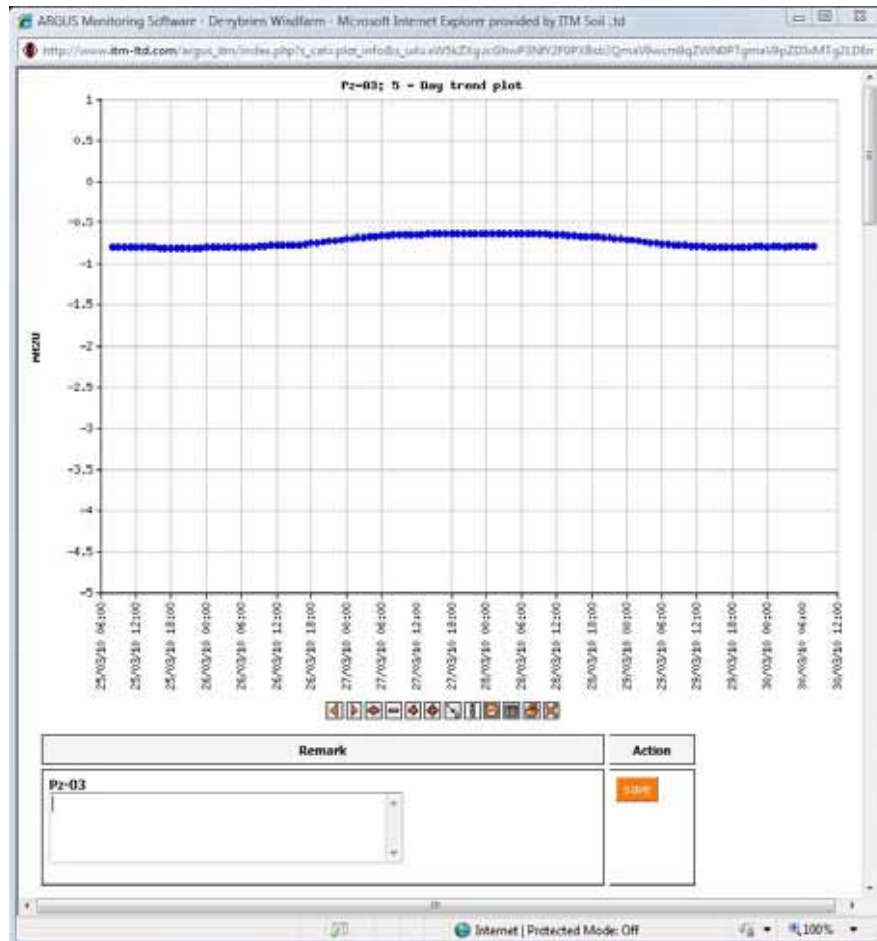

## 5.02.5 Tabular Data

This option allows the user to view the plotted data in a tabular format, this can be copied and then pasted into a spreadsheet for further evaluation

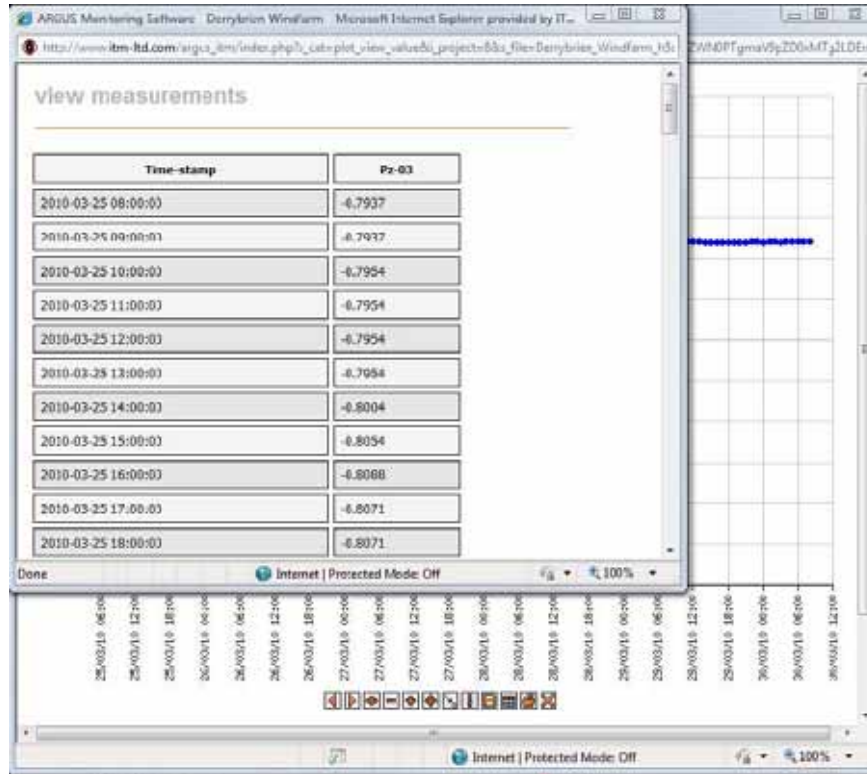

## 5.03 Zooming in

The charts produced allow the user to zoom in on an area to give a better understanding on events in the data. This is done by clicking the left mouse button down and dragging a window around the area to zoom in on.

To view an area on a chart in greater detail the user can zoom in simply by using the mouse to draw a window around the area to view..


Simply position the mouse in the top left corner of the area to enlarge and left click once.

Move the mouse to the bottom right corner of the area to view, blue lines will show the area defined, and then left click again.

The area will then be shown.

Further zooming can be done as many times as required.

To return to the original chart. click on the magnifying glass shown in the top left corner of the plot window.

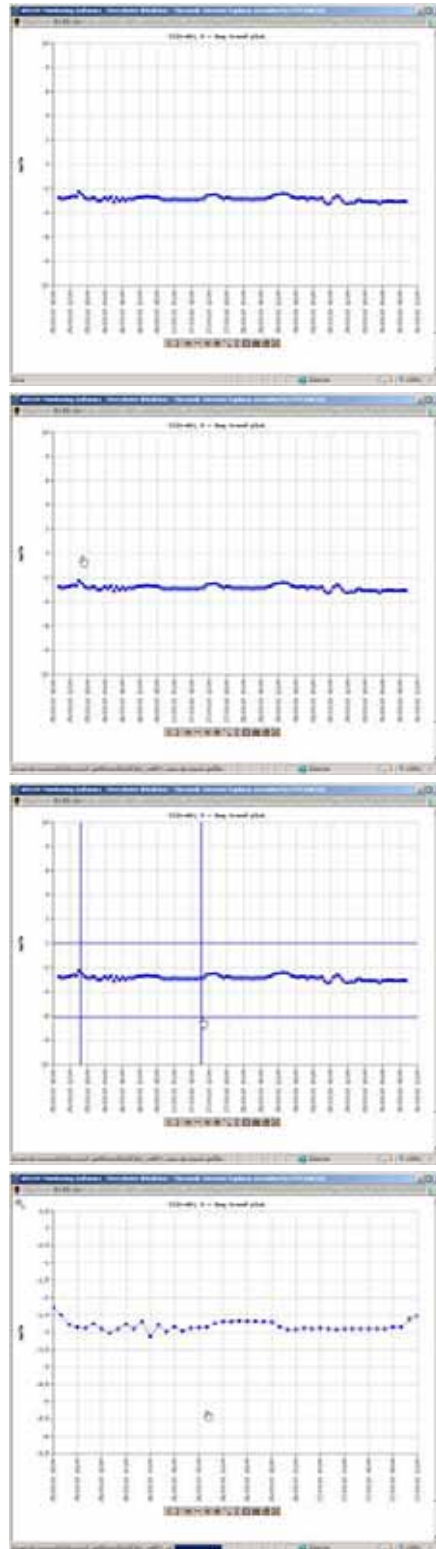


## Section 6 : Project Configuration (Administrator Only)

### 6.01 New Project

This is to set up another project within the same database, as long as the licence allows for an additional project.

#### New project

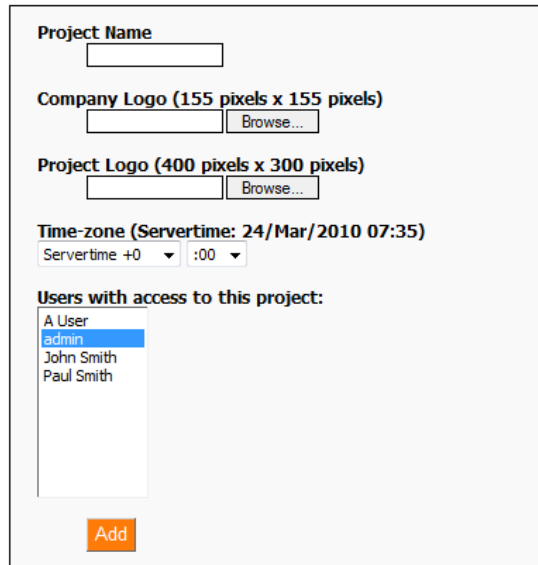

The screenshot shows a web form for creating a new project. It includes the following fields and controls:

- Project Name:** A text input field.
- Company Logo (155 pixels x 155 pixels):** A text input field with a "Browse..." button next to it.
- Project Logo (400 pixels x 300 pixels):** A text input field with a "Browse..." button next to it.
- Time-zone (Svertime: 24/Mar/2010 07:35):** Two dropdown menus, the first showing "Svertime +0" and the second showing ":00".
- Users with access to this project:** A list box containing the following options: "A User", "admin" (highlighted in blue), "John Smith", and "Paul Smith".
- Add:** An orange button at the bottom right of the form.

The user must firstly enter a new project name, this is the only mandatory field, selecting logos is optional, if none are specified the default Argus Logos will be used.

When selecting images to use for logos they must be no larger than the size specified and of the following format, PNG, JPG or GIF. The Company Logo appears above the left menu bar and must be no larger than 155x155 pixels. The project logo is displayed on logging in in the main area of the screen and this should be no larger than 400x300 pixels.


The time-zone for the monitoring relative to the server time can be set.

By default the admin user is automatically added to the new database, the user can then select any previously created users from the list shown.

Once all done press the 'Add' button to create the new project.

### New project

---

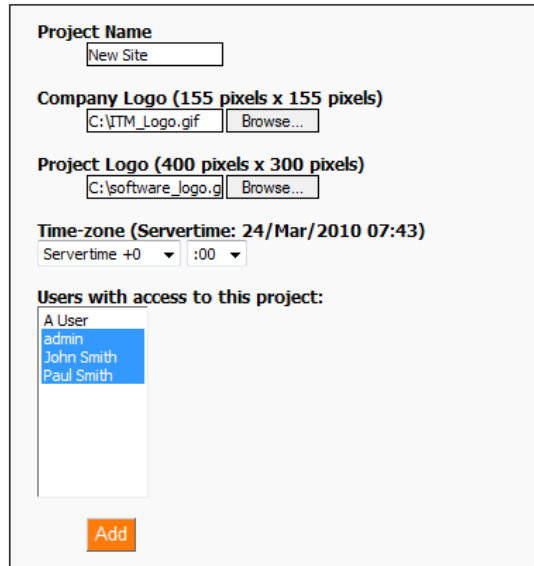

The screenshot shows a web form for creating a new project. It includes the following fields and controls:

- Project Name:** A text input field containing "New Site".
- Company Logo (155 pixels x 155 pixels):** A text input field containing "C:\ITM\_Logo.gif" and a "Browse..." button.
- Project Logo (400 pixels x 300 pixels):** A text input field containing "C:\software\_logo.gif" and a "Browse..." button.
- Time-zone (Svertime: 24/Mar/2010 07:43):** A dropdown menu showing "Svertime +0" and a time dropdown showing ":00".
- Users with access to this project:** A list box containing "A User", "admin", "John Smith", and "Paul Smith".
- Add:** An orange button at the bottom right of the form.

As long as all details correct the new project is created

### New project

---



The screenshot shows a confirmation message box with the text "Project created" and a "continue" link in orange text.

Once you press 'continue', you are now in the new project and can begin configuration.

## 6.02 Edit Project

In this menu option you are able to edit an existing project.

### Edit project

---

**Project Name**  
Demo Site

**Company Logo (155 pixels x 155 pixels)**  
 Browse...

**Project Logo (400 pixels x 300 pixels)**  
 Browse...

**Time-zone (Svertime: 23/Mar/2010 15:21)**  
Svertime +0 :00

**Users with access to this project:**  
A User  
admin  
John Smith  
Paul Smith

**save**

[Delete project](#)

The following settings are possible:

- Change the project name
- Select a (new) project logo. *(Please note that the file type should be PNG, JPG or GIF)*
- Select a (new) start-up project logo. *(Please note that the file type should be PNG, JPG or GIF)*
- Set the time-zone for your project referenced to the time-zone of the hosting server
- Assign or delete users with access to the project. *(Please note that you are unable to delete yourself).*  
Use CTRL-key + left mouse click to select multiple users.
- Delete an entire project including all data and related files.  
**Use with caution, once deleted it is not possible to retrieve the deleted data.**



## 6.03 Project Import/Export

This menu option will allow the administrator to create a downloadable backup of an entire project configuration but without measurement data and without the sensor configuration. This is useful when installing the same project on a 2<sup>nd</sup> or new server or in case ARGUS has to be re-installed on your existing server. With the checkboxes you can choose if you want to import only appointed sections.

### Project Import/Export

---

**Project:**

**Import file:**

☐ Users

☐ Email groups

☐ Plan views

☐ Sensors / plan views

☐ Plots

☐ PDF reports

☐ email groups / users

## Section 7 : Sensor Configuration Menu (Administrator Only)

In the sensor configuration all the sensors in the project are defined. The following configuration options are available:

<b>id</b>	<p>This is a number automatically assigned to a new sensor. If you run multiple projects from one ARGUS server, the numbers will be different in every project (i.e. project 2 could start with sensor-id 44 instead of sensor-id 1).</p> <p>This id-number is important as you can refer to it from sensor formulas and pre-defined graphs by using the following notation: #1#, which would refer to the sensor with id=1.</p>
<b>Name*</b>	This is the name assigned to the sensor. Use a good / long description to describe the sensor.
<b>Name(short)*</b>	This is the short name assigned to the sensor. Use a short and <b>UNIQUE</b> description.
<b>Serial-number</b>	This is the serial-number from the sensor (optional).
<b>Start-time</b>	<p>This field is left blank, unless you replace a sensor with the option 'replace'.</p> <p>See Replacing Sensors.</p>
<b>End-time</b>	<p>This field is left blank, unless you replace a sensor with the option 'replace'.</p> <p>See Replacing Sensors.</p>
<b>Location</b>	<p>This provides the users with the location where the sensor is installed.</p> <p>F.e. West-Wall or Cellar etc.</p>
<b>Coordinates</b>	<p>The XYZ coordinates of the sensor. Write 1 coordinate per line, use &lt;enter&gt; for a new line. Example:</p> <p>X=345332.30 Y=234455.04 Z=4535.44</p>
<b>Calibration factors</b>	<p>This field holds one or multiple calibration factors. Enter your factors by using the following format: A=4.357 and press the button &lt;enter&gt; to go to the next line in order to enter another factor. Always use capital (large) letters (ABC etc.). Each factor should have a unique letter. It is not allowed to use A and AA. Use A1 and A2 instead.</p>
<b>Formula</b>	This field holds the sensor formula. See section Sensor Formula. For a multi-value sensor use a new line for each value.
<b>Datum reading</b>	<p>In case you would like to use a datum reading (i.e. subtract from the measured value a value from the initial measurement), you should enter the timestamp of the datum reading in this field according to ISO format: YYYY-MM-DD HH:MM:SS.</p> <p>To subtract it from your measurement values, write '-datum_reading' at the <u>very end</u> of your sensor formula.</p> <p>Note: When the sensor does not have data, you are unable to select a datum reading.</p>
<b>Value of datum reading</b>	This is a not-editable field, which shows the raw-value of the datum reading
<b>Function</b>	This is an additional calculation to be applied to the results of the sensor formula.
<b>If no measurement exist after the time stamp, use...</b>	This will define how to handle references to this sensor from other calculations, in the situation that at the given timestamp this sensor has no measurement value. ( Last value or Linear Trend (prediction))
<b>If a Measurement exists after the time</b>	This will define how to handle references to this sensor from other calculations, in the situation that at the given timestamp this sensor has no

<b>stamp, use...</b>	measurement value. ( Next value, Average or Last Value )
<b>Unit</b>	This field represents the sensor engineering unit, i.e. mm, bar, etc. For multi-value sensors enter the engineering units comma separated.
<b>Decimals</b>	This field represents the amount of decimals to display in the plan view (max. is 5); if you have a multi-value Sensor you can define different decimals for the positions, in this case you have to comma-separate the decimal settings: i.e.: 2,1,3,3,3,2
<b>Remark</b>	Every sensor can hold a sensor remark, which can be edited by users.
<b>Red Alarm Level - Upper</b>	The 'red' warning level for increasing measurement value. See section Alarm Formula
<b>Amber Alarm Level - Upper</b>	The 'yellow' warning level for increasing measurement value. See section Alarm Formula
<b>Amber Alarm Level - Lower</b>	The 'yellow' warning level for decreasing measurement value. See section Alarm Formula
<b>Red Alarm Level - Lower</b>	The 'red' warning level for increasing measurement value. See section Alarm Formula
<b>Alarm group</b>	The email group that the sensor is assigned too. The alarm email is sent to this group.
<b>Trend plot</b>	The amount of days to display in the trend plot
<b>Line type</b>	The line type for the trend plot
<b>Trend plot date format</b>	The notation format for the time axis. There is some additional information about the format on page 22
<b>Y-scale</b>	The manual set scales for the trend plot. Use the Format: (from value) (to value) for example (-10)(15) For Multivalue Sensors Enter a new Line for every position. Leave everything blank to use auto-scaling
<b>Text direction (X-axis)</b>	Defines the Texdirection of the X-axis labels. 0° will be horizontal and 90° vertical
<b>X-axis tick level</b>	The tick level for the X-axis of the trend plot
<b>Y-axis tick level</b>	The tick level for the Y-axis of the trend plot
<b>Watchdog</b>	Enter an interval in minutes in which you expect to receive new data. If new data is not received within this interval, a high alarm is generated for this sensor. Use this to check incoming data from a datalogger and set the watchdog for one of the sensors connected to this logger (if this sensor does not receive new data – none of the sensors should). The colour of this alarm is grey.
<b>ASCII file</b>	This field is left blank for sensors that require manual input only. For sensors that have data in ASCII files this field will contain the filename and path for the ASCII file on the server. Example: upload/data.txt. For importing files generated with the SignaSoft Auto export tool enter filename as 'export.*'.
<b>Data location in ASCII file</b>	This is the position of the sensor data in the ASCII file. See Section ASCII files for more information.
<b>Import filter</b>	Select the import filter to use on the ASCII file
<b>Date format</b>	This is the date format in the ASCII file: YYYY-MM-DD or MM-DD-YYYY etc. (in capitals) (Only needed for the ARGUS- and geologic-format)
<b>Out of range filter</b>	It is possible to perform an out of range check on imported <b>raw</b> -data. Enter a range in the format: <value>..<value>, for multi-values enter a range for each position. Example for a 4-20mA sensor: 4..20 The selectable options are: 1) Delete: The value will not be imported 2) No Alarm Email: The value will be imported but will not trigger an alarm

	3) Replace: The value will be replaced with the last valid value that was imported
<b>Sensor image</b>	Here you can select an image for the sensor (only as long as any image has been uploaded in the gfx-directory by using the file-manager-Add-in) This Image will be shown when a Sensor is placed in a plan-view and you click on the sensor name to see its alarm-levels.

---

For the fields, data reduction, delete data, dependency sensor, interval (min), retain data (days), max Sensor ID, min Sensor ID, n Sensor ID, mean Sensor ID, stdev Sensor ID, max\_dep Sensor ID, min\_dep Sensor ID, please refer to the Section Data Reduction.

---

## 7.01 Replacing Sensors

During the course of a project it is possible that sensors get damaged and require replacement. By clicking the option 'replace' in the sensor configuration, a new sensor is created with the same sensor-ID as the original sensor.

Enter a start-time for this new sensor and modify the sensor configuration settings as required (calibration factors, formula etc.), click save to confirm. The end-time for the 'old' sensor will automatically be set to the start time of the new sensor.

In ARGUS, the sensor-ID is used for creating all plots and calculations. The old and new sensor is used transparently hence the plots will show 'one line' which could consist of data from different sensors. If you would like the new sensor to start where the old sensor left off, enter an offset in the sensor formula.

The replacing sensors option can also be used to eliminate an offset induced by re-positioning for example a displacement transducer, or taking measurements on settlement plates with extension rods.

## 7.02 Sensor Formula

The field sensor formula contains the formula that will be used in order to calculate the raw data into an engineering unit. This formula may comprise any mathematical function as listed below. The basic syntax is:

value	No calculation is performed, the raw data will be the output of this formula
value*5	The raw data value is multiplied by 5
3+value	The raw data value is added by 3
value/8	The raw data value is divided by 8
value+(#2#)	The raw data value is used and the engineering value from sensor with ID=2 is added

$A \cdot \text{value} + (\#2\#)$  The raw data value is multiplied by calibration factor A (defined in the field calibration factor) and the engineering value from sensor with ID=2 is added

$\text{pow}(\text{value}, 2) / 10$  Represents  $\text{value}^2$  divided by 10

A typical formula for a VW piezometer could be:

$$A \cdot \text{pow}(\text{value}, 2) + B \cdot \text{value} + C - (\#1\# - 1013) \cdot 0.1 - (\#3\# - 21.3) \cdot -0.059984$$

Where calibration factors are:

$$A = -0.00017296$$

$$B = 0.050636$$

$$C = 1441.7$$

#1# is the reference to the barometric sensor with ID=1

#3# is the reference to the temperature sensor with ID=3

The names for the calibration factors should be unique and should consist of different characters; for example a factor called M and another factor called MM is not allowed. A factor called M and another factor called M1 is accepted.

Multi-value sensors have more than one measurement value available for each timestamp. In this case you refer to each value by entering for example #1,3# which would refer to the sensor with ID=1 and its 3<sup>rd</sup> value.

Multi-value sensors may contain more than one sensor formula; in that case each formula is preceded by the index number of the sensor value (NB when entering formulas use a new line, do not write 1: in front of the formula):

1: value      -> output raw data for 1<sup>st</sup> value of the sensor

2: value+5    -> output raw data + 5 for 2<sup>nd</sup> value of the sensor

**Remark:** Take care that the calculation is enclosed by brackets () when referring to negative calibration factors or negative values from other sensors. Otherwise the calculation will result in an error, i.e.: + -; a minus sign directly following a + sign is not allowed.

**Avoiding problems:** Import-Problems are often a result of an error in the formula.

- Take care all brackets are set correctly
- Take care when referencing to a multi-value-sensor to indicate the value to use: #12,3#
- Do not to create circular references. Do not refer a formula to its own output.
- Take care to define the calibration factors accurately.

The formula will be automatically checked for the most frequent mistakes, when you save it.

## 7.03 General functions

In the action-column of each sensor you find several links to make actions:

Edit sensors

Action	id #	Name #	Name (short) #	Serial number	Start-time	End-time
edit / replace / info / delete	2797	Battery	Batt			
edit / replace / info / delete	2798	Temperature	Temp			
edit / replace / info / delete	2799	Electrolevel 1	EL1	5808		
edit / replace / info / delete	2800	Electrolevel 2	EL2	5806		
edit / replace / info	<b>Electrolevel 2, 5806</b> Calibration factors: b0=5000.34316410503 b1=-5406.16362543019 b2=2130.05651107996 b3=-410.6503900000035 b4=41.004612692700 Formula: (b0*pow(value,5)+b4*pow(value,4)+b3*pow(value,3)+b2*pow(value,2)+b1*value+b0)-datum_reading Datum reading: 2009-02-11 11:00:00 Data file: vplaw2000 - Coopers ISB_mRawData.dat Data location: IASCL file: 8 Import filter: Campbell Table Based					
edit / replace / info / delete	2803	Crackmeter 2	VW2	030297		

Page 1

Add Export sensor data Import sensor data Import calibration factors Find and replace... Create new sensor						
---	--	--	--	--	--	--

Find sensor name

Change list

edit	to change the sensor settings
replace	see section 7.02 above
info	By clicking on the info link a new window will open, where you can edit the sensor settings. when moving your mouse over the info link a tooltip will pop up, which shows you the most important information of the sensor.
delete	will delete the current sensor
Add	Here you can add a new sensor, at least a 'Name' and 'Name (short)' have to been entered
Export sensor data	Here you can export your whole sensor-configuration. You will get a text-file with '~'-separated fields.
Import sensor data	Here you can import a sensor-configuration, which have been exported by the previous function.
Find and replace...	You can replace defined content in almost every column
create new sensor	Will open a form (where the input fields are arranged among each other) to create a new sensor
Find sensorname	Searching for sensors, will look for id, serial-number and short-name
Change list	It is possible to hide columns by selecting the checkboxes of the columns in the pop-up-window. This setting is saved for each individual administrator.

### 7.03.1 Calculated Sensors

Normally a sensor will have data in the database and when calculations are being made, the raw data is retrieved from the database and calculated to engineering units. In ARGUS it is possible to configure sensors that do not have data in the database. This would be interesting for example if you would like to create two plots of a Piezometer, one with and one without barometric and temperature correction. In this case you would configure the following two sensors:

Formula for 'real' sensor with ID=10, uncorrected:

$$A * \text{pow}(\text{value}, 2) + B * \text{value} + C$$

Formula for 'calculated' sensor with ID=11, corrected:

$$\#10\# = \#10\# - (\#1\# - 1013) * 0.1 - (\#3\# - 21.3) * -0.059984$$

Note the '#10#=' at the beginning of the formula for sensor 11. The way ARGUS works is that it will recognize that this is a calculated sensor without data in the database. It will select the timestamps (the measurement interval) from the sensor with ID=10 and assign calculated values to the timestamps by using the formula expression following the '=' sign. In this example it will use the calculated output from the sensor with ID=10 and subtract the barometric correction and temperature correction.

Other useful features are adding or subtracting sensor results, averaging sensor results, etc. For example if you would install 4 strain gauges on a pile or on a strut, you would like to know the average calculated load of all sensors. In that case you would create a calculated sensor:  $\#1\# = (\#1\# + \#2\# + \#3\# + \#4\#) / 4$

### 7.03.2 Mathematical expressions

abs	Absolute value	abs( mixed number)
acos	Arc cosine	acos( float arg)
acosh	Inverse hyperbolic cosine	acosh( float arg)
asin	Arc sine	asin( float arg)
asinh	Inverse hyperbolic sine	asinh( float arg)
atan2	arc tangent of two variables	atan2( float y, float x)
atan	Arc tangent	atan( float arg)
atanh	Inverse hyperbolic tangent	atanh( float arg)
cos	Cosine	cos( float arg)
cosh	Hyperbolic cosine	cosh( float arg)
deg2rad	Converts degrees to radian	deg2rad( float arg)
exp	e to the power of ...	exp( float arg)
log10	Base-10 logarithm	log10( float arg)
log	Natural logarithm	log( float arg)
pi	Get value of pi	pi()
pow	Exponential expression	pow( number base, number exp)
rad2deg	Converts radian to degrees	deg2rad( float arg)
sin	Sine	sin( float arg)
sinh	Hyperbolic sine	sinh( float arg)
sqrt	Square root	sqrt(float arg)
tan	Tangent	tan(float arg)
tanh	Hyperbolic tangent	tanh(float arg)

## 7.04 Function

This field is normally left blank, but in case a function has to be applied to the calculated results of this sensor (i.e. after the sensor formula has been applied) you may enter one of the following functions in this field:

**min():** The minimum value replaces all calculated results in the selected time period  
**max():** The maximum value replaces all calculated results in the selected time period  
**mean():** The average value replaces all calculated results in the selected time period

**filter(low,high,action,value):** Filter the results which are smaller than the low value or higher than the high value. The calculated value is replaced by: if action is „v“, the <value> entered; if action =”lv” the last calculated engineering value. Filter(10,50,lv,200) will only show results that lie between the values 10 and 50, values outside this range will be replaced by the last valid calculation or the value 200 if no valid value is calculated.

**diff(value1,value2):** Filters the results that have an absolute difference to the previous measurement greater than value1. Value2 is the standard value to use in case a previous measurement is not available; otherwise the last acceptable value is used.

**stairs(timestamp1,value1,timestamp2,value2,...):** The calculated values in the selected time period are replaced with: From timestamp1 with value1, from timestamp2 with value2, from timestamp3 with value3 etc. Timestamps are entered in the ISO format YYYY-MM-DD HH:MM:SS.

**timefunction(<formula>):** Any formula (like sensor formula) where the words ‘time’ will be replaced by a number representing the amount of seconds that have passed since the first timestamp (measurement). Example: timefunction(sin(time)) will plot a sinus using the measurement interval of the sensor.

**Remark:** For multi-value-sensors you can enter only maximum one function for each position (separated by line breaks).

If you enter just one function for a multi-value-sensor, this will only be used for the first position of the sensor.

## 7.05 Alarm Formula

In the fields **Blue, Amber, Red or Black (Upper and Lower)** is possible to enter the alarm value for the sensor. This can be a fixed value or a formula similar to the sensor formula. This enables the use of sensor alarm levels that are referenced to output from other sensors. For example: 10+#1# would represent an alarm level that has a value of the sensor with ‘ID=1’ and add 10. For multi-value sensors use a new line for each alarm level and precede each level with the index number (similar to formula notation).

The high alarms are alarms for an upward trend; the low alarms are alarms for a downward trend. If you would have a piezometer that measures water level height and you want a warning at +10 meters and an alarm at +12 meters, you enter the value ‘10’ in the high1 (or high min) alarm and the value ‘12’ in the high2 (high max) alarm. If you also need a warning when the water level drops beneath 8 meters and an alarm when it drops below 6 meters, you enter the value ‘8’ in the low1 (low min) alarm and the value ‘6’ in the low2 (low max) alarm field.

### 7.05.1 Rate Of Change Alarm

In the Alarm Formula you can also set a RateOfChange-Alarm. The RateOfChange Alarm, represents a maximum increase or decrease per hour that a value of a sensor may have. To define a RateOfChange-Alarm write the maximum increase/decrease per hour between two ‘@’-signs. For example if you need a warning when a piezometer that measures water height increases more than 2 mtr per hour, enter @2@ at the high1 (high min) alarm field. Decreasing values are entered in the low alarm fields.



## 7.06 ASCII files / position in ASCII

ARGUS supports the import of ASCII files with measurement data. A sensor position is always a fixed position in the ASCII file. Position number one (1) is the first measurement value in the ASCII file (after the date and time fields). For multi-value sensors you may enter comma separated multiple positions in this field. Example: 1,4,7 would assign the 1<sup>st</sup>, 4<sup>th</sup> and 7<sup>th</sup> value in the ASCII file to the sensor.

### 7.06.1 ARGUS Format

This is a general file format with a ';' (semicolon) separator in the following syntax: datum;time.ms;value1;value2,etc.

Example:

```
09/06/2004;09:30:00.0;1019.3;3070.1;11.6;3046.0;12.5;2891.1;12.6;3047.8;11.0;3070.5;12.0;2987.6;12.3;2891.1;12.6
10/06/2004;12:10:00.0;1020.0;3068.8;11.5;3045.5;12.6;2891.1;12.5;3047.7;11.0;3068.5;12.0;;;2891.1;12.5
15/06/2004;08:40:00.0;1021.4;3063.7;11.2;3032.1;12.5;2883.4;12.5;3045.3;11.1;3058.5;11.9;2984.7;12.3;2883.4;12.5
```

Due to the fact that ARGUS expects fixed positions for every sensor in the ASCII files, it is not allowed to 'skip' measurement values. In the case where a specific sensor does not have a measurement value available leave the value blank and continue with the semicolon separator.

---

The value '0' (zero) is a valid measurement result in ARGUS.

---

The date format has to be specified for this ASCII file, examples: DD/MM/YYYY or MM/DD/YYYY or YYYY-MM-DD (always use capitals) The time format may include a timestamp for milliseconds and is based on: HH:MM:SS.sss

The decimal notation should be a '.' (point) and not a ',' (comma) – check with your system administrator.

### 7.06.2 ASCII Export-2-Format

ARGUS is able to create ASCII export files of the data in its database. This can be used to import data into a 3<sup>rd</sup> party database or it can be used to re-import the data in ARGUS. The purpose of this import filter for ARGUS is to store calculated results into the ARGUS database. This is useful when you have a lot of cross-referenced data and you would like to speed up the presentation of the plots. See chapter 14 for additional information.

### 7.06.3 Campbell Format

The ASCII files from array based Campbell loggers (CR10, CR10x, CR510 etc) can be read with either minute intervals or second intervals. The separator is the ',' (comma). The first field will be the logger ID (unused), year, day of the year, time in HHMM, optional field seconds,value1,value2 etc.

A typical example (minute interval) is:

```
1,2003,144,0,1002.2,3087.6,22.297,3089.5,22.297,2291.7,21.54,21.91,13.85
1,2003,144,600,1002.2,3088,21.837,3089.9,22.294,2282.1,21.263,21.66,13.85
1,2003,144,1200,1002.2,3088,21.839,3089.7,21.839,2281.9,21.355,21.81,13.85
1,2003,144,1800,1002.1,3087.9,22.392,3089.7,22.392,2286.1,21.751,22.19,13.85
```

The date format does not have to be specified as it is fixed.

The decimal notation should be a '.' (point) and not a ',' (comma) – check with your system administrator.

#### 7.06.4 Campbell Table based Format

The latest Campbell loggers (CR800, CR1000 etc) are table based rather than array based. The Campbell table-based format is also supported. The separator is the ',' (comma).

A typical example is:

```
"2005-12-12 15:50:36.78",17266,"1140",0,167.0098
"2005-12-12 15:50:36.79",17267,"1140",0,167.0782
"2005-12-12 15:50:36.8",17268,"1140",0,167.0782
"2005-12-12 15:50:36.81",17269,"1140",0,167.0782
"2005-12-12 15:50:36.82",17270,"1140",0,167.0782
```

The datum format does not have to be specified in ARGUS as it is fixed. The decimal notation should be a '.' (point) and not a ',' (comma) – check with your system administrator.

---

**Remark:** Values enclosed in quotes ( " " ) will be ignored.

---

#### 7.06.5 Geodetic Format

The geodetic import format can be used to import ASCII files containing the sensor short name and the 3-coordinates X,Y and Z. The timestamp and format is similar to the ARGUS format with the exception that the first field after the timestamp should be the sensor name (short):

```
07/06/2004;12:10:00.0;sensor01;234567;567854;123456
09/06/2004;09:30:00.0;sensor02;234567;565655;434345
15/06/2004;08:40:00.0;sensor03;123456;456789;123456
```

The difference to the other import formats is that the geodetic import filter will create new sensors in the database automatically based on the sensor name (short). In case the sensor short name exists in the database the data will be added to this sensor, should the sensor not exist the sensor is created and the data is added to the newly created sensor.

The date format has to be specified in the sensor configuration (like for the ARGUS-format, see 7.06.1 ARGUS Format)

#### 7.06.6 CR Based TCA

This format is for data from a robotic total station connected to a Campbell data logger.

A typical example is:

```
"2010-03-29 00:00:00",58697,"RTS1","TH0001",359.9819,89.62425,29.1984
"2010-03-29 00:00:00",58698,"RTS1","TH0002",12.33019,89.71398,29.82821
"2010-03-29 00:00:00",58699,"RTS1","TH0003",22.43625,89.8022,31.60803
"2010-03-29 00:00:00",58700,"RTS1","RTS1_2",200.131,119.4477,36.72968
"2010-03-29 00:00:00",58701,"RTS1","TH0201",357.3365,89.06472,11.69777
"2010-03-29 00:00:00",58702,"RTS1","TH0301",1.613591,88.75884,8.196835
```

Here the **Point name** is matched to a Short Name in the sensor configuration table.

### 7.06.7 CR Based Radio

This format is for data from Soil Instruments wireless sensors (1<sup>st</sup> Generation) with the receiver connected to a Campbell data logger.

A typical example is:

```
"2009-02-08 17:00:00",211394,25494,742
"2009-02-08 17:00:00",211395,41876,-39
"2009-02-08 17:00:00",211396,41880,-87
"2009-02-08 17:00:00",211397,41892,-43
"2009-02-08 17:00:00",211398,41902,80
```

Here the **Radio ID** (TM\_Data column) is matched to a Serial Number in the sensor configuration table.

### 7.06.8 Radio CSV Data

This format is for data from Soil Instruments wireless sensors (1<sup>st</sup> Generation) with the data stored on a radio logger.

A typical example is:

```
02/06/08 , 06:32,24320,236
02/06/08 , 06:32,24572,32
02/06/08 , 06:33,24414,180
02/06/08 , 06:34,24204,980
02/06/08 , 06:36,24494,-371
02/06/08 , 06:39,24352,-603
02/06/08 , 06:40,24358,-79
02/06/08 , 06:40,24236,344
02/06/08 , 06:41,24422,320
```

Here the **radio ID** is matched to a serial number in the sensor configuration table.

### 7.06.9 Manual CSV Data

This format is similar to the above, but in this case the **sensor name** is matched to a Short Name in the sensor configuration table.

A typical example is:

```
01/01/2009,12:00:00,403-GP-3-N1,3.346
01/01/2009,12:00:00,403-GP-4-N1,3.513
01/01/2009,12:00:00,403-GP-5-N1,3.480
01/01/2009,12:00:00,403-GP-6-N1,3.507
01/01/2009,12:00:00,403-GP-7-N1,3.431
01/01/2009,12:00:00,403-GP-8-N1,3.460
01/01/2009,12:00:00,403-GP-9-N1,3.540
```

### 7.06.10 Ref File I-Ris

This is for data from the Soil Instruments I-Ris (Robotic Toatl Station) software or from the Leica program APSWin

Job Name : , DEFAULT\_JOB

08.06.2008 , 16:34:00

Old\_St:,0,0,0

[Cycle 1]

POINT_ID	, HZ	, V	, D	, PPM	, TT	, Date	, Time	Status	, Comment
Ref1	, 0.00036	, 89.71217	, 107.8627	, 0	, 0	, 8.6.2008	, 16:34:0	, 0	,
Ref2	, 0.64987	, 89.53509	, 90.4873	, 0	, 0	, 8.6.2008	, 16:34:0	, 0	,
Ref3	, 175.138	, 91.02274	, 100.2981	, 0	, 0	, 8.6.2008	, 16:34:0	, 0	,
Ref4	, 177.4726	, 90.50339	, 115.5648	, 0	, 0	, 8.6.2008	, 16:34:0	, 0	,
P101A	, 3.607975	, 90.85984	, 43.5545	, 0	, 0	, 8.6.2008	, 16:34:0	, 0	,

## 7.07 Data Reduction (beta status)

It is possible to perform a data reduction on the sensor data. This will enable the use of higher measurement intervals, whereby alarm levels are checked and only the most important data is stored into the database (in order to reduce the amount of data that has to be stored). For each sensor that has data reduction enabled, 7 new sensors will be created which will represent the maximum, minimum, number of measurements in data reduction interval, mean, standard deviation and maximum and minimum value of a 'dependency' sensor. Every day at 00:00 the data reduction will take place.

Enable **data reduction** and make the following selections:

**delete data:** Enable this option to delete data from the database once the data reduction is completed. This should be enabled, as this is normally the purpose of data reduction (i.e. reduce data).

**dependency sensor:** Add a sensor ID in case the sensor itself has a relation with another sensor and you would like to store the values of this sensor at the maximum and minimum value of the data reduction sensor. For example if you monitor wind speed and perform a data reduction, you most likely would like to know the wind direction that was measured at the maximum and minimum wind speed, hence the wind direction would be the dependency sensor.

**interval (min):** This will set the data reduction interval in minutes starting at 00:00:00 hours of the day. If you would select an interval of 10 minutes, the first data reduction will be performed from 00:00:00 to 00:10:00, hence resulting in a timestamp of 00:05:00 for the first 'set' of data reduction

**retain data (days):** Instead of deleting all data from the sensor in the database after the data reduction has taken place, a specified number of days will not be deleted. With this method it is possible to plot this sensor over the specified amount of days with it's 'real' measurement values.

**max Sensor ID:** This is the sensor ID which will hold the maximum value in the data reduction interval

**min Sensor ID:** This is the sensor ID which will hold the minimum value in the data reduction interval

**n Sensor ID:** This is the sensor ID which will hold the number of measurements taken in the data reduction interval

**mean Sensor ID:** This is the sensor ID which will hold the mean value from the data reduction interval

**stdev Sensor ID:** This is the sensor ID which will hold the standard deviation value from the data reduction interval

**max\_dep Sensor ID:** This is the sensor ID which will hold the value of the dependency sensor measured at the maximum in the data reduction interval

**min\_dep Sensor ID:** This is the sensor ID which will hold the value of the dependency sensor measured at the minimum in the data reduction interval

Should you only be interested in, for example, the maximum values then you may delete the other 6 sensors that were created for data reduction purposes.

## 7.08 Editing the Sensor configuration

The sensor configuration can be edited individually per sensor by clicking the 'edit' option. If you would like to delete a sensor from the project, click the option 'delete'. Editing multiple sensors simultaneously is possible by using the find and replace function. Select a field name that includes the text you would like to replace, add multiple sensors that require replacing (or enter the sensor ID's directly as a comma separated text or as a range: 1-10), enter a search and replace text and press the button replace.

## 7.09 Exporting and Importing the Sensor configuration

It is possible to export the complete sensor configuration to a text file, edit it and import it again into the project. Take care not to mix up the fields when importing the file again. If you feel unsure; always edit your sensor configuration in ARGUS itself. In the export file all fields are separated with '~'.

If you would like to add new sensors, leave the first two fields 'Internal Sensor ID' and 'Sensor ID' blank – ARGUS will assign ID's automatically. NB: Sensors will not be deleted when you delete them and import the new configuration.

---

**Remark:** When importing a new sensor configuration, all sensor IDs with incorrect formulas will be shown.

---

---

**Note:** Importing a new sensor configuration or using the search and replace function, will overwrite existing settings. Please take care you always have the original sensor configuration available as a back up!

---

## 7.10 Multi-value Sensors

It is possible in ARGUS to assign multiple measurement values to a single sensor in the sensor configuration. This is useful for example in geodetic measurements where you have 3-coordinates for each timestamp or for inclinometer measurements where you might have up to 100 measurements for a single timestamp.

You may enter a single formula that will apply to all measurement values (in the same format as with a normal sensor), but it is also possible to specify a formula per measurement value:

value : formula for 1<sup>st</sup> measurement value

value/6 : formula for 2<sup>nd</sup> measurement value

value\*3 : formula for 3<sup>rd</sup> measurement value

etc.

Entering individual alarms for each measurement value can be accomplished in the same method as with the formulas. The engineering unit can be entered as a normal sensor; it will apply to all measurement values. Individual engineering units can be assigned by entering the engineering units comma separated. The ASCII position for data import can hold multiple import positions by entering the positions comma separated.

If you would like to refer to measurement values from multi-value sensors you have to use the following format:

#2# or #2,1# Will refer to sensor with ID=2 the 1<sup>st</sup> value

#2,2# Will refer to sensor with ID=2 the 2<sup>nd</sup> value

#7,50# Will refer to sensor with ID=7 the 50<sup>th</sup> value

Once you have configured multi-value sensors, these sensors will be listed in the sensor list (for selecting a sensor to plot or to download) as a single sensor with a separate list-box containing the number of the component you want to select. Select 1 for the first measurement value, 2 for the second measurement value etc.

For VW instruments it might be useful to use the multi-value function to store both frequency and temperature:

$A * \text{pow}(\text{value}, 2) + B * \text{value} + C - (\#1, 2\# - 21.3) * -0.059984$

Conversion from Hz to Kpa + temperature correction value, Temperature is stored as the 2<sup>nd</sup> value for this sensor

---

**Remark:** Once you created a multi-value sensor, you should not try to reduce it to a single value-sensor again. In any plan-view you would still see it as a multi-value-sensor. If a sensor has once several positions and then only one it's a different sensor, so you should also create it as a new sensor.

---

## Section 8 : Edit Plan Views (Administrator Only)

The plan views for the project should be based on JPG or PNG image files. For photos, or very colourful images, the JPG file will most likely be smallest in size. The PNG file format is very well suited for CAD drawings and images with few colours and detail. **Check which file size will be the smallest and use this for your plan view.**

Edit plan view				
Name	Directory	Coordinates	Mirror over the	Action
Planview_01	gfx/test/planview_01.gif			edit / Add sensor / copy / delete
Planview_02	gfx/test/planview_02.gif	W=X=91648.02,91680.02 H=Y=437638.02,437653.02	X-axis	edit / Add sensor / copy / delete

The image size (width x height) of the plan view is not restricted, however if you would like to display the plan view on one screen (without the need for scrolling) you will have to limit the image width at around 800px in order for most users to view the plan view without scrolling.

Enter a name for your plan view and click the button 'browse' to locate the image file on your computer. Click the button 'Add' to send the image file to the ARGUS server. When the image has been received you will be able to add sensors to the plan view.

If you have entered coordinates for your sensors in the sensor configuration, you are also able to assign coordinates to the plan view. This will allow automatic positioning of the sensors on the plan view. The method is the following:

W=[your letter for the coordinate that refers to image width]=[coordinate width left side image],[coordinate width right side image]

H=[your letter for the coordinate that refers to image height]=[coordinate top height image],[coordinate bottom height image]

In the column 'Mirror over the' you got two checkboxes 'X-axis' and Y-axis. With this checkboxes you can flip the coordinates vertical or horizontal.

### 8.01 Positioning sensors and project-plots on the plan view

There are different methods of positioning your sensors on the planview:

Manually by clicking 'Add sensor' and selecting the sensor that you would like to add to the plan view. Click once with your left mouse button on the plan view to position the sensor. The option sensor box or sensor mark allows you to select either a sensor box in which the sensor name and value are displayed on the screen, or a sensor mark which is a small box that will only show the sensor name and value when you point your mouse over the mark.

This is useful when displaying many sensors on a single screen.

Automatically based on the plan view coordinates you entered when adding the plan view image and based on the sensor coordinates in your sensor configuration. The positions of the sensors in the plan view are calculated using the coordinate information you entered. All sensors in the database that have coordinates that fall into the range of the plan view are positioned. You can select either sensor box or sensor mark. After the sensors have been positioned it is possible to modify positions and sensor box/mark type. You can also limit the range of sensor id's which should be considered, for example 12-25.

Add sensor to plan view: Add sensor / Add project plot to plan view

Add sensor: Temperatuursensor 162005 delete

Sensor box position

Position sensors:

15,16,22

☒ Add sensors based on plan view & sensor coordinates: box

☐ Add sensors based on plan view & sensor coordinates: mark

☐ add in tabular format

save



Automatically by choosing 'add in tabular format' and entering the sensor-id's you would like to position in the plan view. This is not based on sensor coordinates. The sensors will be positioned in a table format.

### 8.01.1 Positioning project-plots on the planviews

To position a project-plot on the plan-view, you just have to select a plot from the drop down selectionbox and whether you want to add it as a box in which the name of the plot is displayed or as a mark, which is a small plot-icon that will only show the plot name when you point your mouse over it.

### 8.01.2 Editing sensor and plot positions on the plan view

After you have positioned the sensors and/or plots on the plan view it is possible to change the following settings:

X-coordinate of sensor. This is based on pixels (px)

Y-coordinate of sensor. This is based on pixels (px)


Sensor/Plot appearance, box or mark

Delete a sensor/plot by removing the X and Y coordinate

Add sensor	X-pos	Y-pos	Type
014001_4	325	444	Sensor mark
014001_3	322	396	Sensor box
014001_3	319	346	Sensor box
014001_2	320	299	Sensor box
014002_4	431	440	Sensor box
014002_3	428	392	Sensor box
014002_3	427	342	Sensor box
014002_2	425	298	Sensor box
014001_5	324	489	Sensor box
014002_5			

The pixel based coordinates are based on a system where (0,0) refers to the top left corner of the image. In order to determine the pixel positions on your image you could use a programme like Windows Paint where the coordinates are shown in the bottom right corner of the programme.

It is also possible to remove sensors or plots on the plan view by clicking on the name of the sensor in the plan view.

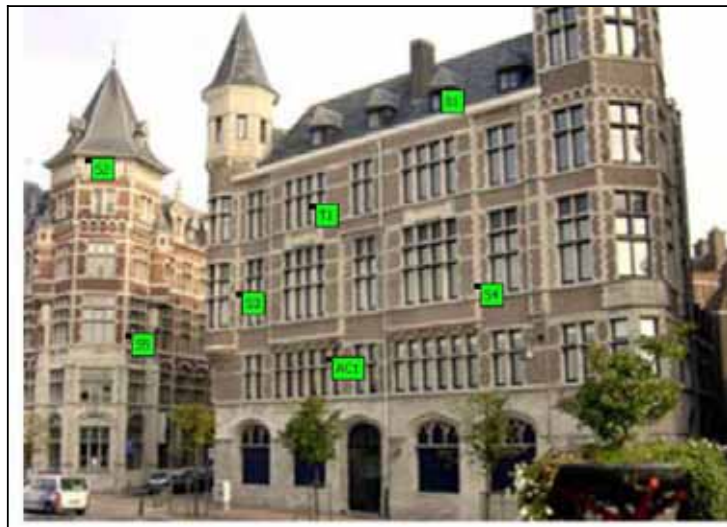

## Section 9 : Edit Project Plot (Administrator Only)

This menu option is used for creating and editing the pre-configured plots for the project. These plots will become available in a drop-down list box.

### Edit project plots

Name ▲ ▼	visible ▲ ▼	Guest access ▲ ▼	Plan View ▲ ▼	Type of plot ▲ ▼	Action
All Crackmeters	Yes	Yes		x - t	<a href="#">edit</a> / <a href="#">Configuration</a> / <a href="#">copy</a> / <a href="#">delete</a>
All Tiltmeters	Yes	Yes		x - t	<a href="#">edit</a> / <a href="#">Configuration</a> / <a href="#">copy</a> / <a href="#">delete</a>
Crackmeter 1	Yes	Yes		x - t	<a href="#">edit</a> / <a href="#">Configuration</a> / <a href="#">copy</a> / <a href="#">delete</a>
Crackmeter 2	Yes	Yes		x - t	<a href="#">edit</a> / <a href="#">Configuration</a> / <a href="#">copy</a> / <a href="#">delete</a>
Data Logger - Battery	Yes	Yes		x - t	<a href="#">edit</a> / <a href="#">Configuration</a> / <a href="#">copy</a> / <a href="#">delete</a>
Data Logger - Temperature	Yes	Yes		x - t	<a href="#">edit</a> / <a href="#">Configuration</a> / <a href="#">copy</a> / <a href="#">delete</a>
Tilt 1	Yes	Yes		x - t	<a href="#">edit</a> / <a href="#">Configuration</a> / <a href="#">copy</a> / <a href="#">delete</a>
Tilt 2	Yes	Yes		x - t	<a href="#">edit</a> / <a href="#">Configuration</a> / <a href="#">copy</a> / <a href="#">delete</a>
Tilt 3	Yes	Yes		x - t	<a href="#">edit</a> / <a href="#">Configuration</a> / <a href="#">copy</a> / <a href="#">delete</a>
<input type="text"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="text"/>	<input checked="" type="radio"/> x - t <input type="radio"/> x - y <input type="radio"/> x - yt <input type="radio"/> horizontal virtual plots <input type="radio"/> vertical virtual plots	<input type="button" value="Add"/>

**Name:** Name for the plot

**Visible:** If you would like to make the plot available for viewing, enable this.

**Guest access:** If you would like to make the plot available for all guests, enable this.

**Plan view:** Assign the plot to a plan view

**Type:** Select plot type (see below)

**Action:** Edit the plot settings, add sensors / formulas, copy a plot or delete a plot from the project.


Enter a name for the plot, assign it to a plan view should this plot belong to sensors on a specific plan view (it will then appear in a drop-down selection box with the plan view) and select a plot type.

Click the button 'Add' to create the plot.

## 9.01 Type of Plot

### 9.01.1 x-t Plot


The x-t plot is the most commonly used plot and will display the timestamps on the x-axis and the measurement results on the y-axis.

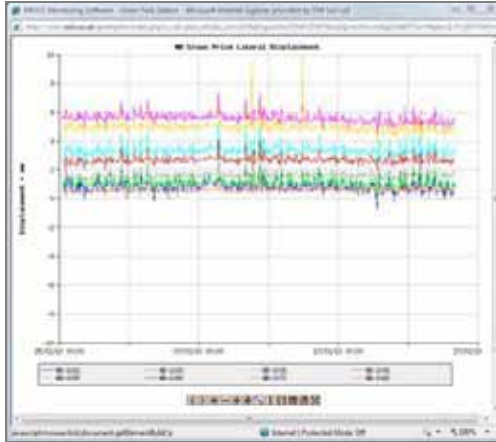

You can add up to 32 sensors in each x-t-plot.

### 9.01.2 x-y Plot

The x-y plot is a plot based on x-y co-ordinates. Each co-ordinate is defined by a formula with the same functionality as sensor formulas. This type of plot can be used for automated inclinometer systems (EL-IPI), EL-Beam systems, Hydrostatic profiler data and similar systems whereby chain-calculations or another form of calculation is required.

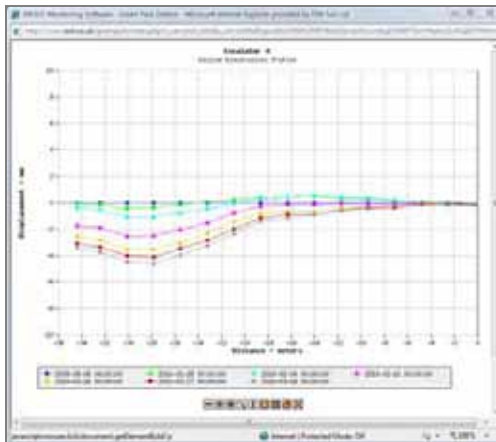



### 9.01.3 x-yt Plots

The X-yt plot is a plot whereby sensors are plotted against the result of another sensor in order to observe the relation between sensors. Therefore one sensor has to be assigned to the X-axis and the other sensors are plotted against these results. As there is no time relation between such results, this type of plot is usually plotted with marks (dots) so no lines are connecting the measurement points. This plot can be used for example to determine the relation of temperature effects on measurement results, or a relation between wind speed and wind direction.

### 9.01.4 Horizontal & Vertical Virtual Plot

These two plot types allow you to combine two or three existing plots in the project into one plot. The horizontal version will allow you to plot two existing plots next to each other, the vertical version will allow you to plot up to 3 existing plots underneath each other. This feature can be used to arrange the A-axis and B-axis for inclinometer measurements in one plot or it can be used to plot the X Y and Z co-ordinates of a geodetic measurement point or accelerometer.

Remark: For the users it will not be possible to download data from the plot type and/or edit the sensor remarks.

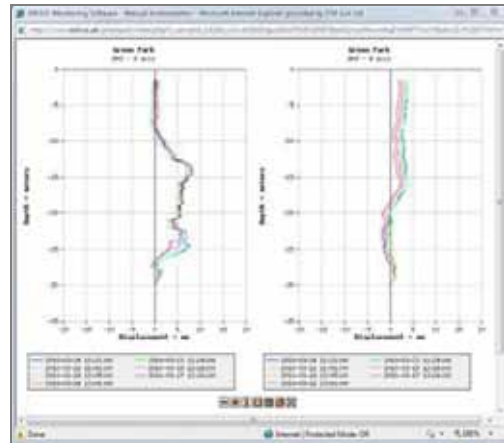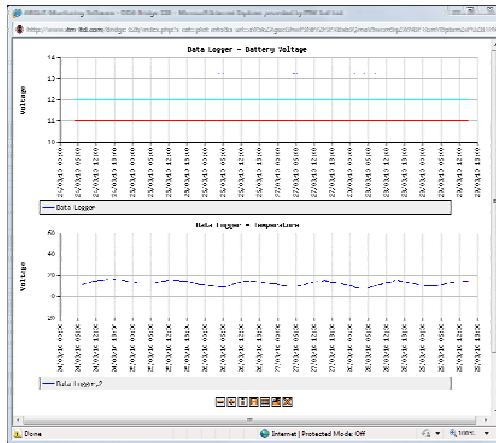

Once you have defined the name and type of plot you can then configure the plot.

## 9.02 Configuration of x-t Plot

To add sensors to the plot and to enter titles click on the configuration option.

### Edit project plots

Name: All Crackmeters

Time period	1 Months				
Reference reading	<input type="text"/>				
Calculate every x. value	1				

Sensor ( <input type="checkbox"/> sort)	Datum reading	Reference reading	Right Y-axis	Alarm line	Marks
Crackmeter 1 <a href="#">delete</a>	2009-02-11 11:00:00	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Lines
Crackmeter 1,2 <a href="#">delete</a>	2009-02-11 11:00:00	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	Lines
Crackmeter 2 <a href="#">delete</a>	2009-02-11 11:00:00	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Lines
Crackmeter 2,2 <a href="#">delete</a>	2009-02-11 11:00:00	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	Lines

[Add sensor](#)

#### Time Period:

This will define the total amount of measurements that will be displayed. The periods starts with the most recent measurement (newest / latest) and you will have to enter a number which will represent the total time period in seconds, minutes, hours, days, weeks or months. For example a setting of 5 and the selection of days will display the measurement data from now to 5 days ago.

#### Reference Reading:

This is an optional setting which will subtract a reference reading from the results.

**Calculate every x value :** Specifies the data point interval, 1 = all data, 2 = every other point, so for example if hourly data specifying 24 means once a day. Know how many measurement results you are about to calculate, as a rough rule of thumb calculating 500 measurement points for a graph is more than sufficient (a 1000px width computer screen cannot display more measurement points without overwriting already existing points). This feature will help you to reduce the amount of calculations required to plot a graph and will speed up the entire process.

#### Add Sensors:

Add sensors and indicate with every sensor if the reference reading has to be used, if the sensor should be plotted on the right y-axis, if the alarm levels of the sensor need to be plotted and finally which line type you would like to use: Lines will draw a line, Marks will only plot a small dot at each measurement point and 'Lines + Marks' will draw a line and a dot on every measurement point.

## 9.03 Configuration of x-t Plot

The x-y plot is a plot based on x-y co-ordinates. Each co-ordinate is defined by a formula with the same functionality as sensor formulas. This type of plot can be used for automated inclinometer systems (EL-IPI), EL-Beam systems, Hydrostatic profiler data and similar systems whereby chain-calculations or another form of calculation is required.

**Edit project plots**

Name: Inclinometer-Plot

Reference reading		apply to
<input type="text"/>	<input type="text"/>	<input type="checkbox"/> X-axis <input type="checkbox"/> Y-axis

Time		Marks
<input type="text"/>	First measurement <input type="text"/>	Lines <input type="text"/>
<input type="text"/>	Most recent measurement <input type="text"/>	Lines <input type="text"/>
<input type="text"/>	T- <input type="text"/> 2	Lines + marks <input type="text"/>
<input type="text"/>	x- <input type="text"/> 4	Lines <input type="text"/>
<input type="text"/>	<input type="text"/>	Lines <input type="text"/>
<input type="text"/>	<input type="text"/>	Lines <input type="text"/>
<input type="text"/>	<input type="text"/>	Lines <input type="text"/>

Formula for x	Formula for y	Amount of X-Y points
x0 = 0	y0 = 0.5*(#4,1#-#4,4#)	#2 <a href="#">Refresh</a>
x1 = [-#4,122#]/1000)*1	y1 = [-#4,121#-0.5*(#4,1#-#4,4#)	<a href="#">Sensor list</a>
y2 = [-1.1#/#4,119#]/1000)*1	y2 = [-#4,118#-0.5*(#4,1#-#4,4#)	

The x-y plot may consist of 7 measurements (lines). You can assign the following settings to an x-y plot:

**Time:** This will define the time of the measurement that will be displayed. Select from the drop-down selection box a dynamic setting

most recent measurement:	Displays the most recent measurement
First measurement:	Displays the first measurement
x-1, x-2, ... , x-n:	x-2 = second from last reading, x-3 = third from last etc.
T-1, T-2, ... , T-n:	T-1 = 1 hour back from last measurement, T-2 = 2 hours back from last measurement. If there is no data for the exact timestamp, n-hours ago; the next or the previous measurement to the associated timestamp will be shown (according to the setting in the sensor-configuration).

**Marks:** Select the line style from the drop-down selection box. Most common with x-y is Lines + Marks.

**Reference Reading:** This is an optional setting which will subtract a reference reading from the results (x and/or y component)

**Formula for x:** In this field you will enter the formulas for the X co-ordinates. The first point in the plot is defined by co-ordinate (X0,Y0). Use the same functionality as in the sensor formula field and refer to the sensors in the project by the sensor ID. In order to simplify the chain calculation method, you may enter

referrals to the co-ordinates x0, x1. Example for co-ordinate x2: #2#+X0, which will obtain the measurement from the sensor with ID=2 at the given timestamp and add the result from the formula defined for co-ordinate X0.

**Formula for y:** Same functionality as Formula for x.

**Crossing X-Y:** The crossing of the X-axis with the Y-axis (standard at 0.00)

Finally you can set your general plot preferences (titles, scaling etc.) and click the button 'save' to save this configuration. The plot is now ready to use. Select it from the drop-down-list to see the result.

## 9.04 Configuration of x-yt Plot

The X-yt plot is a plot whereby sensors are plotted against the result of another sensor in order to observe the relation between sensors. Therefore one sensor has to be assigned to the X-axis and the other sensors are plotted against these results. As there is no time relation between such results, this type of plot is usually plotted with marks (dots) so no lines are connecting the measurement points. This plot can be used for example to determine the relation of temperature effects on measurement results, or a relation between wind speed and wind direction. Another use would be to plot measurement results of sensors against an X-axis, which consists of the TBM tunnel ring number (create a sensor representing the tunnel ring number and manually enter timestamps and ring numbers).

**Time period:** This will define the total amount of measurements that will be displayed. The periods starts with the most recent measurement (newest / latest) and you will have to enter a number which will represent the total time period in seconds, minutes, hours, days, weeks or months. For example a setting of 5 and the selection of days will display the measurement data from now to 5 days ago.

Calculate every

**x-value** Skip readings, example: Every 2 readings would reduce your data for the graph by half.

**X Sensor:** Select a sensor for the X-axis

**Add Sensor:** Select a sensor for the Y-axis

**Sensor (sort)** Checking this box will order the sensors in the plan-view-legend by name.

**Right Y-axis:** Select if the sensor should be displayed on the Y2 axis

**Style:** Select the line style  
(normally for X-yt marks are used)

Name: testplot

Time period

Seconds

Calculate every x. value

x sensor: Debietmeter 001 delete

Sensor ( <input type="checkbox"/> sort)	Right Y-axis	Style
Piezometer 012006 delete	<input type="checkbox"/>	Lines
Piezometer 012005 delete	<input type="checkbox"/>	Lines

Add sensor

Finally you can set your general plot preferences (titles, scaling etc.) and click the button 'save' to save this configuration. The plot is now ready to use. Select it from the drop-down list to see the result.



## 9.05 Plot Titles and Legends

Finally, on all of the above types, you can set your general plot preferences (titles, scaling etc.) and click the button 'save' to save this configuration.

Add sensor

Legend	<input checked="" type="checkbox"/>
Grid	<input checked="" type="checkbox"/>
Date format	d/m/y H:m
Title	Coopers Hill
Sub-title	Crackmeters
Title (X-axis)	Time
Align (X-axis)	middle ▾
Title (left Y-axis, Y1)	mm
Align (left Y-axis,Y1)	middle ▾
Title (right Y-axis, Y2)	Temperature - °C
Align (left Y-axis,Y2)	middle ▾
Manual scale (X-axis)	<input type="text"/> - <input type="text"/>
Manual scale (left Y-axis, Y1)	-5 - 5
Manual scale (right Y-axis, Y2)	-5 - 40
Direction text (X-axis)	90° ▾
Tick-level (X-axis)	1
Tick-level (left Y-axis, Y1)	1
Tick-level (right Y-axis)	1

[save](#) / [back](#)

The plot is now ready to use. Select it from the drop-down-list to see the result.

## Section 10 : Create One Time Plot Create One Time Plot (Administrator and User)

Next to project graphs, which are pre-configured, it is possible to create your own plots. Click the menu option “Create one-time plot” to open a new window. On the top of this window you have the possibility to load the settings of another x-t-plot to have a starting basis, especially if you want to create a plot which should have almost the same settings as an existing plot.

To create a plot you have to select a start-time and an end-time to define the time period for the plot. Optionally you may select a reference reading (or datum reading); this reading will be subtracted from the measurement values. Depending on the amount of data that will be calculated you may select to skip measurements by only calculating every x. value.

x-t Plot	<input type="text"/> <input type="button" value="select"/>	
Time period	Start-time (possible start-time: 2004-01-09 18:00:00) <input type="text"/>	End-time (possible end-time: 2006-09-12 16:00:00) <input type="text"/>
Reference reading	<input type="text"/>	
Calculate every x. value	<input type="text" value="1"/>	

Sensor ( <input type="checkbox"/> sort)	Datum reading	Reference reading	Right Y-axis	Alarm line	Marks
testsensor 1 <input type="button" value="delete"/>	<input type="text"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Lines <input type="text"/>
testsensor2 <input type="button" value="delete"/>	<input type="text"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	Lines + marks <input type="text"/>

Add sensor

Legend	<input checked="" type="checkbox"/>
Grid	<input checked="" type="checkbox"/>
Date format	<input type="text" value="d-m-y"/>
Title	<input type="text" value="Testgraph"/>
Sub-title	<input type="text" value="only for demonstration"/>
Title (X-axis)	<input type="text" value="Time"/>
Align (X-axis)	<input type="text" value="left"/>
Title (left Y-axis, Y1)	<input type="text" value="Pressure"/>
Align (left Y-axis,Y1)	<input type="text" value="bottom"/>
Title (right Y-axis, Y2)	<input type="text" value="Temperature"/>
Align (left Y-axis,Y2)	<input type="text" value="bottom"/>
Manual scale (X-axis)	<input type="text"/> - <input type="text"/>
Manual scale (left Y-axis, Y1)	<input type="text"/> - <input type="text"/>

The next step is to select the sensors. Click “Add Sensor” and select a sensor from the project sensor list to add. The sensor list displays all sensors in the project with information on name, engineering unit, and location. It also shows sensor remarks entered by users (i.e. Cable lengths, malfunctions etc.). In this list you can also use the search function, which will search for sensor-id, serial-number, short-name and name.

Name (short)	Name	Unit	Location	Remark
VW_P1	VW Push-In Piezometer 1	kPa	Project	Geen opmerkingen
VW_P2	VW Push-In Piezometer 2	kPa	Project	
VW_P3	VW Push-In Piezometer 3	kPa	Project	

After selecting a sensor the following table for additional sensor-settings will be shown (for more information read chapter 6.1.1).

The final (optional) step would be to set the standard plot parameters like titles, scales, legend etc. If no scales are set the plot is created with auto-scales. The following settings are available:

Sensor	Datum reading	Reference Reading	Right Y-Axis	Alarmline	Marks
Temperature Sensor 13 <a href="#">delete</a>		<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Lines
Temperature Sensor 14 <a href="#">delete</a>		<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Lines

<b>Calculate every x. value</b>	Skip readings, example: Every 2 readings would reduce your data for the graph by half.
<b>Legend</b>	Create a legend for the plot (sensor line colour + name)
<b>Grid</b>	Display the grid lines
<b>Date Format</b>	<p>Define the datum notation style for the X-axis, for example: d-m-y. Options are:</p> <ul style="list-style-type: none"> <li>a - "am" or "pm"</li> <li>A - "AM" or "PM"</li> <li>d - day of the month, 2 digits with leading zeros; i.e. "01" to "31"</li> <li>D - day of the week, textual, 3 letters; e.g. "Fri"</li> <li>F - month, textual, long; e.g. "January"</li> <li>g - hour, 12-hour format without leading zeros; i.e. "1" to "12"</li> <li>G - hour, 24-hour format without leading zeros; i.e. "0" to "23"</li> <li>h - hour, 12-hour format; i.e. "01" to "12"</li> <li>H - hour, 24-hour format; i.e. "00" to "23"</li> <li>i - minutes; i.e. "00" to "59"</li> <li>j - day of the month without leading zeros; i.e. "1" to "31"</li> <li>l - (lowercase 'L') day of the week, textual, long; e.g. "Friday"</li> <li>m - month; i.e. "01" to "12"</li> <li>M - month, textual, 3 letters; e.g. "Jan"</li> <li>n - month without leading zeros; i.e. "1" to "12"</li> <li>s - seconds; i.e. "00" to "59"</li> <li>S - English ordinal suffix for the day of the month, 2 characters; i.e. "st", "nd", "rd" or "th"</li> <li>W - ISO-8601 week number of year, weeks starting on Monday</li> <li>Y - year, 4 digits; e.g. "1999"</li> <li>y - year, 2 digits; e.g. "99"</li> <li>z - day of the year; i.e. "0" to "365"</li> </ul>
<b>Title</b>	The title for the plot
<b>Sub-title</b>	An optional Sub-title for the plot
<b>Title (X-Axis)</b>	The title for the X-axis
<b>Align (X-Axis)</b>	Align the title for the X-axis
<b>Title (left Y-Axis, Y1)</b>	The title for the Y1 axis
<b>Align (Left Y-axis, Y1)</b>	Align the title for the Y1-axis
<b>Title (right Y-Axis, Y2)</b>	The title for the Y2 axis
<b>Align (Right Y-axis, Y2)</b>	Align the title for the Y2-axis
<b>Manual Skale (X-Axis)</b>	Enter your manual scale here otherwise leave blank for auto-scale
<b>Manual Skale (left Y-Axis, Y1)</b>	Enter your manual scale here otherwise leave blank for auto-scale

<b>Manual Skale (right Y-Axis, Y2)</b>	Enter your manual scale here otherwise leave blank for auto-scale
<b>Direction text (x-axis)</b>	Defines the textdirection of the X-axis labels. 0° will be horizontal and 90° vertical
<b>Tic-level (X-Axis)</b>	Enter the 'skip' interval for labelling the X-axis
<b>Tic-level (left Y-Axis, Y1)</b>	Enter the 'skip' interval for labelling the Y1-axis
<b>Tic-level (right Y-Axis)</b>	Enter the 'skip' interval for labelling the Y2-axis

Click the button 'create' to open a new window in which the plot will be displayed. If you would like to change the layout of your plot, close the window with the plot and modify the plot configuration.

---

**Please note:** Your plot configuration is not saved. When you close the plot configuration window, all settings will be lost.

---

ARGUS uses the ISO format for entering timestamps: YYYY-MM-DD HH:MM:SS

**Additional Note:** You can set a maximum time limit for showing plots in the variable-file on your server.

**Remark:** Know how many measurement results you are about to calculate, as a rough rule of thumb calculating 500 measurement points for a graph is more than sufficient (a 1000px width computer screen cannot display more measurement points without overwriting already existing points). This feature will help you to reduce the amount of calculations required to plot a graph and will speed up the entire process.

## Section 11 : Reports (Administrator Only)

### 11.01 PDF Reports

In ARGUS it is possible to define reports, which will be emailed in PDF format to a user or group of users in a daily, weekly or monthly interval. The report itself consists of measurement data from the project in the form of pre-configured graphs, tables with data, alarms etc. (See also Chapter 10 to edit user and users email)

PDF Reports

Report name	Status	email group	Start-time	Last report	Next report	Repeat	Action
Manuell Report	Enabled	testmails		2006-09-08 13:57		manual	<a href="#">edit</a> / <a href="#">edit definition</a> / <a href="#">send it now</a> / <a href="#">copy</a> / <a href="#">delete</a>
<input type="text"/>	<input type="checkbox"/>	<input type="text" value="testmails"/>	<input type="text"/>			<input type="text" value="Daily"/> <input type="button" value="Add"/>	

**Report Name:** This will define the filename for the PDF report.

**Status:** Enable or disable the report

**E-mail Group:** The email group with user(s) that will receive the PDF report

**Start-time:** The start date and time for the report

**Last report:** The timestamp of the last report that was sent

**Next report:** The due date and hour for the next report

**Repeat:** The report interval, if it's set to manual it will only be send by clicking the link 'send it now'

**Action:** Edit report settings, edit the report layout, delete the report from the project or send a manual report

### 11.02 Report Layout

It is possible to use a company logo in the page header and a different logo in the page footer. You may also include images or photos from the project in the report. All logos and images should be either in JPG or PNG format. Upload your logos and images before starting to work on your layout (NB if you would like to upload a new image, save your layout first).

Some standard settings in the report are: Paper size, font type & size, a report title that will appear on the top of every page, the logo which can be displayed on the left, middle or right side of the page, an optional header line (horizontal), footer logo and line, page numbers in the footer on the left, middle or right, and optional inclusion of the filename on the bottom left corner page.

Remark: 30pixel = ca. 1cm, 75pixel = ca. 1 inch

It is possible to create a cover page for the report that can carry a more detailed title of the project and several subtitles, a cover image, a footnote and optionally a timestamp, which will be the creation timestamp of the report.

The report may comprise up to 5 Chapters with 3 pre-defined graphs from the project (in total each report can have 12 pre-defined graphs). It is possible depending on the layout, amount of text and size of the graphs in each Chapter that a Chapter consists of multiple pages as the report has an automatic page-break feature that will insert a new page when required.

A page may consist of 4 header lines, which will be centred on top of the page. In these header lines you could write for example project specific information like location, project site etc. In addition to the header lines you have the possibility to write up to 4 remarks, which are text fields situated on top of the page and in between pre-defined graphs or images and on the bottom of the page. These text fields can hold entire pages of text with the possibility to use basic HTML text formatting styles, supported are **<b>bold</b>**,

<i>*italic*</i> and <u>underline</u> and any combinations of these 3 formatting styles. In addition you may write [remark] in this text field in order to insert the remark belonging to the plot that is selected.

A report may also comprise up to three types of tables with an optional text field to write some remarks:

**Alarm table:** Displays the alarms from the project over the last x. amount of days

**Measurement values table:** Displays the sensor values from selected sensors (use sensor ID's, example: #2# or #2,2#) over the last x. amount of days, displaying every x. measurement and limiting the table size to x. amount of rows. The table formatting options allows you to enter the amount of sensors for each table. Example: 2,1,3 would display a 2-sensor table, a 1-sensor table and a 3-sensor table.

**Sensor remarks:** Displays the sensor remarks from the selected sensors.

Save your report settings when you are completed and select the 'preview' option to create a PDF report. Depending on the amount of data that has to be calculated, this could take some time.

## Section 12 : Alarms (Administrator and User)

---

Each sensor being monitored can have Blue, Amber, Red and Black alert levels set. The levels can be different for every sensor or the same levels can be used for groups of sensors.

### 12.01 Maximum and Minimum Alert Levels

Typically the alert level applies to both a positive and a negative value. When an alert level of 2mm is used this applies to changes greater than +2mm and less than -2mm. This is because most sensors are displaying changes since a datum.

For some sensors however different max and min levels are required.

For example the battery voltage, an alert is required if the voltage drops below 12volts. If an alert level of 12 was used the battery would be permanently in alert until the voltage dropped below +12volts. In this case Argus needs to use max and min alert levels.

In the example shown the battery voltage will trigger an alert if it goes above 16 volts or drops below 12 volts. In this example only a blue alert level has been set, amber and red can be set but in this case were not required.

The min value must be less than the max level, if both are negative values (e.g. -100 and -120) the min level is the lower (-120).

## 12.02 Alert Window

The menu option “Alarms” will open a new window, in which the project alarms are displayed with the sensor name, time of the alarm, current alarm level, measurement value, status (confirmed or unconfirmed) and alarm remark. Click the sensor name to open the trend plot window for the sensor.

Select alarm status:

in minutes:  in seconds:

Name (short)	Time	Alarm level	Alarmvalue	Status	Remark
Vneg2102_N	2005-12-21 10:37:09	High 2	11	unconfirmed	
Vneg2106_2	2005-12-21 10:16:13	Low 2	-11	unconfirmed	
Vneg1103_A	2005-12-21 10:16:13	High 1	5	unconfirmed	
Vneg6105_N	2005-12-21 10:16:13	High 2	11	unconfirmed	
Vneg2105_A	2005-12-21 09:56:04	High 2	11	unconfirmed	
Vneg1110_N	2005-12-21 09:56:04	High 1	5	unconfirmed	
Vneg2109_1	2005-12-21 09:35:59	Low 1	-5	unconfirmed	
Vneg1110_A	2005-12-21 09:35:59	High 1	5	unconfirmed	
Vneg6105_N	2005-12-21 09:35:59	High 2	11	unconfirmed	
Vneg1110_N	2005-12-21 09:11:00	High 1	5	unconfirmed	
Vneg2109_1	2005-12-21 09:11:00	Low 1	-5	unconfirmed	
Vneg2106_2	2005-12-21 09:11:00	Low 1	-9	unconfirmed	
Vneg6105_N	2005-12-21 09:11:00	High 2	12	unconfirmed	
Vneg2106_2	2005-12-21 08:51:49	Low 2	-10	unconfirmed	
Vneg6105_A	2005-12-21 08:51:49	High 2	12	unconfirmed	
Vneg2106_2	2005-12-21 08:31:57	Low 1	-7	unconfirmed	
Vneg1103_N	2005-12-21 08:31:57	High 1	5	unconfirmed	
Vneg6105_N	2005-12-21 08:31:57	High 2	11	unconfirmed	

Standard the window will show all unconfirmed alarms, which are alarms awaiting confirmation from one of the users. You may select from the drop-down list box to display only the confirmed alarms or both confirmed and unconfirmed alarms.

Similar to the plan view window the alarm window has the possibility to select a refresh interval. With each refresh the newest alarms are displayed in this window (manually update the window by clicking the refresh button). An additional option will allow you to hear a ‘sound’ when a new alarm has been received. Click the speaker to switch this option on or off.

Should an email group be assigned to the sensor, this user(s) will receive an email with the alarm warning. The system is set to send out a maximum of 255 emails per hour. Once this limit is exceeded, one of the project users has to confirm an alarm before any new alarms are issued by email. This is a safety precaution to prevent a flood of emails. **You can change the Alarm limit in the ‘Check Import’-section** (see also Chapter 12 for this purpose)!

If you would like to receive an SMS message, it is possible with most mobile phone providers to receive an email address with your mobile phone (i.e.: 123456@provider.com). This will enable you to receive the alarm message as an SMS.



By clicking the Link 'unconfirmed' the alarm confirmation window will pop up.

<b>Name:</b>	Meetpunt 018002
<b>Name (short):</b>	018002
<b>Time:</b>	2006-02-13 18:20:44
<b>Alarm level:</b>	Low 2
<b>Alarmvalue:</b>	-10
<b>Status:</b>	<input type="radio"/> unconfirmed <input checked="" type="radio"/> confirmed
<b>Remark:</b>	<div>Bad weather caused this alarm...</div>
<div>sa / back</div> <div>Close Window</div>	

In the alarm window you can click the "status" to enter a remark with the alarm and select the "confirmed" option to confirm this alarm. By confirming an alarm your name will be logged with the alarm remark. A new alarm will only be issued when the sensor changes from alarm level.

The menu option "plan view alarms" will open an alarm window that will display only alarms belonging to sensors currently listed in the selected plan view.

You can delete alarms from the database using the archive/backup menu option.

## Section 13 : Data (Administrator and User)

### 13.01 Download Data (Administrator and User)

Click the menu option download data, to open a new window. Enter the sensor id's from which you would like to download data. It is possible to enter a range of id'S: 6-14 or single id's comma separated. To export a specific value from a multi-value sensor enclose the ID with brackets as shown in the example.

The next step is to select the time period by entering a start- and end-time. Please note that the correct format for entering timestamps is according to ISO standard: YYYY-MM-DD HH:MM:SS.

Finally you have to indicate if you would like to receive raw data or data converted to engineering units, based on the sensor configuration in the project. Optionally you may enter another separator (/t stands for tab separated).

Click the button "download" to start the download. After this process has been completed right click your mouse on the "Save As" link and save the zipped file to your PC.

It is possible to import this data into Excel

	A	B	C	D	E	F
1	Time Stamp	ms	VW_P1			
2	01/04/2004 09:15	0	215.1			
3	01/04/2004 09:30	0	214.9			
4	01/04/2004 10:00	0	214.7			
5	01/04/2004 11:00	0	214.9			
6	01/04/2004 12:00	0	215			

**Remark:** The creation of a data file could take some time, which depends on the amount of data in the database, the amount of data that has to be calculated and the amount of users working with the server at the same time.

## 13.02 Input Manual Data (Administrator Only)

Click the menu option "Input manual Data" in order to manually enter measurement values. You have to add a sensor (you can also add different sensors), or to choose a list of sensors you saved someday and you have to enter a timestamp for the measurement(s). Next to the input field you will also see the last imported data for this sensor, so you are able to directly verify your input. Click the button "Add" to add the measurement(s) to the database.

If you want to use the same list of sensors again, you can save this list under a specific name by activating the checkbox 'yes, save this list as' and entering a filename. You will be asked to confirm before the new measurement value(s) is/are accepted. In this section you can also upload a data-file manually by using the Upload data-file function.

### Input manual data

Select sensor	Time	Value	Comment	Add
Add sensor				
save sensor list?	<input type="checkbox"/> yes, save this list as: <input type="text"/>			

Select sensor	Add sensor	upload
Upload data file	<input type="text"/> <input type="button" value="Browse..."/>	

Please note: ARGUS uses the ISO following format for entering timestamps: YYYY-MM-DD HH:MM:SS

### Input manual data

Select sensor	Time	Value	
Barometer 01 <a href="#">delete</a>	2007-07-27 00:00:00 <input type="button" value="calendar"/>	<input type="text" value="1015.45"/> 1036.3 (2007-07-25 06:06:00)	Sensor list <input type="text"/> <input type="button" value="Add"/>
Temp-01 buiten <a href="#">delete</a>	2007-07-27 00:00:00 <input type="button" value="calendar"/>	<input type="text" value="24.5"/> 26.034 (2007-07-25 06:06:00)	
<input type="button" value="Add sensor"/>			
save sensor list?	<input checked="" type="checkbox"/> yes, save this list as: <input type="text" value="weather_sensors"/>		

Select sensor	Temp-01 buiten <a href="#">delete</a>	upload
Upload data file	<input type="text"/> <input type="button" value="Durchsuchen..."/>	

It is also possible to upload data files manually by using the Upload Data File option. You have to assign one sensor which is using this file. After you have uploaded the file it will be processed by ARGUS.

### 13.03 Edit Data (Administrator Only)

Click the menu option “Edit data” in order to edit or delete measurement values.

#### Edit data

Select sensor	Add sensor	select
Start-time	2010-03-23 00:00:00	
End-time	2010-03-23 00:00:00	

You have to add a sensor and enter the time period by entering a start- and end-time in which your measurement values are contained. Click “edit” to edit the value or “delete” to delete the measurement value from the database. You will be asked to confirm before the measurement value is deleted.

#### Edit data

Select sensor	CM 001 delete	select
Start-time	2009-02-07 00:00:00	
End-time	2009-02-07 06:00:00	

Action	Time	Value	Comment
edit / delete	2009-02-07 02:00:00	4697.67600	
edit / delete	2009-02-07 03:00:00	4699.44500	
edit / delete	2009-02-07 04:00:00	4700.27300	
edit / delete	2009-02-07 05:00:00	4700.71600	
edit / delete	2009-02-07 06:00:00	4701.98800	

The values mentioned above...

... delete

... change to value: 0 save

The administrator has the option to delete the measurements currently displayed or to change the measurement values of the displayed readings all at once.

Edit the value, enter any comments for historic reasons.

## 13.04 Archive/Backup (Administrator Only)

In order to create backups (archives) with measurement data, ARGUS has the option to download all raw measurement values from the database. You have to select the period for which you would like to archive the data by entering a start- and end-time and optionally you may select to delete data from this period in the database.

### Archive/Backup

---

When the creation of the archive has been completed, you will be able to download the file. Take care not to create archives that are too large in size, a recommendable size is an archive of  $\leq 2\text{MB}$ . In case the archived measurement data is needed again it is possible to import a 'old' archive into the database.

Individual sensors can be archived by typing a sensor range into the input-field or selecting a Sensor ID by using the 'Add sensor' link. This is especially useful when you have a sensor with a high measurement frequency and you would like to archive only the data from this sensor.

In the same way it is also possible to archive and delete the alarms from the database.

---

**Remark:** The more data that resides in the database, the longer it will take to create plots or downloads. In case you feel the system gets too slow, start creating archives of the data and delete this data from the database. A good practice is to create weekly or monthly reports and weekly or monthly downloads of sensor data (which can be imported into a spreadsheet programme should further analysis be required) and delete the data (permanently) from the database.

---

## Section 14 : Users (Administrator Only)

### 14.01 Edit Users

This menu option allows you to add, edit or delete project users. The users listed here are all users with access to the ARGUS Monitoring Software.

#### Edit users

Name ▲▼	email ▲▼	Privilege ▲▼	PDA ▲▼	Status ▲▼	Action
A User	user@itm-td.com	Guest	No	Offline	deactivate account / edit / adjust menu list / delete
admin	support@itm-td.com	Administrator	No	Online (2010-03-23 17:35)	edit / adjust menu list / delete
John Smith	support@itm-td.com	Guest	No	Offline	deactivate account / edit / adjust menu list / delete
Paul Smith	user@itm-td.com	User	No	Offline	deactivate account / edit / adjust menu list / delete
<input type="text"/>	<input type="text"/>	Guest ▼	<input type="checkbox"/>		<input type="button" value="Add"/>

Click 'edit' to change the settings. The administrator has full access, the user is able to work with the software, set and confirm alarms, enter and edit manual data and download data from the database. A guest is only able to view data and not modify data in any way. PDA users will have limited ARGUS functionality (no images, small graphs) and is intended for working with ARGUS on small mobile devices.

The very first admin of the ARGUS software has also a privilege, he will always have access to all projects

As soon as a new user has been added he will receive an email with his login name and password (when using an extern email-address it is necessary that an email server is available – contact your server administrator)

You also have the possibility to remotely disconnect users and disable there login by clicking 'deactivate account'.

You will see a new link therefore in the action column. With the column 'status' you can see, if and since what time a user is online.

By clicking the 'adjust menu list' link a window will pop-up where you can additionally disable individual menu-options for the different users.

adjust menu list	
Select project	<input checked="" type="checkbox"/>
Select project plot	<input checked="" type="checkbox"/>
Edit project	<input checked="" type="checkbox"/>
Edit sensors	<input checked="" type="checkbox"/>
New project	<input checked="" type="checkbox"/>
Select plan view	<input checked="" type="checkbox"/>

**Remark:** By adjusting a menu list you will always see all possible menu-links with checkboxes, no matter whether you adjusting the list for an administrator or for a user, but you can always only decrease

the menu-points for any user. This means even if at a 'guest-login' checkboxes are checked, which contains menus a guest-user can normally not see, he still will not be able to see them.

**Please note:** If you would like to provide access to a user to multiple projects, but with different privileges, you will need to create a different login name for each project. Once the user changes his password he will have the same password for every project, but with a different username. You can also disable the possibility to change the password for all guests-accounts (for demo projects for example) by a setting in the variable-file on your server (projectfolder/var/variables\_x\_x\_x.php) .

### 14.02 Edit Email Groups

The email group is used to send alarm warnings or PDF reports to one or multiple users. Multiple email addresses can be entered and it is possible to activate and deactivate the email service for each person individually.

#### Edit email groups

Group name	Action	email addresses	Status	Action
Alarm Group	edit / delete	a.user@my-work-email.com	active	deactivate
		support@itm-ltd.com	active	deactivate
<input type="text"/>		<input type="text"/>		Add

Info: write multiple email addresses using enter for a new line.

### 14.03 Change Password

It is possible to change your own password generated by ARGUS Monitoring Software by clicking the menu option "change password" and entering your old password and the new password you would like to use. Take care to use a password, which is not easily 'guessed' by others (i.e. use random numbers and letters).

#### Change password

Old password

New password

Confirm password

save

Once changed the user can continue using Argus, there is no need to logout and back in.

## 14.04 Check Import

This option will verify if the automatic ASCII file import is still running (every minute new ASCII files are imported). When it is in the process of importing data, it will display the minutes that have passed since the import started.

### Check Import

ASCII import status: OK

Last imported time stamp: 2009-11-27 12:00:00

Datasets: 218,655

[Recalculate statistics](#)

Upload Path: /var/www/html/itmltd/argus\_demo/

**Change plan view time stamp:**

Sensors

new time stamp

replace

**Alarm settings**

Alarm limit

0

Interval (in minutes)

0

Limit alarm check in days (0=no limit)

0

save

When you are convinced that the import should have been completed already, you may manually delete the 'lock-file' in order to restart the import of ASCII files. A lock file indicates that during the import an error has occurred. This could be due to the ASCII file format or insufficient memory configuration of the server. Check your ASCII files and contact your server administrator in order to solve the problem.

The check import function will also display the most recent timestamp that has been processed in the project and the amount of datasets in the project (measurement values).

The 'recalculate statistics' option will refresh the statistics of possible start- and end-time and total amount of datasets in the database. This should be applied after deleting data from the database.

'Upload Path' will show you which upload path you've configured. This is the path that you have to extend in the sensor-configuration in the column 'ASCII file'

The link 'View log file' will be shown if the log-function is active (This can only be activated by editing the var-file on the server)

By clicking this link a window will open, where you will see all existing log-files listed.

The option 'Change plan view time-stamps' allows you to reset the time-stamps for the sensor-boxes and sensor-marks on the plan-view (not for the sensor data in the data base). The values displayed on the plan view will only be refreshed if a newer timestamp is received, in case you import data with a wrong timestamp (for example from 30<sup>th</sup> of June 2025), your values on the plan views will not be updated until a value is received after the 30<sup>th</sup> of June 2025. For this purpose you are able to 'reset' the timestamps for specific sensors (by entering the #id#) or for a range of sensors ('20-200' would be id 20 until 200).



It is also possible to modify the standard email alarm settings. The alarm limit is based on the maximum amount of emails that ARGUS should send in an interval of X minutes. Standard this option is set to maximum 255 emails per hour. Once a user has confirmed an alarm the emailing of alarms will continue.

In 'Limit alarm check in days' you are able to set a maximum the amount of days the alarm should be calculated for. For example if at one time data is imported with values from one week and this Limit alarm check is set to '0' for all this values it will be checked if a alarm occurred. But if Limit alarm check is set to 3, ARGUS will first get the most recent timestamp of the current import and go three days back from this time and only calculate the alarms for the values which are within this time-period.

## Appendix A. Add-Ins

Depending on your licence various add-ins can be accessed.

### A.1 Logbook

The logbook addin allows ARGUS users to interactively write project specific comments and information (and optionally include photos) to a log. It is possible for other users to comment on each entry in the logbook.

### Logbook

---

[New entry](#)

2006-09-13 14:04:17	admin	testssd
---------------------	-------	---------

This is an example for a logbook-entry

Last modified: 2006-09-19 17:13:13 by admin




[1 comment](#) / [Add photo](#) / [Edit entry](#) / [Delete entry](#)

2006-09-04 16:37:34	admin	Blätterfunktion funktioniert
---------------------	-------	------------------------------

The Incelex software

Last modified: 2006-09-19 17:14:09 by admin



[1 comment](#) / [Add photo](#) / [Edit entry](#) / [Delete entry](#)



**Remark:** It is also possible to include the logbook entries in an automated PDF report.

## A.2 Filemanager

The filemanager allows ARGUS users to share documents and files on the ARGUS server. The options include the creation of new directories (folders), adding new documents (files) and downloading documents (it is possible to select multiple documents and download them as a .zip file).

Users with administrator and user privileges are able to restrict guests from accessing certain directories.

Users with guest privileges are only able to download documents.

Filemanager				
Filename ▲▼	Size ▲▼	Type ▲▼	Date ▲▼	Action
./first_folder (7 File(s) / 11.1 MB)				Rename directory / Block access for guests
./ftp (2 File(s) / 376.6 KB)				Rename directory / Block access for guests
./testfolder (2 File(s) / 45.1 KB)				Rename directory / Allow access for guests
ostk913.jpg	48.5 KB	jpg	2006-20-09 14:22:29	
testmanuel 2006-09-04.pdf	58.2 KB	pdf	2006-20-09 14:43:20	
2 File(s)	106.6 KB			<a href="#">download</a>
<a href="#">New file</a> / <a href="#">New directory</a>				

You will also have to use the filemanager if you want to assign photos to any sensors. Herefore just upload any photos into the directory 'gfx'. After this you will be able to assign them to any sensor in the sensor-configuration.

### A.3 Inclinometer Data

This Addin will allow users to process data from inclinometer measurements. The Digitilt and Soil Instruments inclinometer system are supported as standard, please contact us if you would like to import inclinometer data from a different system.

In order to import ASCII files from the DigiTilt inclinometer system; the ASCII files have to be created first. Start the programme DMM for windows:

Select the inclinometer installation and the survey you would like to import into ARGUS. Right-click the mouse and select Export as Tab Delimited ASCII. This ASCII file is now ready for import into ARGUS. Please note that the time of the survey has to be entered in ARGUS as the survey time is not written in the ASCII file.

In order to import this ASCII file in ARGUS you first have to create an inclinometer installation. Add a new sensor and specify in the sensor long name the word "inclinometer". ARGUS will recognise this sensor as an inclinometer installation and it will be listed in the inclinometer Addin as an inclinometer installation. If you would like to use another word instead of 'inclinometer', please contact your administrator.

Inclinometer Data	
Add new survey	
Installation	<input type="text" value="inclinometer"/>
System Type	<input type="text" value="DigiTilt"/>
Survey Time	<input type="text"/> <input type="button" value="..."/>
Survey	<input type="text"/> <input type="button" value="Browse..."/>
Add new survey	<input type="button" value="senden"/>

**Installation:** Select the installation for the survey

**System Type:** Inclinometer System used

**Survey Time:** Time of the survey


**Survey:** The ASCII file on your PC

**Send:** Send survey to ARGUS

Once the survey has been received, the checksums will be determined and displayed. Once you confirm with OK the survey will be added to the inclinometer installation.

### A.3.1 Inclinometer Plots

You are able to add the inclinometer plots manually, or you can add a plot automatically with the following tool:

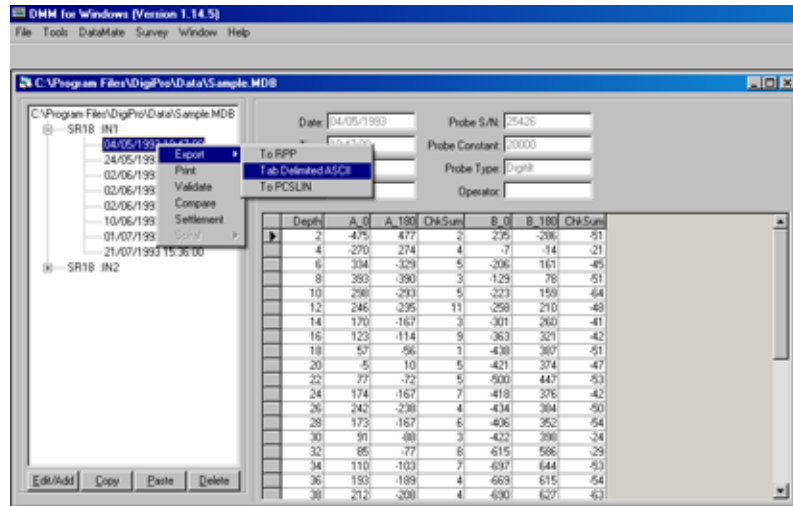

**Inclinometer:-** The inclinometer installation for which the installation plot has to be created

**Plot Type:** The plot type which has to be created

**Method:** Plot from bottom or plot from top

**Depths:** The total amount of depths in the survey (measuring points).

**Constant:** The instrument constant (25000 for the metric DigiTilt sensor – 20000 for English)

**Sensor length:** The length of the sensor (to calculate the displacement)

**Plot Name:** The name for the new plot

#### Inclinometer Data

Add new survey	
Installation	<input type="text" value="inclinometer"/>
System Type	<input type="text" value="DigiTilt"/>
Survey Time	<input type="text" value=""/> <input type="button" value="Browse..."/>
Survey	<input type="text" value=""/> <input type="button" value="Browse..."/>
Add new survey	<input type="button" value="senden"/>

Add new project plot	
Inclinometer Sensor	<input type="text" value="inclinometer"/>
Select Plot type	<input type="text" value="A-axis, cumulative"/>
Method	<input type="text" value="Plot from top"/>
Depths	<input type="text" value=""/>
Constant	<input type="text" value=""/>
Sensor length	<input type="text" value=""/>
Plot name	<input type="text" value=""/>
Add plot	<input type="button" value="senden"/>

You are able to edit and modify this plot using the normal plot edit menu. Once the first plot type is created it is relatively straightforward to copy the plot and create other version like incremental displacement etc.

### A.3.2 Method of data import in ARGUS

Data from inclinometers is imported in ARGUS as data from a multi-value sensor in the following format:

1<sup>st</sup> value: Deepest depth

2<sup>nd</sup> value: A-axis value

3<sup>rd</sup> value: B-axis value

4<sup>th</sup> value: Next depth

5<sup>th</sup> value: A-axis value

6<sup>th</sup> value: B-axis value

7<sup>th</sup> value: Next depth


etc.

The A and B axis values are calculated during survey import based on:

$A0 - (A180) / 2$  &

$B0 - (B180) / 2$  The depths are retrieved from the survey file.

## itmsoil Digital Inclinometer (C17) Setup in ARGUS

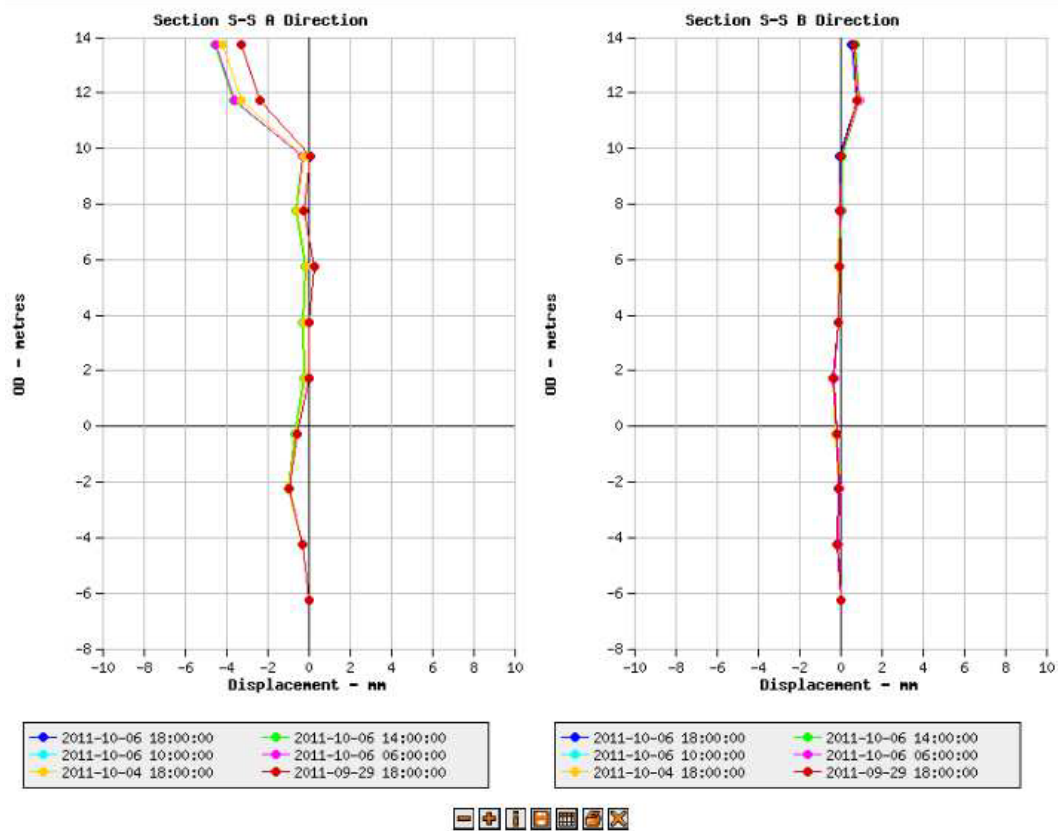

## **INDEX**

- 1. Introduction**
- 2. Sensor Setup**
- 3. Profile Graph Setup**


### **1. Introduction**

*This guide details the operations needed to **Setup Digital Inclinometer Boreholes in ARGUS**. This is achieved by setting up individual sensors for the A and B axis for each recorded depth. Then using the **RPP2CSV** software (**See Guide “Uploading Inclinometer Data to ARGUS”**) RPP files are transformed to CSV data files to be uploaded. This guide presumes that the user is familiar in the use and configuring of ARGUS. It is also recommended that the ARGUS user manual is also used in conjunction with this guide.*



## 2. Sensor Setup

In ARGUS go to the edit sensors screen:

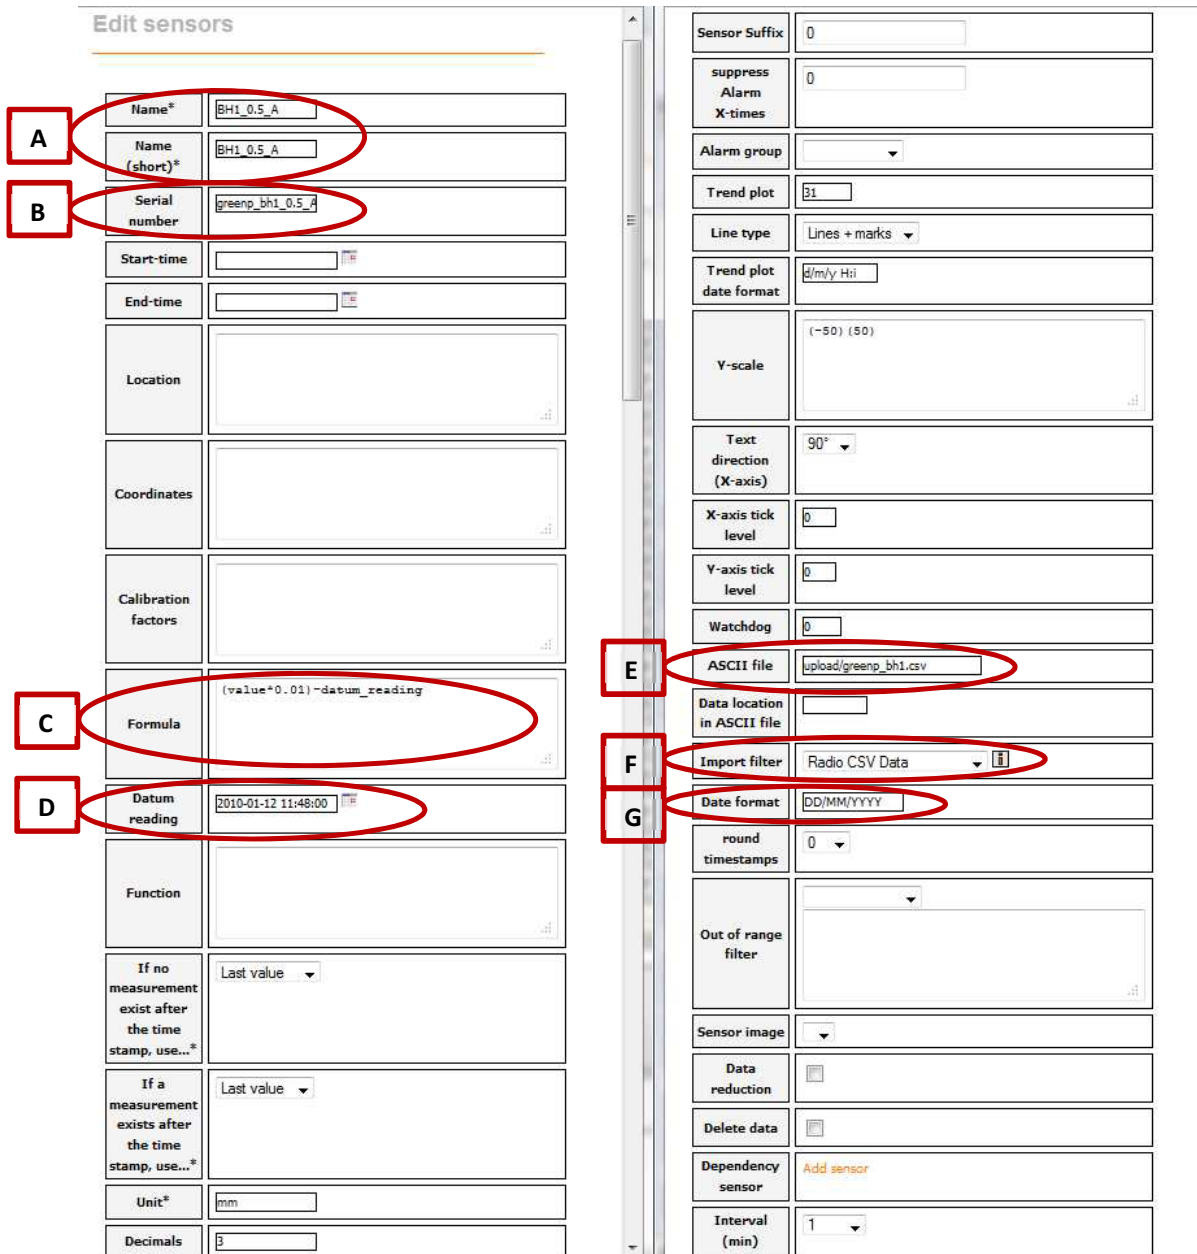

The screenshot shows the 'Edit sensors' interface. On the left, a table lists sensor details with the following fields highlighted:

- A**: Name\* (BH1\_0.5\_A)
- B**: Name (short)\* (BH1\_0.5\_A)
- C**: Serial number (greenp\_bh1\_0.5\_A)
- D**: Formula (value\*0.01)-datum\_reading
- E**: Datum reading (2010-01-12 11:48:00)

On the right, a sidebar contains additional configuration options with the following fields highlighted:

- F**: ASCII file (upload/greenp\_bh1.csv)
- G**: Import filter (Radio CSV Data)
- H**: Date format (DD/MM/YYYY)

**A.** The “Name\*” and “Name (short)\*” are solely used for reference within the setup.

**B.** “Serial Number” is the important identifier used to match the correct row from the .CSV data file. This is in the format “Project\_HoleNumber\_Depth\_Axis”. The information will need to be obtained from the original RPP file or the created .CSV file.



### 3. Profile Graph Setup

Go to the “Edit project plots” screen. Add an “x-y plot”. This will need to be done for both the A and B axis. Select “**configuration**”

#### Edit project plots

Name: Inclinator 1

Reference reading		apply to
<input type="text"/>	<input type="text"/>	<input type="checkbox"/> X-axis <input type="checkbox"/> Y-axis
Time		Marks
<input type="text"/>	Most recent measurement <input type="text"/>	Lines + marks <input type="text"/>
<input type="text"/>	T- <input type="text"/> 24	Lines + marks <input type="text"/>
<input type="text"/>	T- <input type="text"/> 48	Lines + marks <input type="text"/>
<input type="text"/>	T- <input type="text"/> 72	Lines + marks <input type="text"/>
<input type="text"/>	T- <input type="text"/> 240	Lines + marks <input type="text"/>
<input type="text"/>	T- <input type="text"/> 480	Lines + marks <input type="text"/>
<input type="text"/>	First measurement <input type="text"/>	Lines + marks <input type="text"/>


Formula for x	Formula for y	Amount of X-Y points
x0= <input type="text"/>	y0= <input type="text"/>	5 <input type="button" value="Refresh"/>
x1= <input type="text"/>	y1= <input type="text"/>	<input type="button" value="Sensor list"/>
x2= <input type="text"/>	y2= <input type="text"/>	
x3= <input type="text"/>	y3= <input type="text"/>	
x4= <input type="text"/>	y4= <input type="text"/>	
x5= <input type="text"/>	y5= <input type="text"/>	

Legend	<input checked="" type="checkbox"/>
Grid	<input checked="" type="checkbox"/>
Title	itmsoil Demo
Sub-title	Inclinator 1
Title (X-axis)	
Align (X-axis)	middle
Title (left Y-axis, Y1)	
Align (left Y-axis, Y1)	middle
Manual scale (X-axis)	-15 - 15
Manual scale (left Y-axis, Y1)	-13 - 0
Direction text (X-axis)	0°
Tick-level (X-axis)	1
Tick-level (left Y-axis, Y1)	1
Crossing of Y-X axis	0.00


/ [back](#)

- H. The measurement intervals will need to be set. This will also dictate how many previous measurements will be seen on the graph.
- I. The “Amount of X-Y points” should be the total number of depths + 1 e.g for a 4.0m borehole using a half metre probe this will require 9 X-Y points.
- J. For the “Formula for x” the x0 should be set to 0 as this will be a graphing anchoring point. x1 will be the lowest sensor in the borehole. This should be enter in the format #SensorID#. The following points will be the next depth up plus the previous x e.g.  $x_2 = \#11\# + x_1$ . This will need to be repeated to the top depth.
- K. The “Formula for y” specifies the depth of the corresponding x point. In the example the deepest point is y0, which is the graph anchor point.

Having made the x-y plots for the A and B axis of a borehole if desired both axis can then be displayed on a “**Horizontal Virtual Plot**”. These can be created on the “**Edit Project Plots**” screen:

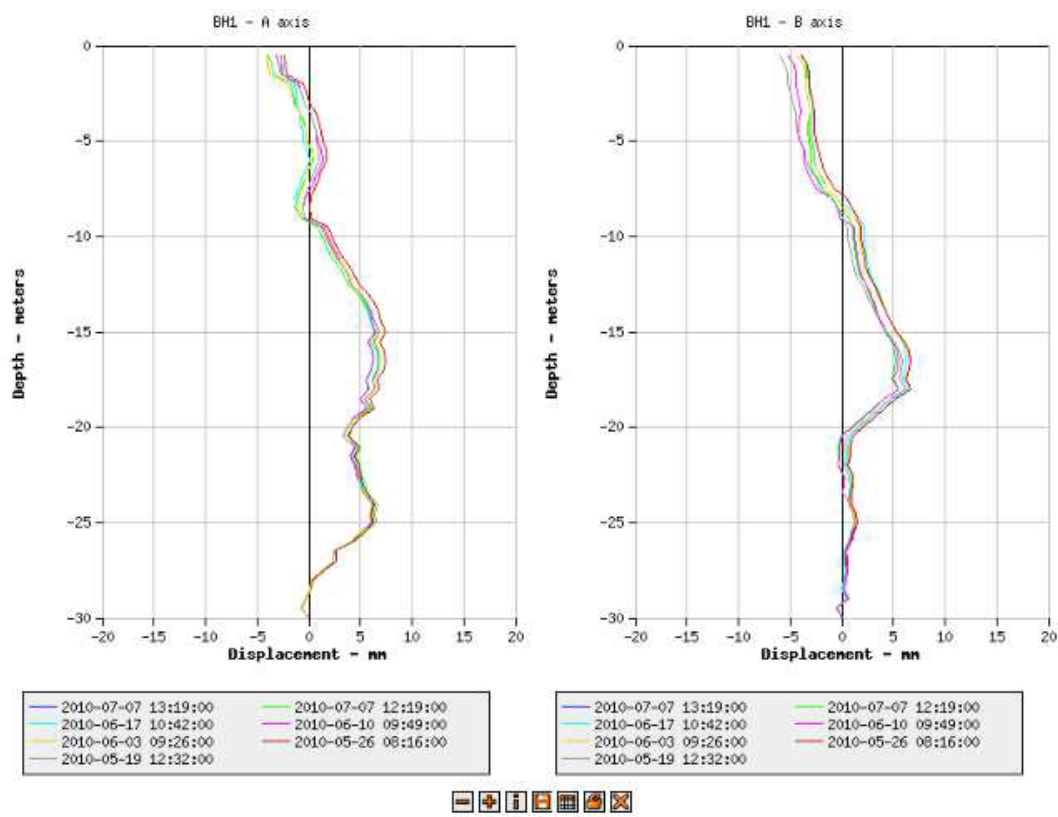

## Inclinometer Data Upload to ARGUS

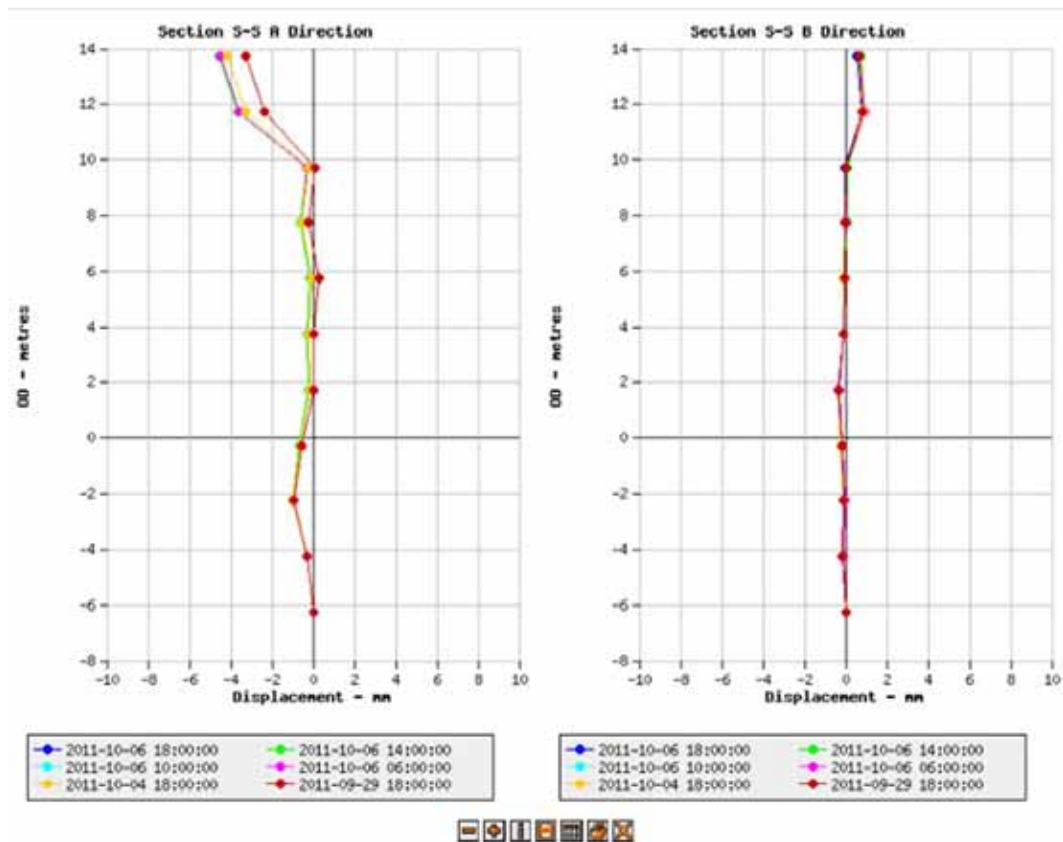

## **INDEX**

### **1. Introduction**

### **2. Install RPP2CSV Software**

### **3. Creating a Station**

#### *3.1 Identifying the CSV File Type*

#### *3.2 Modifying the CSV Files*

### **4. Uploading CSV Files**


## **1. Introduction**

*This guide details the operations needed to **upload itmsoil Inclinator Data to ARGUS**. This is done by using a freely supplied piece of software from itmsoil, RPP2CSV, to convert the RPP file format from itmsoil Instruments Inclinator to the CSV format that is recognised by ARGUS. This guide does not detail the setup for Inclinator as sensors in ARGUS.*

## 2. *Install RPP2CSV Software*

Select the RPP2CSV setup application. Continue through the setup wizard to install the program to your PC. During the wizard you will be given an option to set the default location that the RPP files from the inclinometer can be placed and where the resulting transformed CSV files will be sent.

**Note:** *The directories can be changed later when the main program is run.*

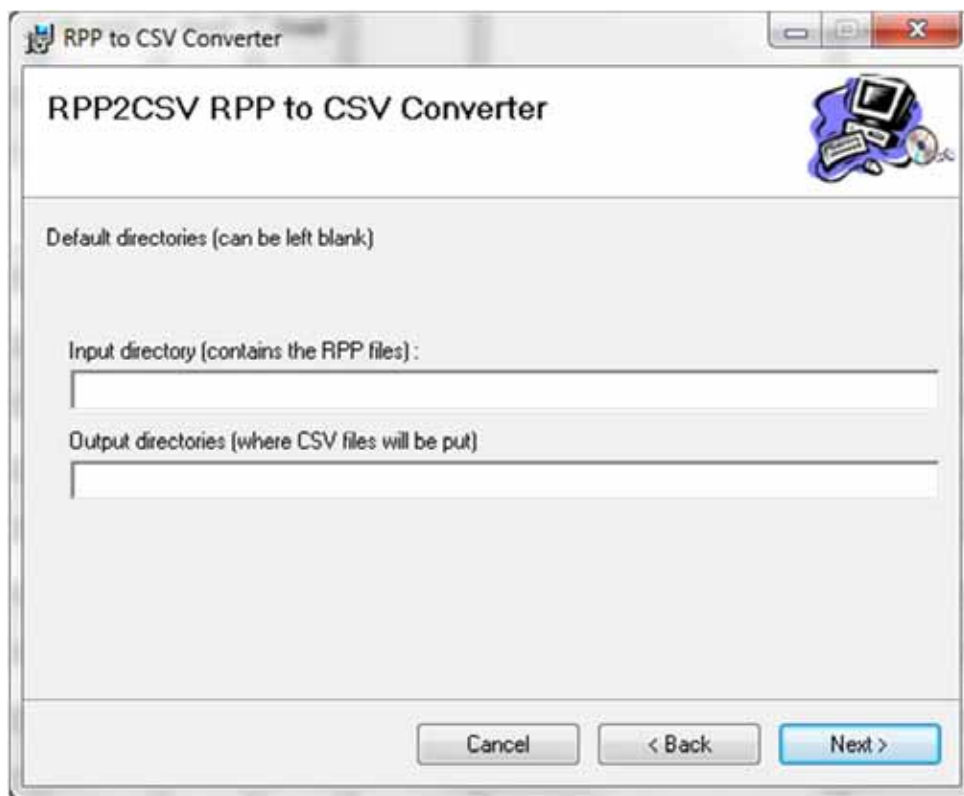


***During setup the default locations are specified for the input and output directories for the conversions***



### 3. Converting Files

#### 3.1 Converting a single RPP file to CSV

The software will be installed to “C:\Program Files\ITM Ltd\RPP to CSV Converter\”  
 (“Program Files (x86)” for 64bit )

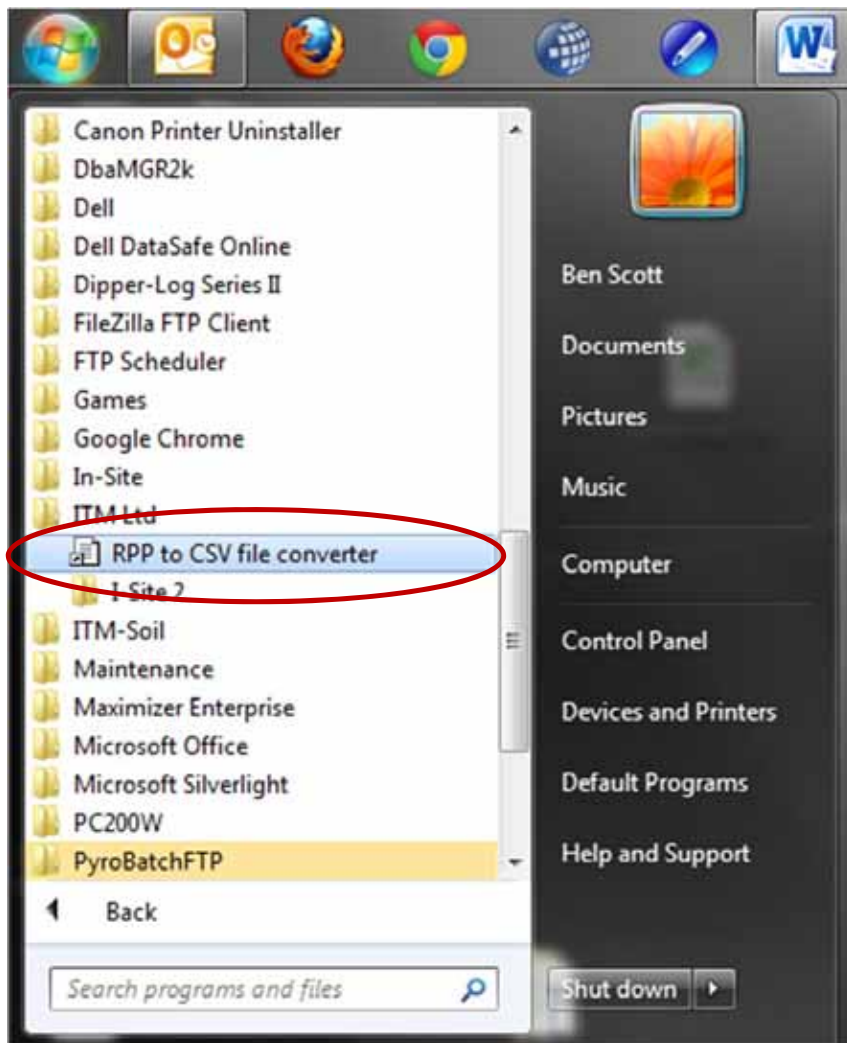


**The program can also be found from the start menu under:**

**“All Programs>ITM Ltd>RPP to CSV file converter”**




*The directories will default to those setup when installing the program. The “Browse” button can be used to specify a specific RPP file to convert.*

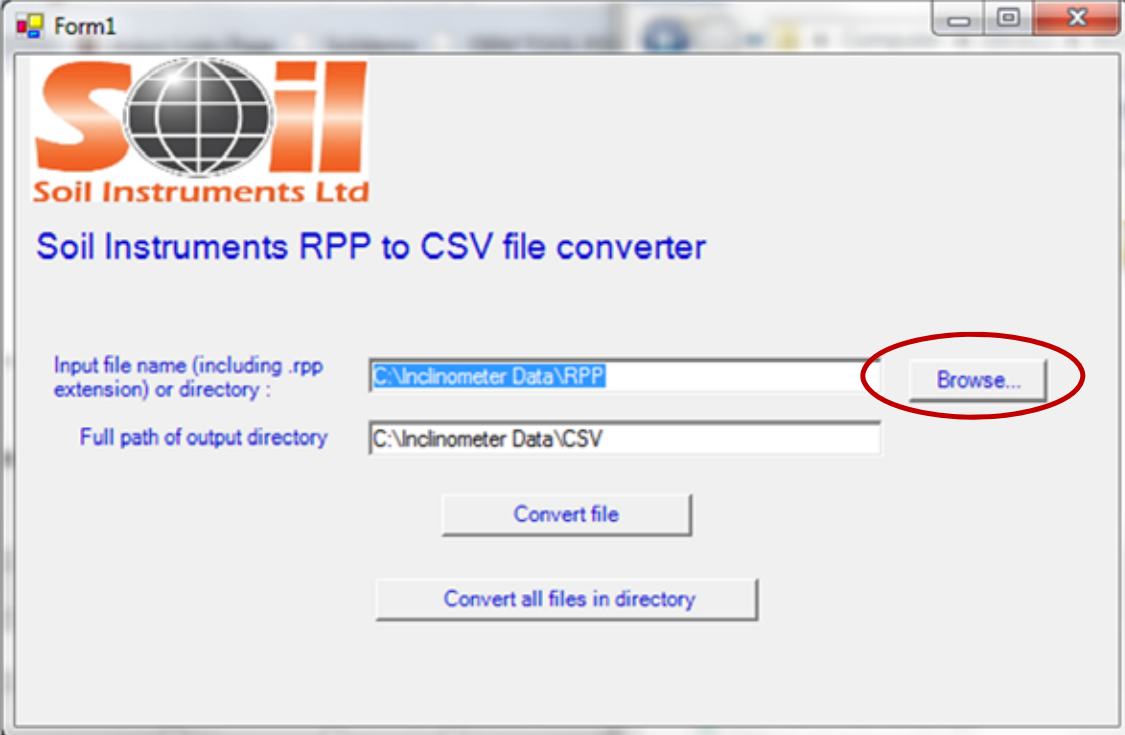


**Select “Browse” to convert a specific RPP file to CSV**

***Note: Raw RPP files need to be downloaded from the PDA for the itmsoil Instruments inclinometer, these then can be copied to the preferred directory (eg. C:\Inclinometer Data\RPP) for conversion to the CSV file format accepted by ARGUS.***

*Navigate to the file. Select the file and then “Open”.*

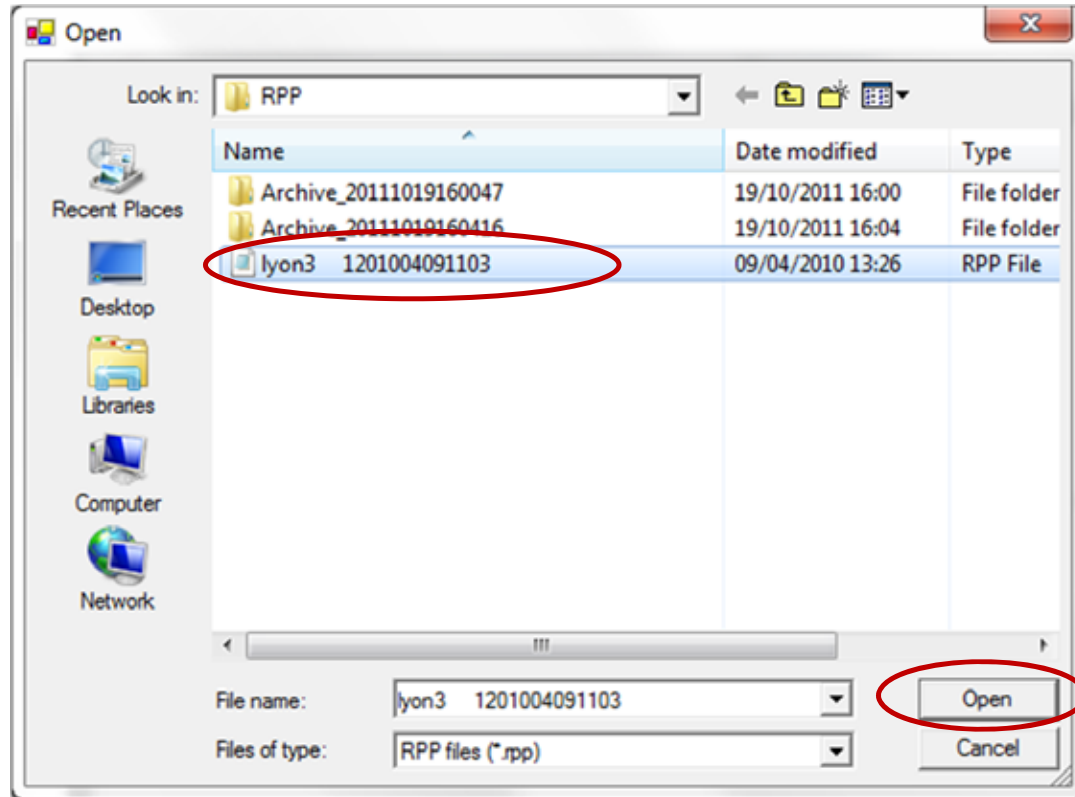

***Navigate to the file. Select the file and then “Open”***

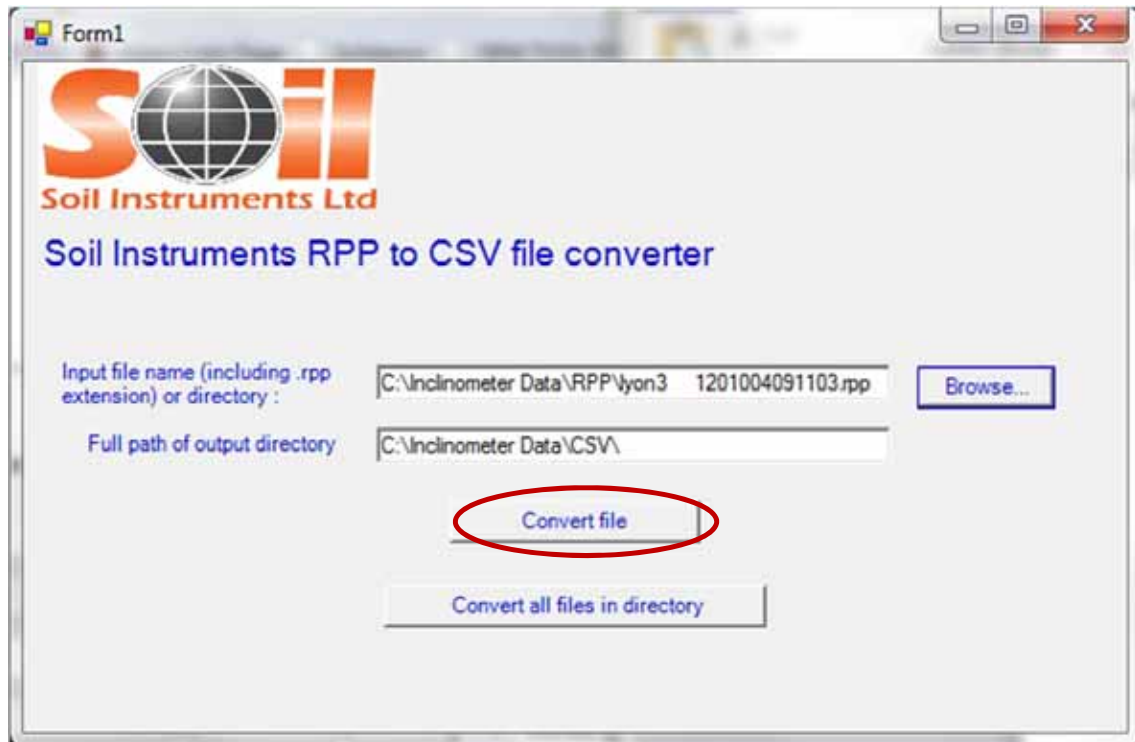

***Use the “Convert File” button to convert the selected file***



***When conversions complete the above message will appear***

***Note: Any error messages here will likely be caused by attempted duplication of files in the output directory. Remove or archive files that have already been converted and uploaded to ARGUS. If the conversion fails the original RPP file will still be automatically archived in the input file directory.***

### 3.2 Converting a group of files



***For converting all of the RPP files within a directory the “Convert all files in directory” function can be selected***



***Once successfully converted the above pop up will appear***

***Note: Only one file from a borehole should be converted at a time. This is due to the timestamp of the RPP file is stripped from the file name when converted to CSV so multiple files from the same borehole will cause conflicts in the output directory.***

#### 4. Uploading to ARGUS

lyon3 1201004091103				
A	B	C	D	E
1	TIME = 11:03:33 09 Apr 2010			
2	DIGITILT/SPIRAL = D			
3	ENGLISH/METRIC = M			
4	HOLE # = 3			
5	PROJECT = lyon			
6	JOB DESC =			
7	DIR CODE = r			
8	PROBE SER # = 1848			
9	OPERATOR = ta			
10	START DEPTH = 34.0			
11	END DEPTH = 0.5			
12	INCREMENT = 0.5			
13	INSTR CONST = 50000			
14	ROTATIONAL CORR A = 0.0000			
15	ROTATIONAL CORR B = 0.0000			
16	SENSITIVITY FACTOR A = +0			
17	SENSITIVITY FACTOR B = +0			
18				
19				
20	+0.5 A0 143 B0 251			
21	A180 -43 B180 -178			
22	+1.0 A0 140 B0 240			
23	A180 -35 B180 -179			
24	+1.5 A0 551 B0 437			
25	A180 -444 B180 -384			
26	+2.0 A0 890 B0 655			
27	A180 -788 B180 -587			
28	+2.5 A0 971 B0 823			
29	A180 -866 B180 -751			
30	+3.0 A0 896 B0 937			
31	A180 -789 B180 -871			
32	+3.5 A0 751 B0 929			
33	A180 -647 B180 -864			
34	+4.0 A0 615 B0 897			
35	A180 -503 B180 -810			
36	+4.5 A0 43 B0 804			
37	A180 62 B180 -735			
38	+5.0 A0 -294 B0 717			
39	A180 400 B180 627			
40	lyon3 1201004091103			


  

lyon_3				
A	B	C	D	E
1	09/04/2010	11:03 lyon_3 0.5_A	93	
2	09/04/2010	11:03 lyon_3 0.5_B	214	
3	09/04/2010	11:03 lyon_3 1.0_A	88	
4	09/04/2010	11:03 lyon_3 1.0_B	210	
5	09/04/2010	11:03 lyon_3 1.5_A	498	
6	09/04/2010	11:03 lyon_3 1.5_B	410	
7	09/04/2010	11:03 lyon_3 2.0_A	839	
8	09/04/2010	11:03 lyon_3 2.0_B	621	
9	09/04/2010	11:03 lyon_3 2.5_A	918	
10	09/04/2010	11:03 lyon_3 2.5_B	787	
11	09/04/2010	11:03 lyon_3 3.0_A	842	
12	09/04/2010	11:03 lyon_3 3.0_B	904	
13	09/04/2010	11:03 lyon_3 3.5_A	699	
14	09/04/2010	11:03 lyon_3 3.5_B	896	
15	09/04/2010	11:03 lyon_3 4.0_A	559	
16	09/04/2010	11:03 lyon_3 4.0_B	854	
17	09/04/2010	11:03 lyon_3 4.5_A	-10	
18	09/04/2010	11:03 lyon_3 4.5_B	770	
19	09/04/2010	11:03 lyon_3 5.0_A	-347	
20	09/04/2010	11:03 lyon_3 5.0_B	674	
21	09/04/2010	11:03 lyon_3 5.5_A	-402	
22	09/04/2010	11:03 lyon_3 5.5_B	629	
23	09/04/2010	11:03 lyon_3 6.0_A	-476	
24	09/04/2010	11:03 lyon_3 6.0_B	552	
25	09/04/2010	11:03 lyon_3 6.5_A	-499	
26	09/04/2010	11:03 lyon_3 6.5_B	516	
27	09/04/2010	11:03 lyon_3 7.0_A	-442	
28	09/04/2010	11:03 lyon_3 7.0_B	544	
29	09/04/2010	11:03 lyon_3 7.5_A	-28	
30	09/04/2010	11:03 lyon_3 7.5_B	542	
31	09/04/2010	11:03 lyon_3 8.0_A	190	
32	09/04/2010	11:03 lyon_3 8.0_B	518	
33	09/04/2010	11:03 lyon_3 8.5_A	214	
34	09/04/2010	11:03 lyon_3 8.5_B	511	
35	09/04/2010	11:03 lyon_3 9.0_A	240	
36	09/04/2010	11:03 lyon_3 9.0_B	501	
37	09/04/2010	11:03 lyon_3 9.5_A	266	
38	09/04/2010	11:03 lyon_3 9.5_B	494	
39	09/04/2010	11:03 lyon_3 10.0_A	288	

Successfully converted file.

Left side RPP format. Right side CSV format

Once files have been converted they can be uploaded to ARGUS using the FTP scheduler, which is also distributed freely by itmsoil.

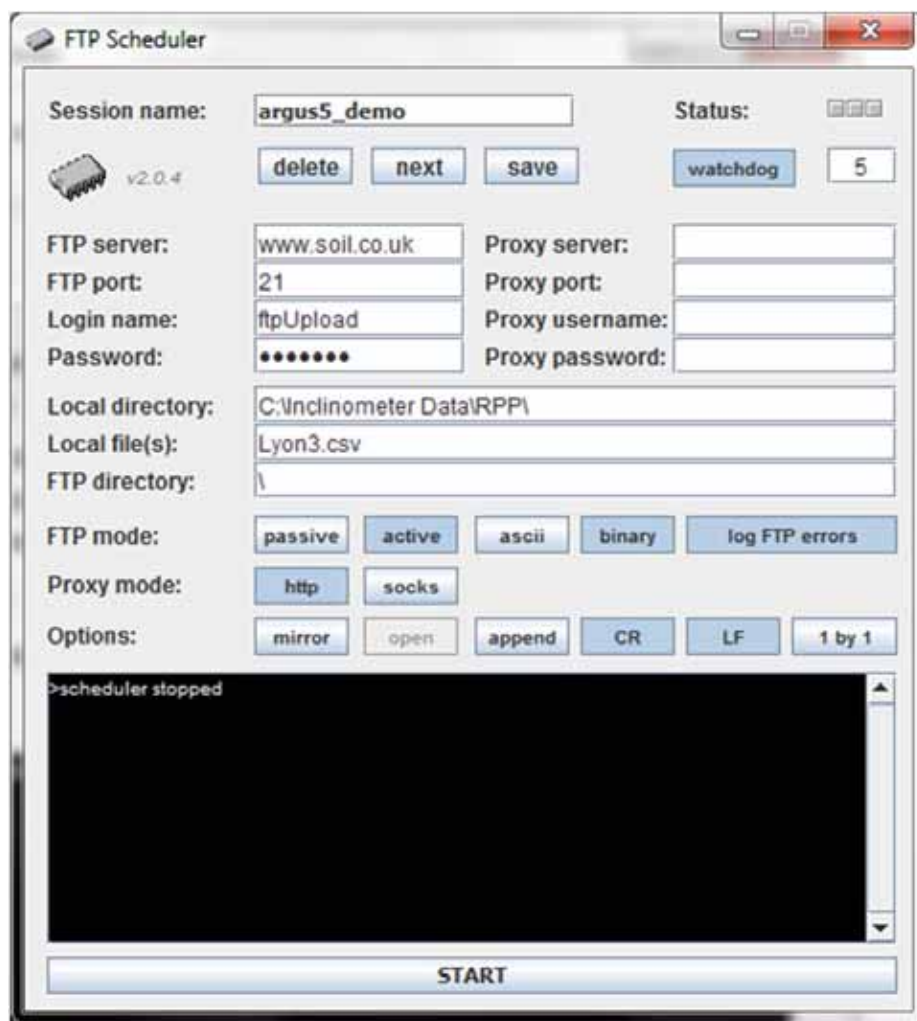

**FTP scheduler setup to upload the CSV file to ARGUS**

**Note:** If the “local file(s)” field in FTP scheduler was originally setup to upload “\*.dat” files this will now need to be changed to “\*.\*” so that the CSV files within the folder will also be uploaded.



## A.4 ASCII export

The ASCII Export function allows 3<sup>rd</sup> party software to process the measurement results generated by ARGUS. The server administrator configures the ASCII export interval on the server.

### A.4.1 Configuration

There are two types of ASCII export, type 1, which exports the single plan view values, and type 2 which exports all calculated values since the last export.

Configuration settings selectable in the ASCII Export menu:

Write ASCII file to local directory or FTP after creation to a remote server

Create copies of the ASCII file in a local directory

Prefix for the ASCII filename

Selection of sensors not to export, sensor ID's comma separated

Modify timestamp of last export per sensor (only type II)

Maximum amount of lines per ASCII file

Type 1 (Planview values)		Type 2 (Calculated values)	
Do not export sensors	<input type="text" value="1-1000"/>	Do not export sensors	<input type="text" value="1-1000"/>
max. lines per ASCII-file	<input type="text" value="10000"/>	max. lines per ASCII-file	<input type="text" value="10000"/>
Local directory	<input checked="" type="checkbox"/>	Calculation (days)	<input type="text" value="2"/>
Directory	<input type="text" value="asciexport/"/>	Local directory	<input checked="" type="checkbox"/>
Copy to directory 1	<input type="text"/>	Directory	<input type="text" value="asciexport/"/>
Copy to directory 2	<input type="text"/>	Copy to directory 1	<input type="text"/>
Filename	<input type="text" value="exp_typ1_1507xb"/>	Copy to directory 2	<input type="text"/>
FTP	<input type="checkbox"/>	Filename	<input type="text" value="exp_typ2_1507xb"/>
Host	<input type="text"/>	FTP	<input type="checkbox"/>
Port	<input type="text" value="21"/>	Host	<input type="text"/>
Username	<input type="text"/>	Port	<input type="text" value="21"/>
Password	<input type="text"/>	Username	<input type="text"/>
Directory	<input type="text"/>	Password	<input type="text"/>
Filename	<input type="text" value="exp_typ1_1507_zftpb"/>	Directory	<input type="text"/>
		Filename	<input type="text" value="exp_typ2_1507ftp%b"/>

The ASCII file name will start with the prefix as specified in the configuration, for example "argus\_export" and will end with a Unix-timestamp and the extension ".txt". An example filename: argus\_export\_1105014733.txt. The Unix-timestamp is based on the time the export started.

NB: Using FTP could result in missing data in case the network connection is not available during the export.

### A.4.2 ASCII File Format - Type I

This export format will export a single calculated measurement value of the sensor in the database at the moment of the ASCII Export (the same measurement value as displayed in the plan view). The data in the ASCII file will contain the following information (per line):

Time; sensor short name; unit; x; y; z; location; remark; alarm1; alarm2; alarm3; alarm4; last measurement value(s)

Time (acc. to ISO):	YYYY/MM/DD HH:MM:SS – time stamp from last measured value of the sensor
Sensor short name:	Sensor short name (text) – from the sensor configuration
Unit:	mm, Kpa, °C etc. (text) – from the sensor configuration
X/Y/Z:	The X/Y/Z co-ordinates of the sensor (number)
Location:	MQ1, MQ3, etc. (text) – from the sensor configuration
Remark:	Sensor remark (text) – from the sensor configuration
Alarm1:	High1 Alarm value for sensor (yellow alarm) – from the sensor configuration
Alarm2:	High2 Alarm value for sensor (red alarm) – from the sensor configuration
Alarm3:	Low1 Alarm value for sensor (yellow alarm) – from the sensor configuration
Alarm4:	Low 2 Alarm value for sensor (red alarm) – from the sensor configuration
Last measurement values:	The calculated value for the sensor. A single value or multiple values (multi-value sensors)

All positions in one line of information are fixed. If for a certain field no information is available, nothing will be written at this position and the next character will be the semicolon separator. Text fields are exported with quotes "".

Values are written in the file using a "." (point) as decimal separator. A thousands separator is not used.

### A.4.3 Multi-value sensors

In ARGUS a sensor can be configured to have multiple values. For example a geodetic monitoring point could have 3 values, the X,Y and Z coordinates. These values are written at the end of the line with a semicolon as separator.

Example of an ASCII export:

```
2004-01-01 00:00:00;Barometer;mbar;;;Project site;Manual measurement;;;;;999.10000;      (single
value)
2004-01-01 00:00:00;162001;Kpa;;;CRS;-6 m NAP;;;;;66.00000;34.00000;12.50000;      (multi-
value)
```

### A.4.4 ASCII File Format - Type II

This export format will export all calculated measurement values of the sensor in the database starting from the last successful export. All sensors will be exported with the exception of sensors that were specified not to export. The ASCII file is limited to a maximum amount of lines per file (adjustable), when this limit is reached a new file will be created and the export will continue until all sensors values have been exported.

When an ASCII-2-export starts a lock file will be created to avoid that multiple ascii-2-exports can run at the same time.

At the top of the page, you can see if a lock file exists and how many minutes the ascii-2-export is already running.

You can also delete the lock file manually in case the ascii-2-export has not finished successfully.

The data in the ASCII file will contain the following information (per line):

**Time; sensor short name; unit; x; y; z; location; remark; alarm1; alarm2; alarm3; alarm4;date\_of\_datumreading;value(s)\_of\_datumreading; last measurement value(s)**

Time (acc. to ISO):	YYYY/MM/DD HH:MM:SS – time stamp from last measured value of the sensor
Sensor short name:	Sensor short name (text) – from the sensor configuration
Unit:	mm, Kpa, °C etc. (text) – from the sensor configuration
X/Y/Z:	The X/Y/Z co-ordinates of the sensor (number)
Location:	MQ1, MQ3, etc. (text) – from the sensor configuration
Remark:	Sensor remark (text) – from the sensor configuration



Alarm1: configuration	High1 Alarm value for sensor (yellow alarm) – from the sensor
Alarm2:	High2 Alarm value for sensor (red alarm) – from the sensor configuration
Alarm3: configuration	Low1 Alarm value for sensor (yellow alarm) – from the sensor
Alarm4:	Low 2 Alarm value for sensor (red alarm) – from the sensor configuration
Date of datum reading:	Time stamp (ISO) from datum reading of the sensor
Value of datum reading; (multi-value sensors)	Calculated value for datum reading. A single value or multiple values
Last measurement values: values (multi-value sensors)	The calculated value for the sensor. A single value or multiple values

All positions in one line of information are fixed. If for a certain field no information is available, nothing will be written at this position and the next character will be the semicolon separator. Text fields are exported with quotes "".

Values are written in the file using a "." (point) as decimal separator. A thousands separator is not used.

### A.4.5 Multi-value sensors

In ARGUS a sensor can be configured to have multiple values. For example a geodetic monitoring point could have 3 values, the X,Y and Z coordinates. These values are written at the end of the line with a semicolon as separator.

Example of an ASCII export:

2004-01-01 00:00:00;Barometer;mbar;;;Project site;Manual measurement;;;;;999.10000; (single value)

2004-01-01 00:00:00;162001;Kpa;;;CRS;-6 m NAP;;;;;66.00000;34.00000;12.50000; (multi-value)

When multi-value sensors are configured with a datum reading this export type will export a calculated datum reading for each value. This implicates that for example for a 10-value sensor in total 20 measurement values will be exported. The first 10 values are the calculated datum reading values and the last 10 values are the calculated measurement values.

## A.5 Virtual Sensors

This Addin will allow users to create their own sensors in the database without granting them the rights of administrator. This could be useful for specific data analysis functions. The created virtual sensors will be saved permanently in the project and will become available for all other functions. The administrator will be able to add this sensor to the sensor pool with 'real sensors' by removing the name 'virtual' from the configuration field location. These sensors can only be sensors of the calculated type:

Normally a sensor will have data in the database and when calculations are being made, the raw data is retrieved from the database and calculated to engineering units. In ARGUS it is possible to configure sensors that do not have data in the database. This would be interesting for example if you would like to create two plots of a piezometer, one with and one without barometric and temperature correction. In this case you would configure the following two sensors:

Formula for 'real' sensor with ID=10, uncorrected:

$$A * \text{pow}(\text{value}, 2) + B * \text{value} + C$$

Formula for 'calculated' sensor with ID=11, corrected:  
0.059984

$$\#10\# = \#10\# - (\#1\# - 1013) * 0.1 - (\#3\# - 21.3) * 0.059984$$

Note the '#10#=' at the beginning of the formula for sensor 11. The way ARGUS works is that it will recognize that this is a calculated sensor without data in the database. It will select the timestamps (the measurement interval) from the sensor with ID=10 and assign calculated values to the timestamps by using the formula expression following the '=' sign. In this example it will use the calculated output from the sensor with ID=10 and subtract the barometric correction and temperature correction.

Other useful features are adding or subtracting sensor results, averaging sensor results, etc. For example if you would install 4 strain gauges in a pile or on a strut, you would like to know the average calculated load of all sensors. In that case you would create a calculated sensor:  $\#1\# = (\#1\# + \#2\# + \#3\# + \#4\#) / 4$

A typical formula for a piezometer could be:  
(#3#-21.3)\*-0.059984

$$\#1\# = A * \text{pow}(\#1\#, 2) + B * \#1\# + C - (\#2\# - 1013) * 0.1 -$$

Where calibration factors are:

$$A = -0.00017296$$

' B=0.050636

C=1441.7

#1# is the reference to the VW sensor HZ reading with ID=1

#2# is the barometric sensor with ID=2

#3# is the reference to the temperature sensor with ID=3

**Remark:** When adding take care that the calculation is enclosed by brackets when referring to negative calibration factors or values from other sensors. Otherwise the calculation will result in an error, i.e.: +- a minus sign directly following a + sign is not allowed.

Mathematical expression allowed in the sensor formula:

abs	Absolute value	abs( mixed number)
acos	Arc cosine	acos( float arg)
acosh	Inverse hyperbolic cosine	acosh( float arg)
asin	Arc sine	asin( float arg)
asinh	Inverse hyperbolic sine	asinh( float arg)
atan2	arc tangent of two variables	atan2( float y, float x)
atan	Arc tangent	atan( float arg)
atanh	Inverse hyperbolic tangent	atanh( float arg)
cos	Cosine	cos( float arg)
cosh	Hyperbolic cosine	cosh( float arg)
deg2rad	Converts degrees to radian	deg2rad( float arg)
exp	e to the power of ...	exp( float arg)
log10	Base-10 logarithm	log10( float arg)
log	Natural logarithm	log( float arg)
pi	Get value of pi	pi()
pow	Exponential expression	pow(number base, number exp)

rad2deg	Converts radian to degrees	deg2rad( float arg)
sin	Sine	sin( float arg)
sinh	Hyperbolic sine	sinh( float arg)
sqrt	Square root	sqrt(float arg)
tan	Tangent	tan(float arg)
tanh	Hyperbolic tangent	tanh(float arg)



## Appendix B. Troubleshooting

Problem	Cause	Solution
Unable to display login page	URL error Network not correctly configured Network unreachable	Check spelling of URL Check network settings of server and PC Ping server and contact your network admin
Login appears in wrong language	Wrong language selected at installation	Edit file <code>projectname/var/variablenxxx.php</code> on the server (contact server administrator)
Logo's are not shown	Wrong type / invalid format	Use JPG, PNG or GIF images. Try to save the image with another programme and upload again (for example paint). Server admin has to enable write access to the gfx directory.
ASCII data is not processed	Lock-file exists Wrong ASCII file format Wrong path in sensor configuration Cronjob is not running  FTP upload is not accepted	Check Import and delete lock-file Check ASCII datafile Check sensor path configuration Try a manual import by opening the <code>projectname/cron/index.php</code> page Check with FTP programme if uploads are accepted by the server
Plots are not generated	Time consuming calculation Circular reference in formula No data for sensor  Pop-Up-Blocker active	Wait longer Check formula in sensor configuration Check that all sensors have data in the selected time range You have to deactivate your popup blocker.
Values in planview not updated	Old data is shown ASCII import not running Changes in sensor name or sensor, after planview was created	Refresh the page (F5) See above Delete sensors from planview and place them again
Planview sensormark not showing	Wrong sensor names	Check sensor configuration and make sure all sensors have <b>unique</b> short names
PDF report not generated	Time-consuming report (plots) Email not functioning	Wait longer Check email settings
Alarm email from: address wrong	Sever MTA configuration	Contact your server admin, edit the server Mail Transfer Agent configuration and/or use masquerading
After sensor import the amount of sensors has doubled	Importing a file without sensor ID's will create new sensors	Always export the sensor configuration and then import the edited configuration

Zoom in on plot shows flat lines	Too much detail in zoom Presentation of values < 1	Zoom-out Increase sensor engineering unit (multiply by 1000>, for example report in mm instead of m)
FTP to ARGUS server fails	Check network configuration Check firewall settings on server/pc	Contact your server administrator, most likely a firewall setting
Plots are not shown (time-out)	Proxy-server	Ask system admin to increase time-out value for http requests on the proxy server
Timestamps in planviews are in the past or in the future	Imported broken/incomplete ASCII-file with data	Delete data from the database that was affected by this import (use edit manual data or archive/backup). Reset the timestamps for the planviews that were affected to a date of the first dataset being imported. Import the corrected ASCII file again.
Getting an error-message about using an apostrophe or other special characters, when trying to save an pdf-plot	This signs causes problems in some SQL-Queries	edit the php.ini file on your server and check the variable magic_quotes_gpc, this should be set to on

## Appendix C. End User License Agreement

---

By Using ARGUS you have to accept the following End User License Agreement:

End User License Agreement for Argus Monitoring Software

This End User License Agreement ("EULA") accompanies Argus Monitoring Software and any upgrades, modified versions, or updates of the Argus Monitoring Software licensed to you by Interfels GmbH. Please read this EULA carefully. If you do not accept this agreement, you will not be able to use the Software.

### GRANT OF LICENSE

Argus Monitoring Software is licensed, not sold. Interfels GmbH grants the purchaser a non-transferable, non-exclusive license to install Argus Monitoring Software on one server. A server is a single computer on which Argus Monitoring Software loads and executes so that one or more users may access it.

### RESTRICTIONS

- a. You may not resell, transfer, rent, or lease Argus Monitoring Software to third parties.
- b. You may not host Argus Monitoring Software as a business in itself.
- c. You may not install Argus Monitoring Software on more than one Server, unless you have purchased additional licenses.
- d. You may not modify, adapt, translate, reverse engineer, decompile, disassemble or otherwise attempt to discover the source code of the Software.
- e. You may not violate or defeat the internal licensing mechanism used by Argus Monitoring Software.

### NO WARRANTY

Argus Monitoring Software is being delivered to you AS IS, and Interfels GmbH makes no warranty as to its use or performance.

INTERFELS GMBH AND ITS SUPPLIERS DO NOT AND CANNOT WARRANT THE PERFORMANCE OR RESULTS YOU MAY OBTAIN BY USING THE SOFTWARE OR DOCUMENTATION. INTERFELS GMBH AND ITS SUPPLIERS MAKE NO WARRANTIES, EXPRESS OR IMPLIED, AS TO NONINFRINGEMENT OF THIRD PARTY RIGHTS, MERCHANTABILITY, OR FITNESS FOR ANY PARTICULAR PURPOSE. IN NO EVENT WILL INTERFELS GMBH OR ITS SUPPLIERS BE LIABLE TO YOU FOR ANY CONSEQUENTIAL, INCIDENTAL OR SPECIAL DAMAGES, INCLUDING ANY LOST PROFITS OR LOST SAVINGS, EVEN IF AN INTERFELS GMBH REPRESENTATIVE HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES, OR FOR ANY CLAIM BY ANY THIRD PARTY.

Argus Monitoring Software is protected by copyright laws and international copyright treaties, as well as other intellectual property laws and treaties.

Interfels GmbH reserves all rights not expressly granted in this EULA.

Effective 1 December, 2005. Interfels GmbH, Am Bahndamm 1, 48455 Bad Bentheim, Germany.