



## USER MANUAL



# SvanNET

## ON-LINE MONITORING SOLUTIONS

Warsaw, 2022-05-25  
Rev. 2.01

Copyright © 2022 SVANTEK.  
All rights reserved.



**Note:** *Because of continuous product improvement SVANTEK reserves the right to make changes to product specifications without notice.*

The software described in this manual is furnished under a license agreement and may be used only in accordance with the terms of that agreement.

### **Copyright Notice**

Copyright © 2022 Svantek Sp. z o.o.

All rights reserved.

Reproduction without permission is prohibited.

### **Trademarks**

Trademarks or registered marks in this manual belong to their respective manufacturers.

Microsoft and Windows are registered trademarks of Microsoft Corporation.

### **Disclaimer**

Information in this document is subject to change without notice and does not represent a commitment on the part of Svantek.

Svantek provides this document “as is”, without warranty of any kind, either expressed or implied, including, but not limited to, its particular purpose. Svantek reserves the right to make improvements and/or changes to this manual, or to the products and/or the programs described in this manual, at any time.

Information provided in this manual is intended to be accurate and reliable. However, Svantek assumes no responsibility for its use, or for any infringements on the rights of third parties that may result from its use.

This product might include unintentional technical or typographical errors. Changes are periodically made to the information herein to correct such errors, and these changes are incorporated into new editions of the publication.

### **Technical Support Contact Information:**

web: [www.svantek.com](http://www.svantek.com)

e-mail: [support@svantek.com.pl](mailto:support@svantek.com.pl)

# CONTENTS

<b>1</b>	<b>WHAT IS SVANNET.....</b>	<b>4</b>
1.1.	SvanNET Main and Tool panels.....	6
<b>2</b>	<b>SVANNET REMOTE COMMUNICATION SERVICES.....</b>	<b>10</b>
2.1.	Station list .....	11
2.2.	STATUS view .....	13
2.3.	LOG views.....	16
2.4.	WEB INTERFACE.....	17
2.4.1.	VIEW results .....	18
2.4.2.	STATUS view.....	20
2.4.3.	CONFIGURATION views .....	21
2.4.4.	STORAGE view.....	33
<b>3</b>	<b>SVANNET AUTOMATIC MONITORING SERVICES.....</b>	<b>34</b>
3.1.	Project list .....	36
3.2.	Project VIEW (all access levels).....	40
3.3.	STATUS view (all access levels) .....	50
3.4.	CONFIGURATION view (Owner/Administrator access level).....	53
3.5.	SHARING view (Owner/Administrator access level) .....	54
3.6.	AUTOMATIC DOWNLOAD view (Owner/Administrator access level).....	56
3.7.	DATA FILES view (Owner/Administrator and Manager access levels).....	63
3.8.	REPORTING view (Owner/Administrator access levels) .....	64
	<b>APPENDIX A – STATION ALARMS DESCRIPTION .....</b>	<b>67</b>
	<b>APPENDIX B – CUSTOM FTP DETAILS DESCRIPTION.....</b>	<b>69</b>
	<b>APPENDIX C – EXAMPLE OF AUTOMATIC FILES DOWNLOAD CONFIGURATION.....</b>	<b>74</b>

## 1 WHAT IS SVANNET


**SvanNET** is an online solution that supports connections with Svantek noise & vibration monitoring stations. To ensure the reliability and data security the SvanNET has been located on the Microsoft Azure™, the cloud platform working through global network of Microsoft-managed data centres. SvanNET includes the standard function - *Remote Communication Services* available to all SvanNET users and the optional extension - *Automatic Monitoring Services* offered via a license for SvanNET Users.

*Remote Communication Services* maintain remote connection with the monitoring devices and service includes status alarms (e.g. battery, memory), remote access to device settings and measurement files stored in the device and preview of the current results and recent time-history graph.


*Automatic Monitoring Services* offers automatic control of measurement points, data sharing with other SvanNET users as well as data preview in the form of a customised website with either public or restricted access. The preview website can be customised with a logo and individual project name. Access to the preview can be either open to the public or protected by a password.

To support noise, vibration & dust monitoring SvanNET provides online connection services such as a web interface, access to data files in the monitoring station and status alarms.


SvanNET is an online solution which means it doesn't require software installation and is accessible through a web browser. Connection over SvanNET allows users to use a web browser on any device such as mobile phone or tablet to watch real-time measurement results, download measurement files and configure the station settings.

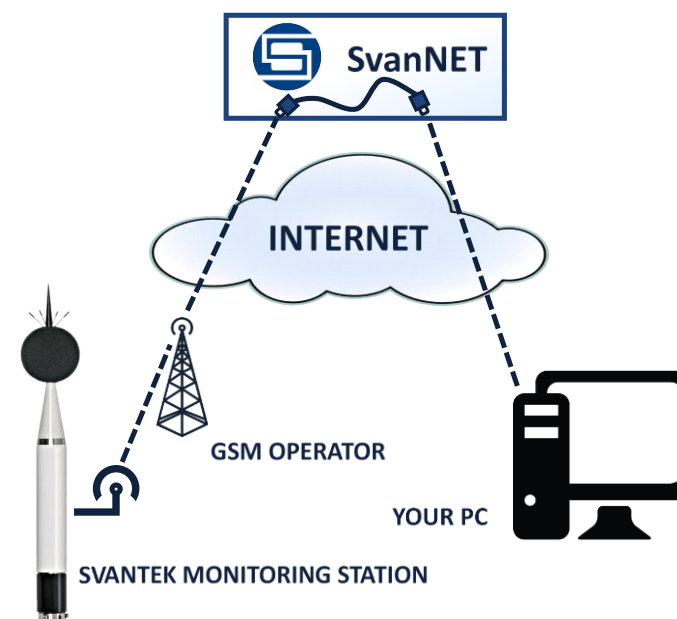

Before start using the SvanNET web-service:

1. Check that your local distributor has created the SvanNET account for you and assigned your station(s) to your SvanNET account.
2. Install connections of your measuring devices with SvanNET (see user manuals dedicated for the measuring instruments). Successful connection with SvanNET is usually indicated by the  icon on the SVANTEK instrument's display.
3. To access SvanNET, log in to your account at:  
<https://www.svan.net.com/panel-login.php>


Before logging in, select your language, clicking the appropriate flag.

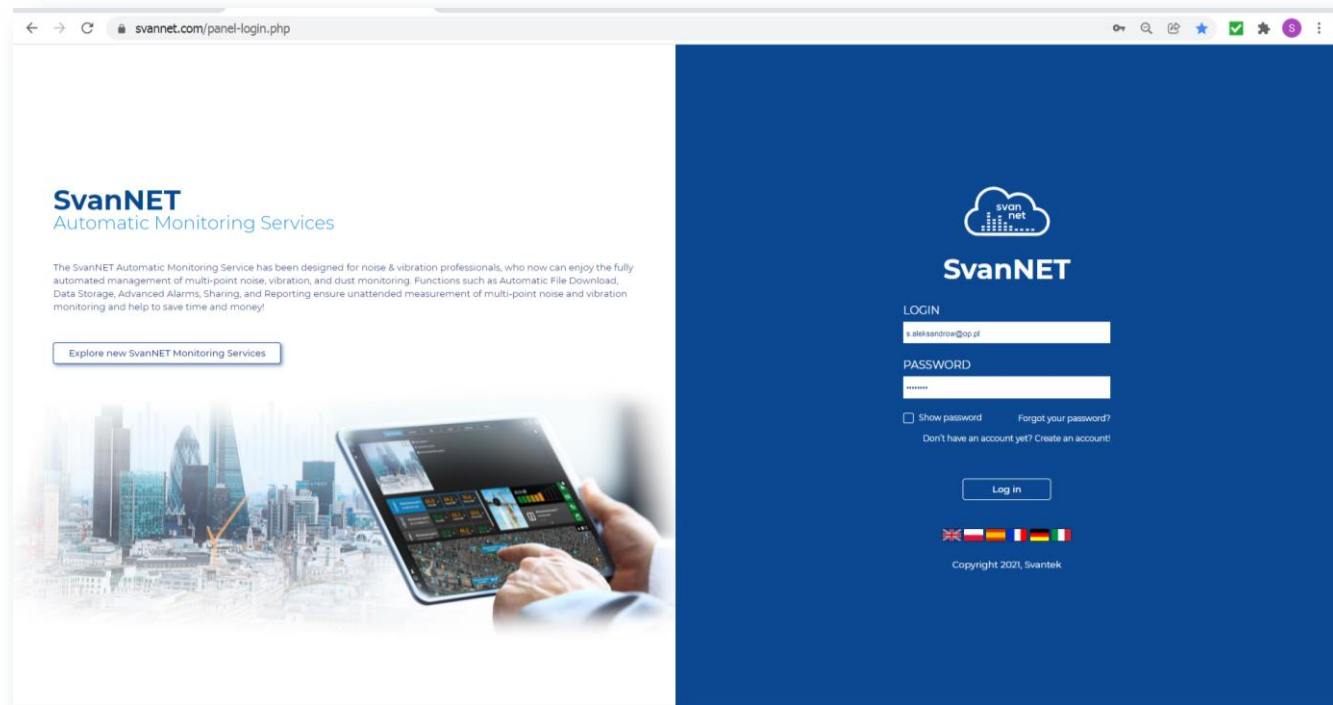


Once logged in, you can use the web interface to control monitoring stations.


## 1.1. SvanNET Main and Tool panels

Main and Tool panels are always presented in each view. Main Panel is located at the left side of the SvanNET window and Tool Panel – at the right side. You can extend or hide each panel clicking .

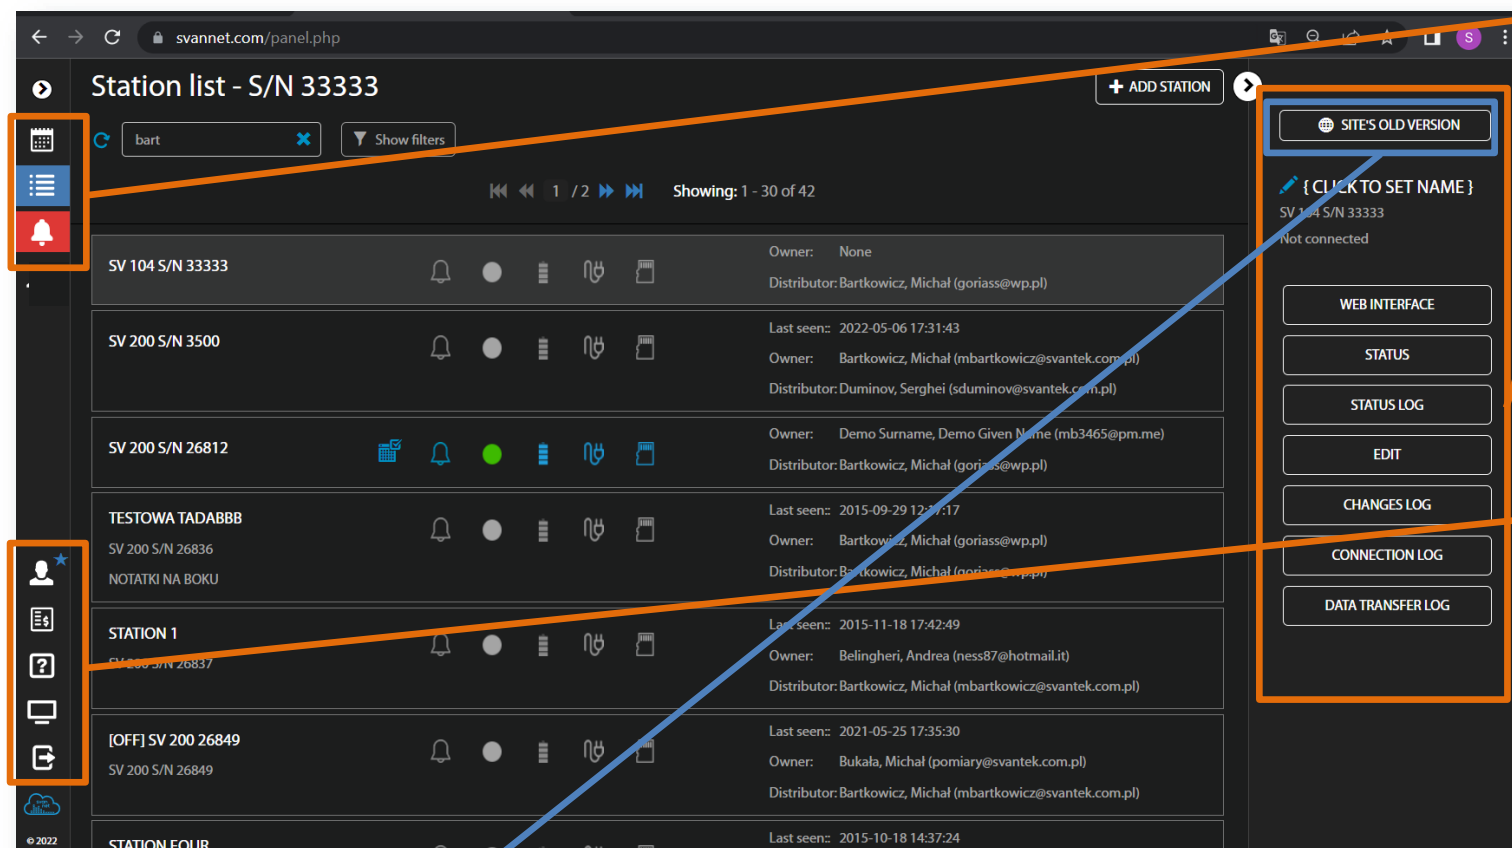

- Upper part of the Main Panel allows you to activate **Project list** or **Station list** tools, check **Warnings**.
- The Tool Panel provides some functions for the station or project control.
- Lower part of the Main Panel allows you to manage user account, activate licences, contact Svantek Support team, change the colour scheme of SvanNET from “dark” to “light” and logout from SvanNET.
- You can change the SvanNET version clicking SITE’S OLD VERSION.

Clicking **Options** , you can edit your account, change password, configure station notifications, manage FTP account, acquaint with the terms of service, private policy and cookie policy.

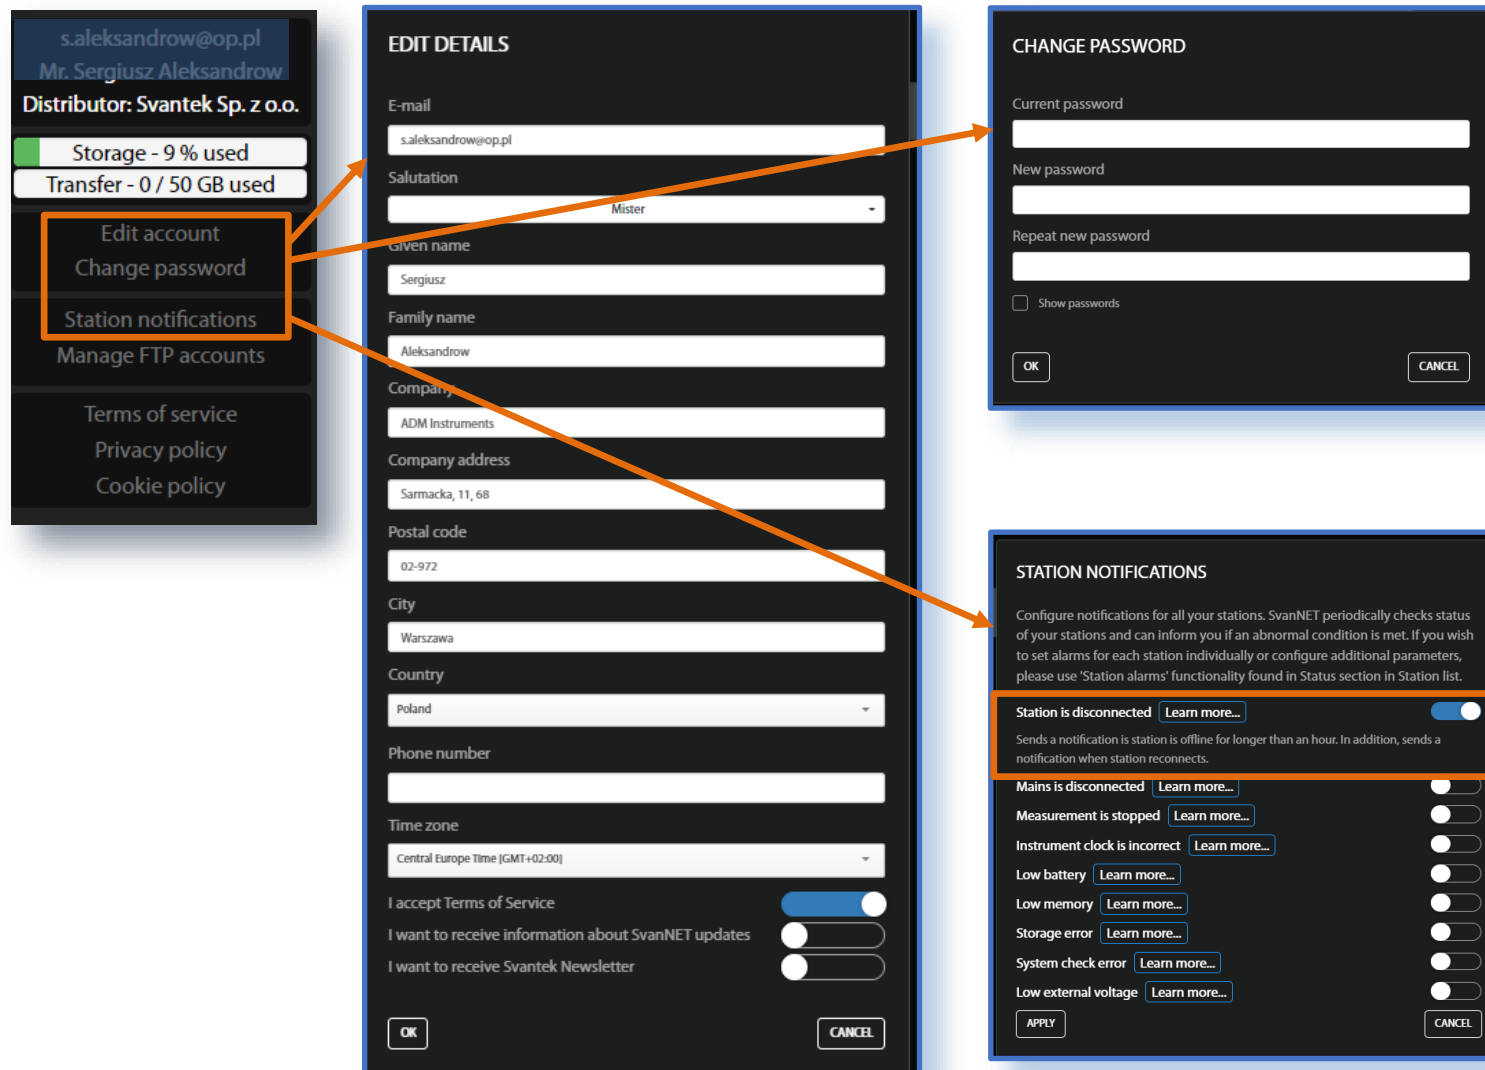

The image shows the SvanNET Options menu and three sub-dialogs. The Options menu is on the left, with 'Edit account', 'Change password', and 'Station notifications' highlighted by orange boxes. Arrows point from these boxes to the corresponding dialog boxes on the right. The 'EDIT DETAILS' dialog shows fields for E-mail, Salutation, Given name, Family name, Company, Company address, Postal code, City, Country, Phone number, Time zone, and checkboxes for Terms of Service, SvanNET updates, and Svantek Newsletter. The 'CHANGE PASSWORD' dialog shows fields for Current password, New password, and Repeat new password, with a 'Show passwords' checkbox. The 'STATION NOTIFICATIONS' dialog shows a list of notification types with checkboxes and 'Learn more...' links. The 'Station is disconnected' notification is highlighted by an orange box.

**Options menu:**

- s.aleksandrow@op.pl
- Mr. Sergiusz Aleksandrow
- Distributor: Svantek Sp. z o.o.
- Storage - 9 % used
- Transfer - 0 / 50 GB used
- Edit account
- Change password
- Station notifications
- Manage FTP accounts
- Terms of service
- Privacy policy
- Cookie policy

**EDIT DETAILS**

E-mail: s.aleksandrow@op.pl

Salutation: Mister

Given name: Sergiusz

Family name: Aleksandrow

Company: ADM Instruments

Company address: Sarmacka, 11, 68

Postal code: 02-972

City: Warszawa

Country: Poland

Phone number:

Time zone: Central Europe Time (GMT+02:00)

I accept Terms of Service: ☒

I want to receive information about SvanNET updates: ☐

I want to receive Svantek Newsletter: ☐

**CHANGE PASSWORD**

Current password:

New password:

Repeat new password:

☐ Show passwords

**STATION NOTIFICATIONS**

Configure notifications for all your stations. SvanNET periodically checks status of your stations and can inform you if an abnormal condition is met. If you wish to set alarms for each station individually or configure additional parameters, please use 'Station alarms' functionality found in Status section in Station list.

**Station is disconnected** [Learn more...](#) ☒

Sends a notification is station is offline for longer than an hour. In addition, sends a notification when station reconnects.

**Mains is disconnected** [Learn more...](#) ☐

**Measurement is stopped** [Learn more...](#) ☐

**Instrument clock is incorrect** [Learn more...](#) ☐

**Low battery** [Learn more...](#) ☐

**Low memory** [Learn more...](#) ☐

**Storage error** [Learn more...](#) ☐

**System check error** [Learn more...](#) ☐

**Low external voltage** [Learn more...](#) ☐

**APPLY** **CANCEL**

- Click **Edit account**, to edit your account details in the EDIT DETAILS dialog box.
- Click **Change password**, to change your password in the CHANGE PASSWORD dialog box.
- Click **Station notification**, to configure station alarms in the STATION NOTIFICATIONS dialog box.

If you click **Learn more...**, the information about this notification will be displayed below.

Clicking **License**, you can activate license for Automatic Monitoring Services, order licenses and check your licenses.

The image displays three overlapping screenshots of the SvanNET user interface, illustrating the license management process. Each screenshot has a sidebar on the left with icons for home, calendar, list, notifications, user profile, help, and settings. The top-right corner of each screen contains a 'SITE'S OLD VERSION' button and three main action buttons: 'ACTIVATE LICENSE', 'REQUEST NEW LICENSE', and 'MY LICENSES'.

- Top Screenshot: 'Activate license for Automatic Monitoring Services'**  
This screen features a large text input field labeled 'Enter code' and a 'Submit' button below it. The 'ACTIVATE LICENSE' button is highlighted with an orange box, with an arrow pointing to the first bullet point.
- Middle Screenshot: 'Request new license for Automatic Monitoring Services'**  
This screen shows a 'License type' dropdown menu with 'SVANNET\_1M - SvanNET 1 station account subscription - month' selected. Below it is a text box listing features: 'A monthly plan for SvanNET Automatic Monitoring Services: - Automatic control of 1 measurement points - Data sharing access up to 10 users - WYSIWYG reports - 10 x SvanNET Event/Alarm per project - 1 x Public website with online data presentation (token) per project - 2 GB SSD data storage limit - 10 GB data transfer limit per month'. Below this is a 'No. of periods' dropdown set to '1' and a 'Submit' button. The 'REQUEST NEW LICENSE' button is highlighted with an orange box, with an arrow pointing to the second bullet point.
- Bottom Screenshot: 'My licenses'**  
This screen displays 'Account features' in a table:

Account features	
<input checked="" type="checkbox"/> Station management	
<input checked="" type="checkbox"/> Station alarms	<input checked="" type="checkbox"/> Data storage 1,022.59 MB / 10.00 GB
<input checked="" type="checkbox"/> Project templates	<input checked="" type="checkbox"/> Monthly transfer 0 B / 50.00 GB
<input checked="" type="checkbox"/> Reporting	<input checked="" type="checkbox"/> Stations in projects 0 / 10
<input checked="" type="checkbox"/> Project alarms	<input checked="" type="checkbox"/> No. of account sharing 0 / 10
<input checked="" type="checkbox"/> Multi-point events	<input checked="" type="checkbox"/> No. of access tokens 0 / 1

Below the table, it says 'No licenses'. The 'MY LICENSES' button is highlighted with an orange box, with an arrow pointing to the third bullet point.

- To activate new license, get its code from the distributor, press the ACTIVATE CODE button and enter the code.
- To order a new option, you should send a request for the new license. For this, press the REQUEST NEW LICENSE, select a **License type** and **No. of periods** and **Submit** the request.
- To check you licenses, press the MY LICENSES button.



Clicking **Support**, you can send the message to the Svantek support team and watch tutorials.

**Technical support**

Subject \*

Description \*

Serial number or project name \*

Attach files (photos or docs) related to the enquiry

Drag & Drop Files Here  
or  
Browse Files

allowed file formats: .pdf, .jpg, .png, .bmp, .jpeg, .xls, .xlsx, .doc, .docx, .zip, .mov, .mp4, .avi, .svn, .svl, .csv, .wav

Contact name \*

E-mail \*

Company/Organization \*

Country \*

Phone

I want to receive information about SvanNET updates ☐

I want to receive Svantek Newsletter ☐

I consent to being contacted by authorised Svantek Distributor / Allow support \* ☐

This is required to allow contact in order to provide customer support.

\* denotes mandatory fields

Submit

**Tutorials**

SvanNET Automatic Monitoring Services - SVANTEK

Introduction

Remote Communication Services

Station Configuration

Overview

Part 1: Templates, Configure Panels

Part 2: Noise Project Setup

Part 3: Vibration Project

- To send a message to the Svantek support team, press the TECHNICAL SUPPORT button, fill the form and submit the message.
- To watch tutorials, press the TUTORIALS button, click on the tutorial you would like to watch. The tutorials are played using YouTube.

## 2 SVANNET REMOTE COMMUNICATION SERVICES

*Remote Communication Services* is a basic SvanNET functionality with the use of the **Station list** tools. Its role is to maintain remote connection with the measuring devices (monitoring stations), station status and measurement alarms, remote access to device settings and measurement files stored in the device and viewing of the current results and recent time-history graphs.

### **Remote connection with monitoring devices**

When you buy one or more Svantek monitoring stations that communicate with the Internet, you automatically get access to SvanNET *Remote Communication Services*. The local distributor should get you the SvanNET account and assign your monitoring stations to your account. After logging to SvanNET you will have remote access to these stations. To connect the station to the Internet, follow the instructions described in the User Manual for this device.

### **Station status alarms**

You can check the status of your monitoring station using status icons or switching to the Status view. If necessary, you can also configure Station Alarms related to the system conditions of the monitoring stations, such as battery status, connection status, memory status, measurement status, etc. Alarms are based on Conditions and relate to Actions, that are default e-mails to the specified recipients.

### **Device settings**


You can configure remotely measurement and data storage settings and, for some stations, station measurement alarms (exceeding threshold levels). For some devices, you can remotely perform calibration check and upgrade the firmware.

### **Viewing measurement results**

You can select the current measurement results to be viewed and monitored as well as to start and stop measurements remotely.

## 2.1. Station list

**Station list** displays information about all stations assigned to the user account – turned on and off. You can select the required station by clicking the line with its name. The selection is marked as grey horizontal bar.

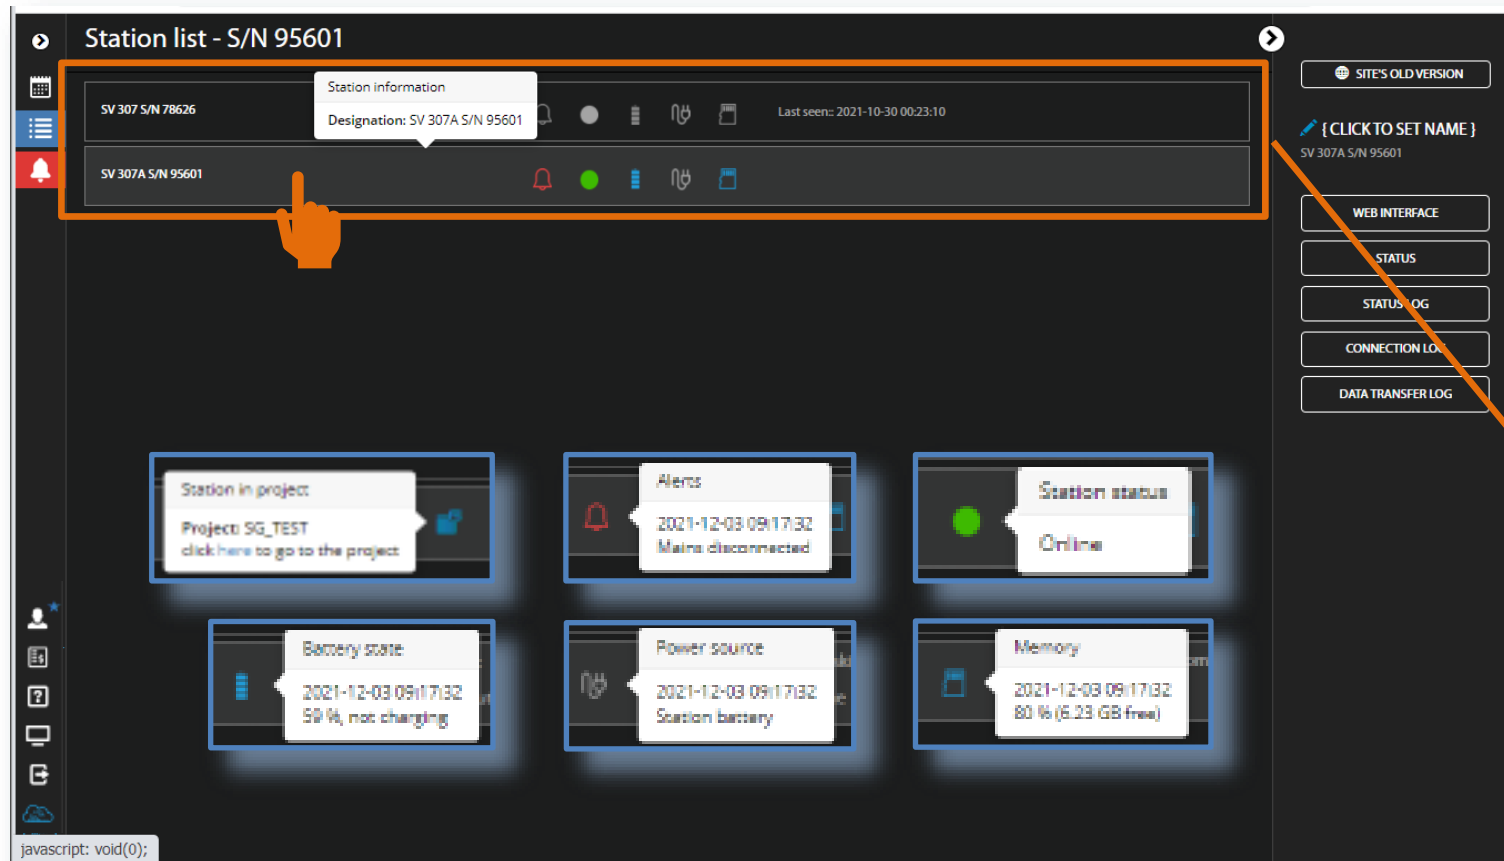



The station bar except the station name and its serial number includes five or six icons that indicate station states. When the station is disconnected from SvanNET all icons are of grey colour.

- Click the station name to display station information or status

If a station is connected to SvanNET the „bell” icon can be red if there are warnings or blue otherwise and the “mains” icon can be blue if there is mains power or grey otherwise.

The Tool panel provides some functions for station control. To switch the function, point cursor on the appropriate button (it will change its colour to blue) and click it.

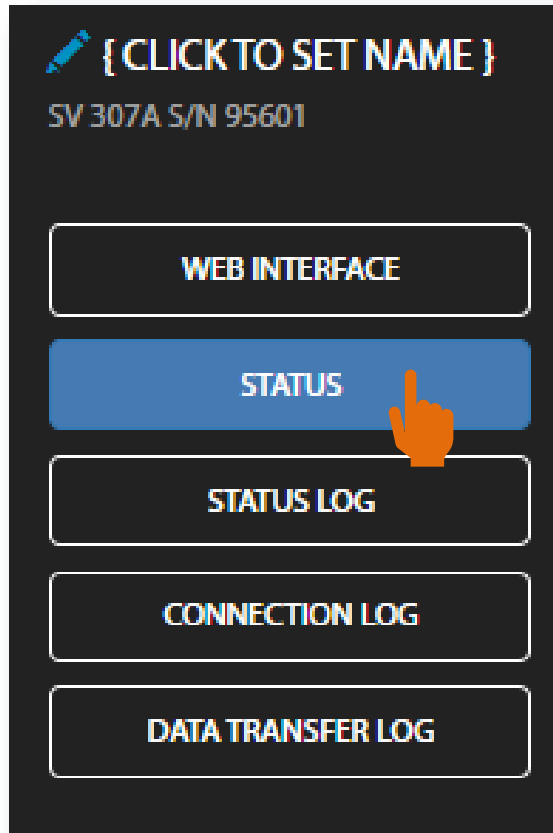


- Click  to set the new station name instead of the default.
- Click **WEB INTERFACE** to go to the **Live data** view (Chapter [2.4](#)) in which you can view measurement results and use additional tools to configure station parameters, download data files, start/stop measurements and perform station checking. This button is available for the stations connected to SvanNET.
- Click **STATUS** to go to the **Station** status view (Chapter [2.2](#)) in which you can check the station status, restart connection and configure station status alarms.
- Click **STATUS LOG** to go to the **Status log** view (Chapter [2.3](#)) in which you can check the history of station statuses.
- Click **CONNECTION LOG** to go to the **Connection log** view (Chapter [2.3](#)) in which you can check the history of station connections to SvanNET.
- Click **DATA TRANSFER LOG** to go to the **Data transfer log** view (Chapter [2.3](#)) in which you can check the history of data transfers (uploads).



**Note:** Further views depend on the type of instrument. In this manual, description of views for **SV 307A** monitoring station is given. The description of views for other instruments is given in their User manuals.

## 2.2. STATUS view





This view is used for checking the instrument status (firmware version, battery charging, memory capacity etc.), its connection status and configuring station status alarms.

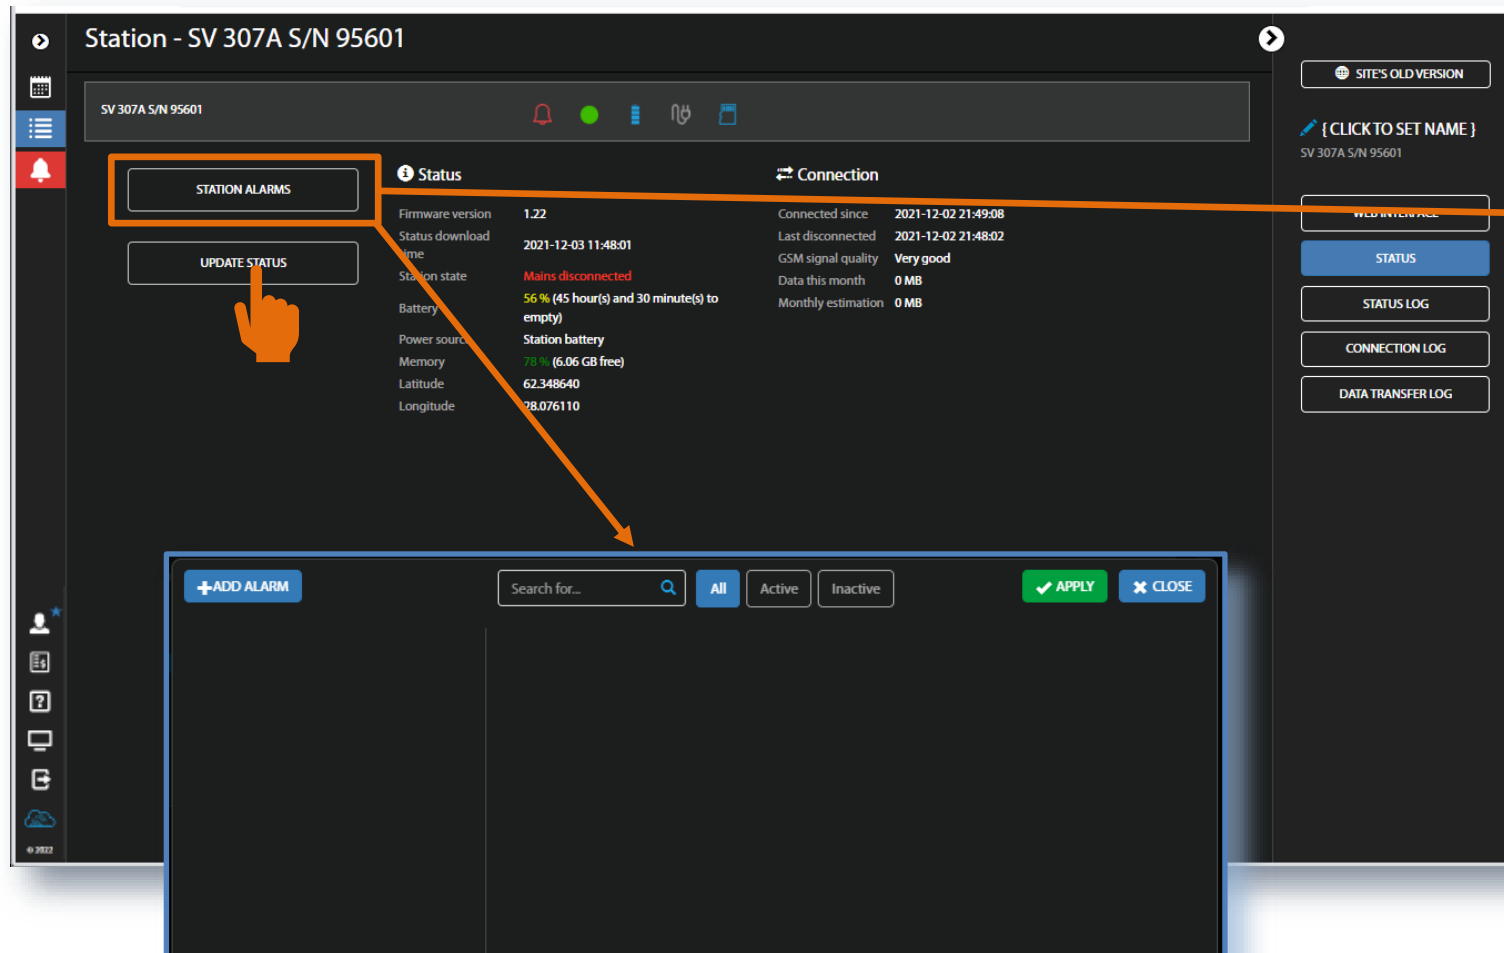

- Click **UPDATE STATUS** to update instrument's status.
- Click **STATIONS ALARMS** to configure station status alarms.

STATION ALARMS relate to the system conditions of the monitoring stations, such as battery status, connection status, memory status, etc. Alarms are based on CONDITIONS and relate to ACTIONS, that are default e-mails to the specified recipients, and refer to MEASUREMENT POINTS.

Click **+ADD ALARM**, to configure CONDITIONS, ACTIONS and MEASUREMENT POINTS settings. Alarm CONDITIONS can be defined in the EDIT CONDITION box, opened when you click the **Status** button.

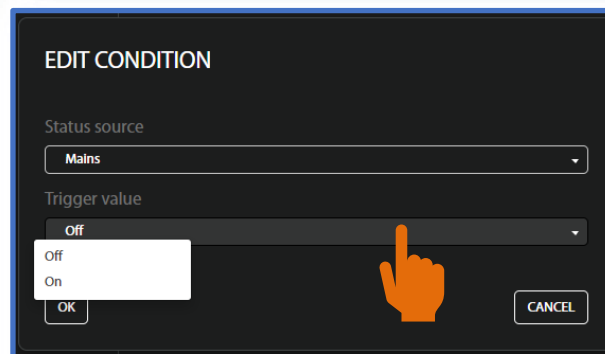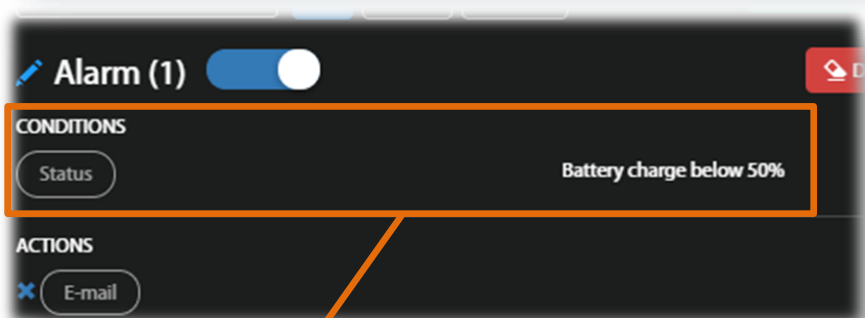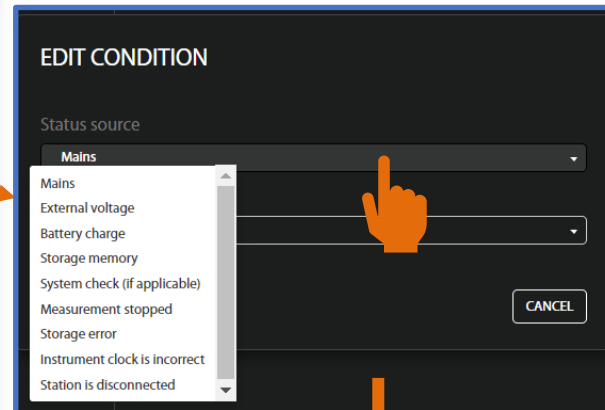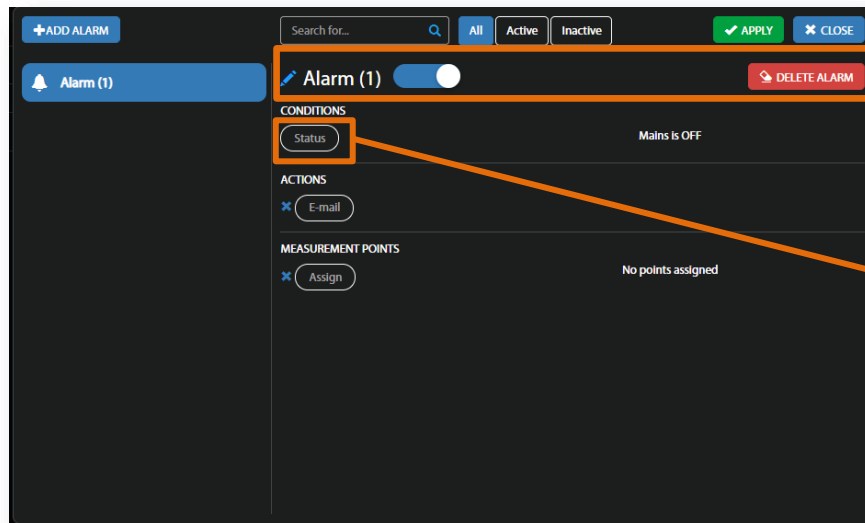

- Click **OK** and new CONDITION will be displayed in the CONDITIONS area.

- In this line you can rename, switch on/off or delete the Alarm.
- Click **Status source** and select: *Mains, External voltage, Battery charge, Storage memory, System check, Measurement stopped, Storage error, Instrument clock is incorrect, or Station is disconnected.*
- Click **Trigger value** and choose the required threshold level for the selected **Status source**.

ALARMS relate to ACTIONS, that are default e-mails to the specified recipients, and refer to MEASUREMENT POINTS.

The main interface shows the 'Alarm (1)' configuration. The 'CONDITIONS' section displays 'External voltage below 12.00 V'. The 'ACTIONS' section has an 'E-mail' button highlighted with an orange box. The 'MEASUREMENT POINTS' section has an 'Assign' button highlighted with an orange box. Two orange arrows point from these buttons to the 'EDIT E-MAIL RECIPIENTS' and 'ASSIGN STATIONS' dialog boxes respectively. The 'EDIT E-MAIL RECIPIENTS' dialog shows a text field with 'user1@svantek.com.pl; user2@svantek.com.pl'. The 'ASSIGN STATIONS' dialog shows a list of stations with toggle switches, where 'SV 307 S/N 34567' is selected. A third orange arrow points from the 'Assign' button to the 'MEASUREMENT POINTS' section of the main interface, which now displays 'user1@svantek.com.pl; user2@svantek.com.pl' and 'SV 307 S/N 34567'.

- Click the **E-mail** button to enter/edit e-mail recipients.

ACTIONS may have additional options depending on the selected Status source, e.g. **Start Measurement** for the *Measurement Stopped* Status source.

- Click the **Assign** button to assign alarm to the station(s).
- Made selections are displayed in the ACTIONS and MEASUREMENT POINTS sections.

Station Alarms description is given in Appendix A.

## 2.3. LOG views

**Status log - SV 307A S/N 95601**

Refresh icon | Date from... | Date to... | 30 | Page navigation: 1 / 1290

Date & time	Status	Battery	Power source	Charge / discharge time	Source voltage	Free space	GSM signal quality	Last system check	GPS Info
2020-07-27 13:22:11	OK	77 %	Mains	2 hour(s) and 0 minute(s) to full	14.9 V	14 GB	Very good (-71 dBm)	Speaker failed	Lat: 52.172730, Lon: 21.163890
2020-07-27 12:52:00	OK	69 %	Mains	1 hour(s) and 30 minute(s) to full	14.6 V	14 GB	Very good (-71 dBm)	Speaker failed	Lat: 52.172730, Lon: 21.163890
2020-07-27 12:36:58	OK	64 %	Mains	1 hour(s) and 42 minute(s) to full	14.6 V	14 GB	Very good (-69 dBm)	Speaker failed	Lat: 52.172730, Lon: 21.163890
2020-07-27 12:21:54	OK	59 %	Mains	2 hour(s) and 0 minute(s) to full	14.6 V	14 GB	Very good (-71 dBm)	Speaker failed	Lat: 52.172730, Lon: 21.163890
2020-07-27 12:06:37	OK	53 %	Mains	2 hour(s) and 18 minute(s) to full	14.6 V	14 GB	Very good (-77 dBm)	Speaker failed	Lat: 52.172730, Lon: 21.163890
2020-07-27 11:49:32	OK	48 %	Mains	2 hour(s) and 30 minute(s) to full	14.6 V	14 GB	Very good (-71 dBm)	Speaker failed	Lat: 52.172730, Lon: 21.163890

Buttons: WEB INTERFACE, STATUS, STATUS LOG, CONNECTION LOG, DATA TRANSFER LOG

**Connection log - SV 307A S/N 95601**

Refresh icon | Date from... | Date to...

Date & time	Result	Address	Version
2020-07-27 12:06:27	Success	37.248.214.81	SV 307 1.19.3
2020-07-27 11:59:49	Disconnected	37.248.161.78	SV 307 1.19.3
2020-07-27 09:23:43	Success	31.046.219	SV 307 1.19.3
2020-07-24 07:52:05	Disconnected	31.034.142	SV 307 1.19.3
2020-07-23 13:34:44	Success	31.046.44	SV 307 1.19.3
2020-07-23 13:22:07	Disconnected	37.248.208.60	SV 307 1.19.3
2020-07-23 10:58:52	Success	37.248.208.60	SV 307 1.19.3
2020-07-22 19:47:29	Disconnected	31.034.37	SV 307 1.19.3
2020-07-22 19:45:06	Success	31.034.37	SV 307 1.19.3
2020-07-22 19:04:39	Disconnected	31.040.121	SV 307 1.19.3
2020-07-20 19:26:44	Success	37.248.161.67	SV 307 1.19.2
2020-07-15 20:48:28	Disconnected	37.248.162.218	SV 307 1.19.2

Buttons: WEB INTERFACE, STATUS, STATUS LOG, CONNECTION LOG, DATA TRANSFER LOG

**Data transfer log - SV 307A S/N 95601**

Refresh icon | Date from... | Date to... | Monthly | Weekly | Daily | Hourly | 30 | Showing: 1 - 24

Current month: 3.52 GB Estimated: 7.28 GB - All times shown are expressed in Greenwich Mean Time

Date & time	Total transfer	Station upload	SvanPC++ upload	Direct web interface upload	SvanNET data
2021 December	3.52 GB	3.50 GB	0 bytes	0 bytes	26 MB
2021 November	852 MB	557 MB	0 bytes	0 bytes	294 MB
2021 October	216 MB	163 MB	0 bytes	0 bytes	53 MB
2021 September	202 MB	153 MB	0 bytes	0 bytes	49 MB
2021 August	85 MB	55 MB	0 bytes	0 bytes	30 MB
2021 July	204 MB	155 MB	0 bytes	0 bytes	48 MB
2021 June	154 MB	108 MB	0 bytes	0 bytes	45 MB
2021 May	46 MB	30 MB	0 bytes	0 bytes	15 MB

Buttons: WEB INTERFACE, STATUS, STATUS LOG, CONNECTION LOG, DATA TRANSFER LOG


There are three station logs, that register system events, connections and data transfer.

- Use these buttons to navigate through pages of records.
- Click here to refresh the log.
- In this field you can select the required period of records and maximum number of presented records.
- Select the period for data transfer presentation: **Monthly, Weekly, Daily or Hourly.**



## 2.4. WEB INTERFACE

**WEB INTERFACE** provides live data viewing, instrument controlling and configuring with the **VIEW**, **STATUS**, **CONFIGURATION** and **STORAGE** buttons.

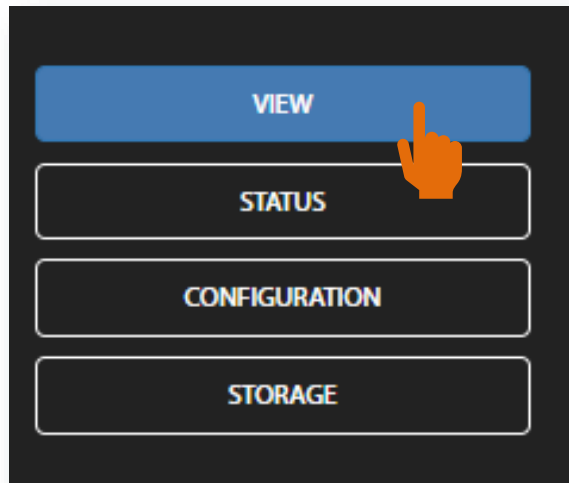

- The **VIEW** button switches you to the Live data view (Chapter [2.4](#)) in which you can view broadband results, 1/1 or 1/3 octave spectra and time-history results.
- The **STATUS** button switches you to the station status view (Chapter [2.4.2](#)) in which you can check the station status and to start/stop measurement.
- The **CONFIGURATION** button switches you to the station Configuration view (Chapter [2.4.3](#)) in which you can configure measurement and instrument parameters and perform calibration check.
- The **STORAGE** button switches you to the Storage view (Chapter [2.4.4](#)) in which you can download files manually.




**Note:** Content of the **Configuration** tabs depends on the selected parameters. The task of this manual is not the presentation of all possible combinations of parameters, but an indication of the principles of working with SvanNET.

### 2.4.1. VIEW results


The **VIEW** button opens the **Live data** view which includes tabs: **OVERVIEW** and **SPECTRUM RESULTS**.

The **OVERVIEW** tab displays the map with the instrument's position and current results:

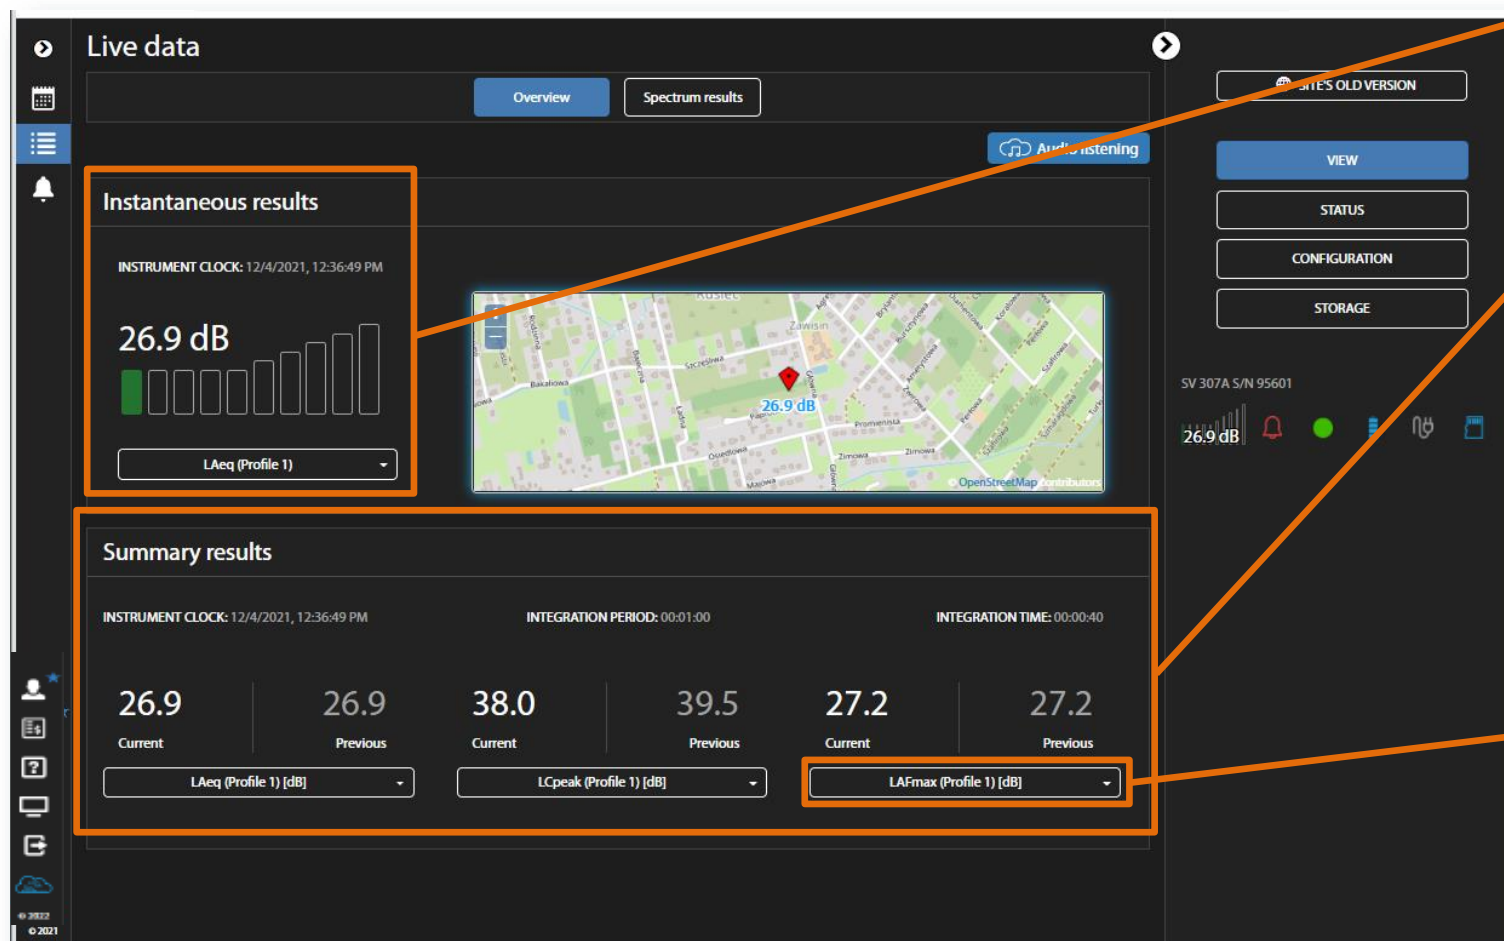

- **Instantaneous Results** calculated and refreshed with the time equal to 1 second and
- **Summary Results** for three profiles measured by INTEGRATION TIME and refreshed every second (**Current**) and by INTEGRATION PERIOD (**Previous**) and refreshed every integration period.
- Click the appropriate selector and choose the required result to be displayed.

The **SPECTRUM RESULTS** tab displays 1/1 or 1/3 octave spectra. Spectra are refreshed every second.

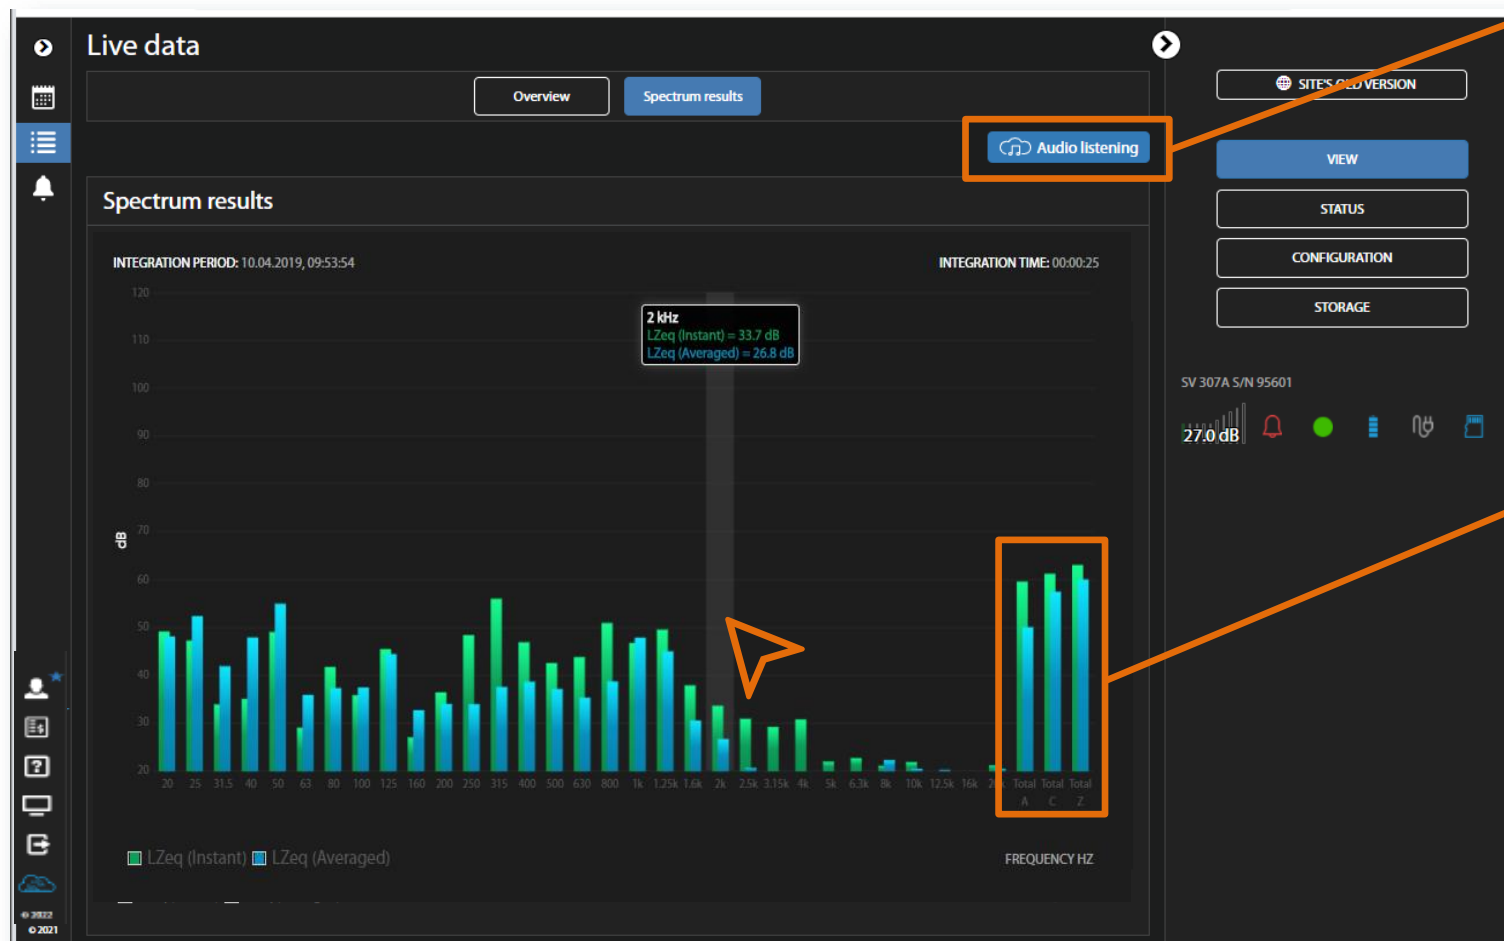


- Switch on the Audio listening if you have a valid license.
- Point your mouse cursor on the plot to readout the values of instantaneous and averaged results for each 1/1 or 1/3 octave band.
- Point your mouse cursor on the last three bars of the plot to readout the values of instantaneous and averaged three Total results.



**Note:** Spectrum can only be displayed, when Octave 1/1 or Octave 1/3 measurement functions has been selected in the Configuration → Measurement setup tab.

### 2.4.2. STATUS view

This view is used for checking the instrument status (firmware version, battery charging, memory capacity etc.), its connection status.

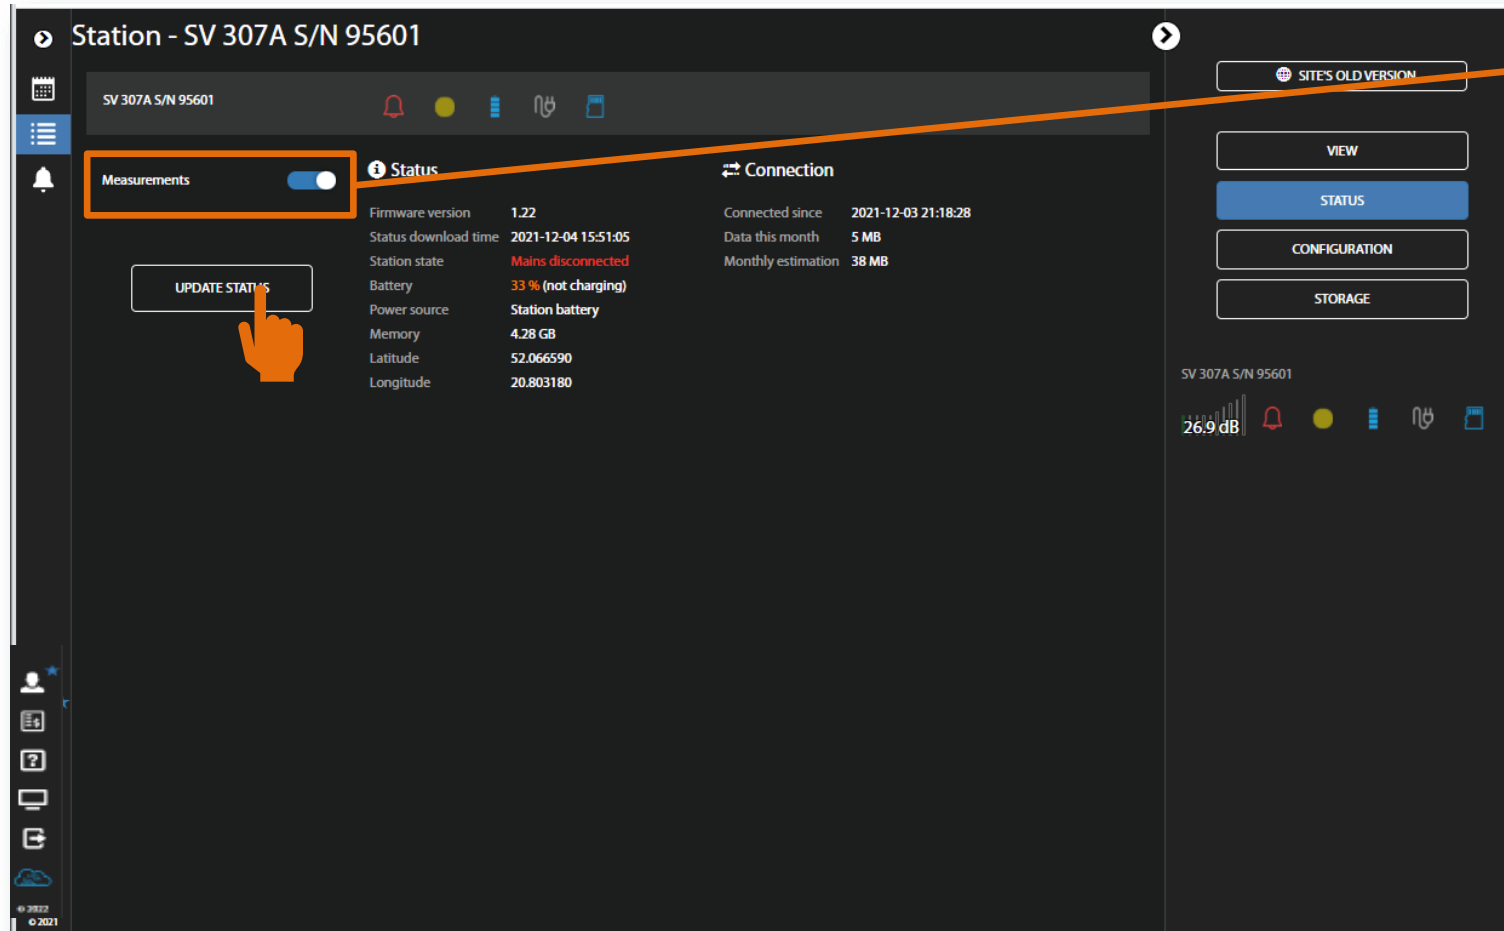

In this view you can:

- start/stop measurements,
- update instrument's status clicking the **UPDATE STATUS** button.

### 2.4.3. CONFIGURATION views


Configuration views consist of several sections that enable setting of: measurement parameters (**Measurement setup**), data saving (**Storage**), export of measurement data into CSV files (**CSV export**), audio recording (**Audio recording**), triggering events (**Event trigger**), calibration of the instrument (**Calibration**), settings auxiliary parameters (**Auxiliary settings**) and upgrading instrument firmware (**Firmware upgrade**). After changing settings, click **APPLY SETTINGS**.

#### Measurement setup

In this section, you can set:

- **Measurement function:** *Level Meter, Octave 1/1 or Octave 1/3,*
- **type of RMS/LEQ Integration:** *Linear or Exponential,*
- **synchronisation of measurement starts with RTC,**
- **Filter and Detector** type for profiles and spectrum,
- **switch Microphone correction On/Off** or select *Environment* or *Airport* compensation,
- **RLeq rolling windows.**

## Storage

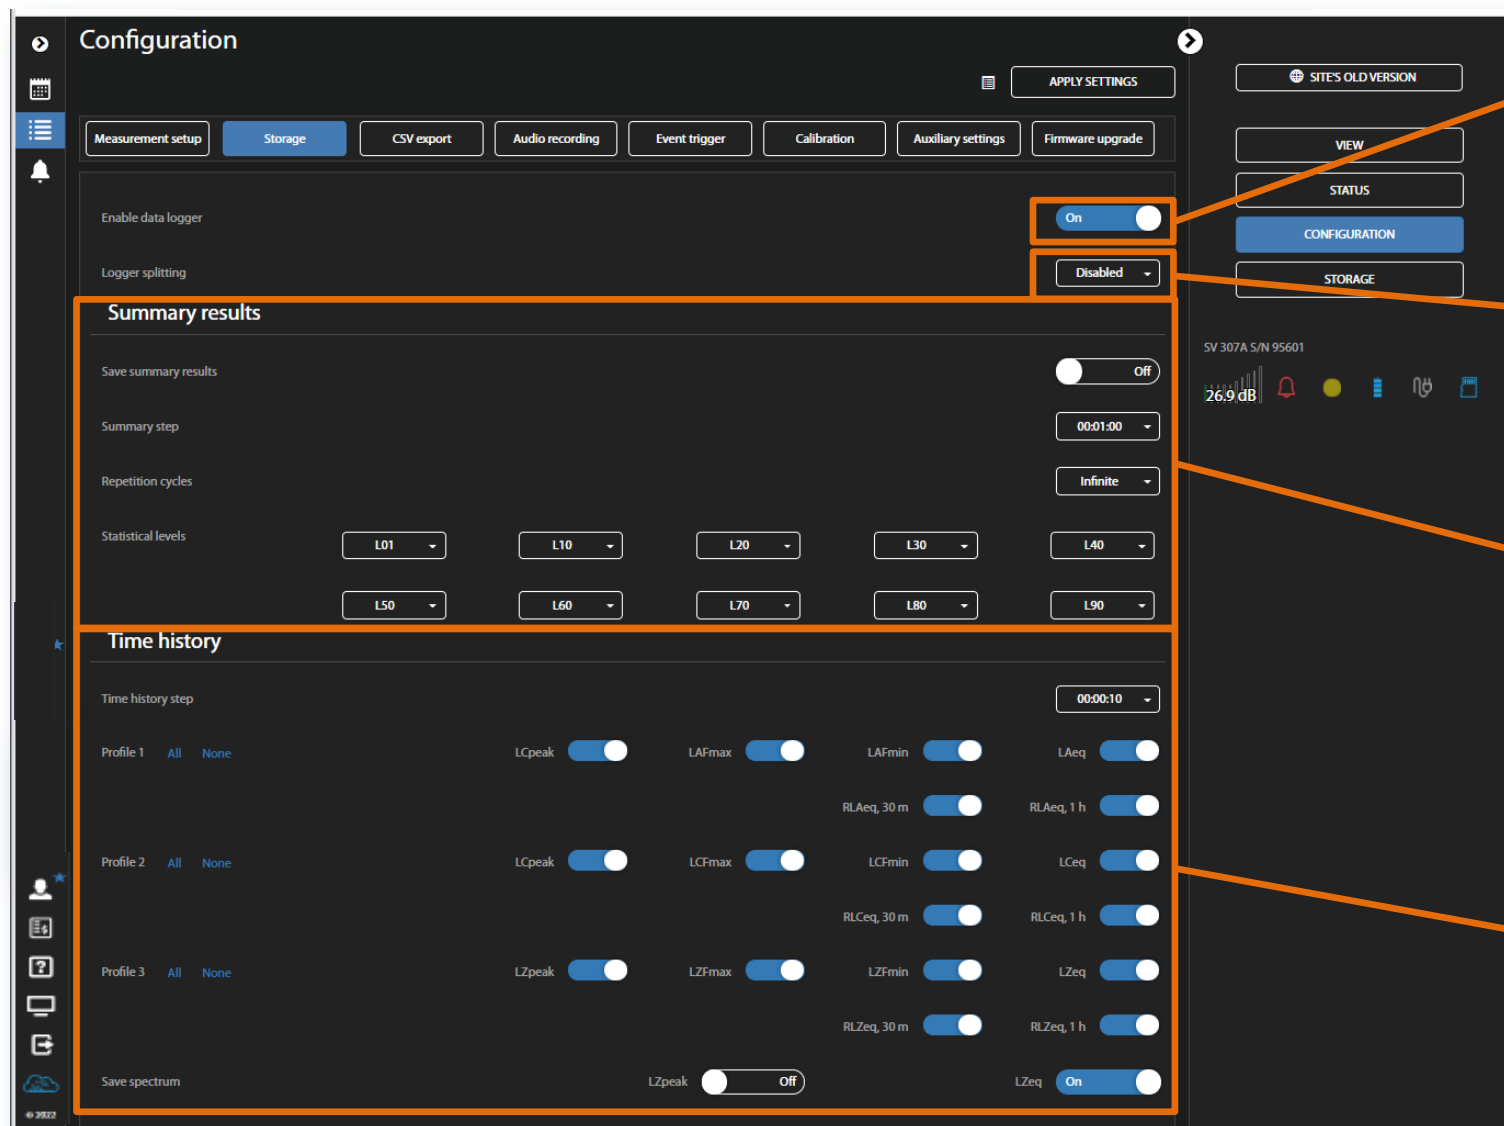

In this section, you can:

- enable data logging,  
Without enabling data logger no data files will be created.
- enable logger file splitting mode and select its type  
(Every 15m, Every 30m, Every 1h or Every day).
- set **Summary results** parameters: step of measurement and logging (**Summary step** equal to Integration period), **Repetition cycles** and **Statistics levels**,
- set **Time history** results parameters: step of measurement and logging (**Step**), results to be logged, including spectra.




If you enable saving Summary results, you can:

- switch on saving Profile results and select Profile results to be saved,
- switch on saving of the Overload Time,
- select type of spectra to be saved,
- switch on saving statistics and select statistics for profiles to be saved,
- switch on saving Profile Histogram.

## CSV export

In the **CSV export** section, you can configure direct export of measurement data into CSV files (Comma Separated Values) and saving them in the instrument's memory.

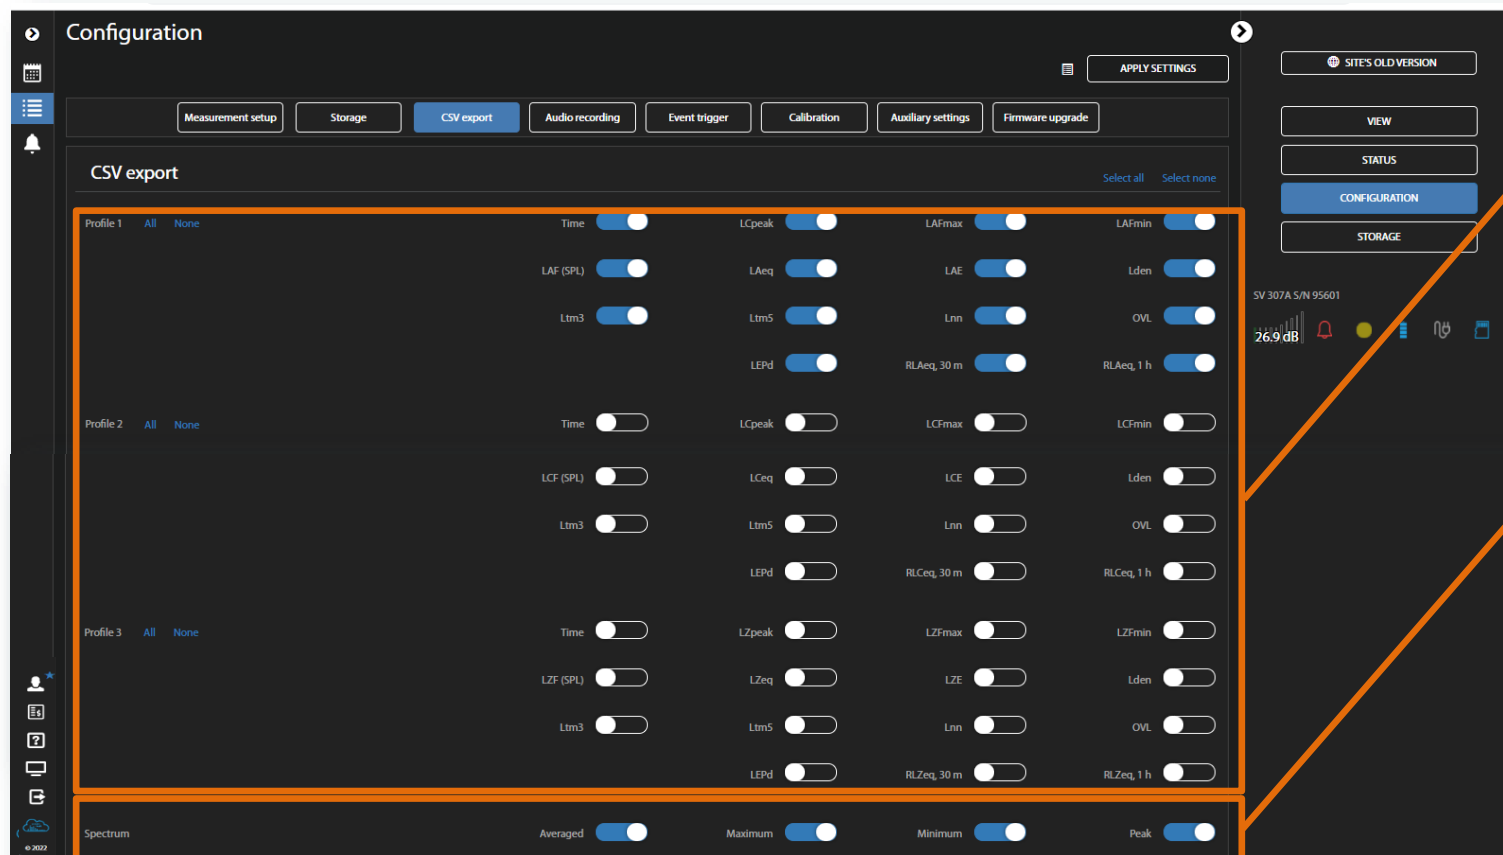

- You can select results to be exported for each profile individually.
- If the **Octave 1/1** or **Octave 1/3** function is enabled, **Averaged**, **Maximum**, **Minimum** and **Peak** spectra for each Integration period can also be exported in the CSV format.




**Note:** CSV files can be quite large, and it is advised to use this feature when absolutely necessary.



## Audio recording

In the **Audio recording** section, you can configure an audio signal recording in a separate \*.wav type file.

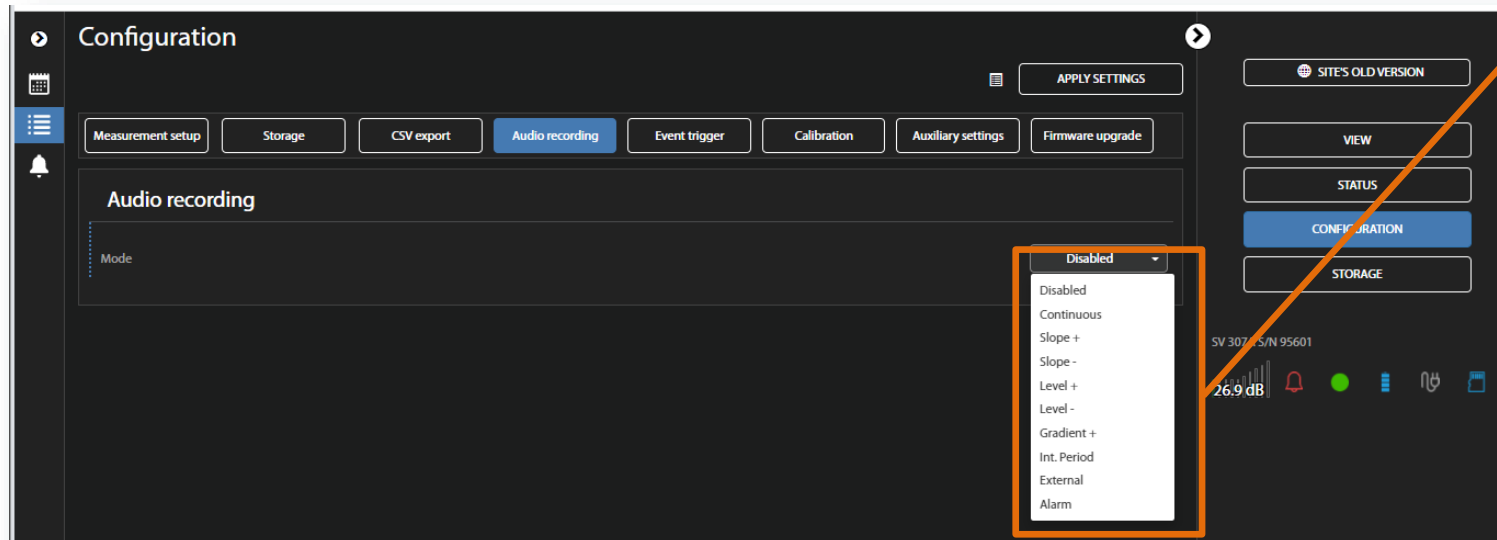


- To enable the audio recording, select the type of audio recording trigger (**Mode**): *Continuous, Slope+, Slope-, Level+, Level-, Gradient+, Int. Period or External.*


In the *Continuous* mode, the recording starts with the measurement start and stops with the measurement stop.

In the *External* mode, the recording starts from the external signal on the I/O socket of the instrument.

In other modes some trigger condition should be fulfilled.

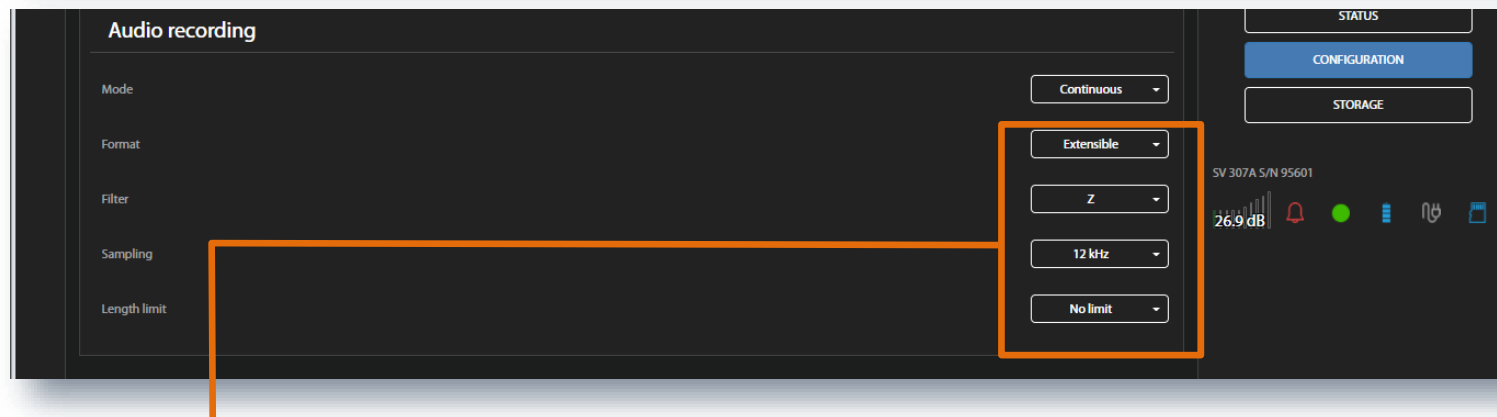

- General recording settings: **Format** (*PCM, Extensible or A-law compression*), **Filter** (*Z, A, C, B*), **Sampling** frequency (*12kHz, 24kHz or 48kHz*) and **Length limit** (*No limit, 1m .. 8h*).

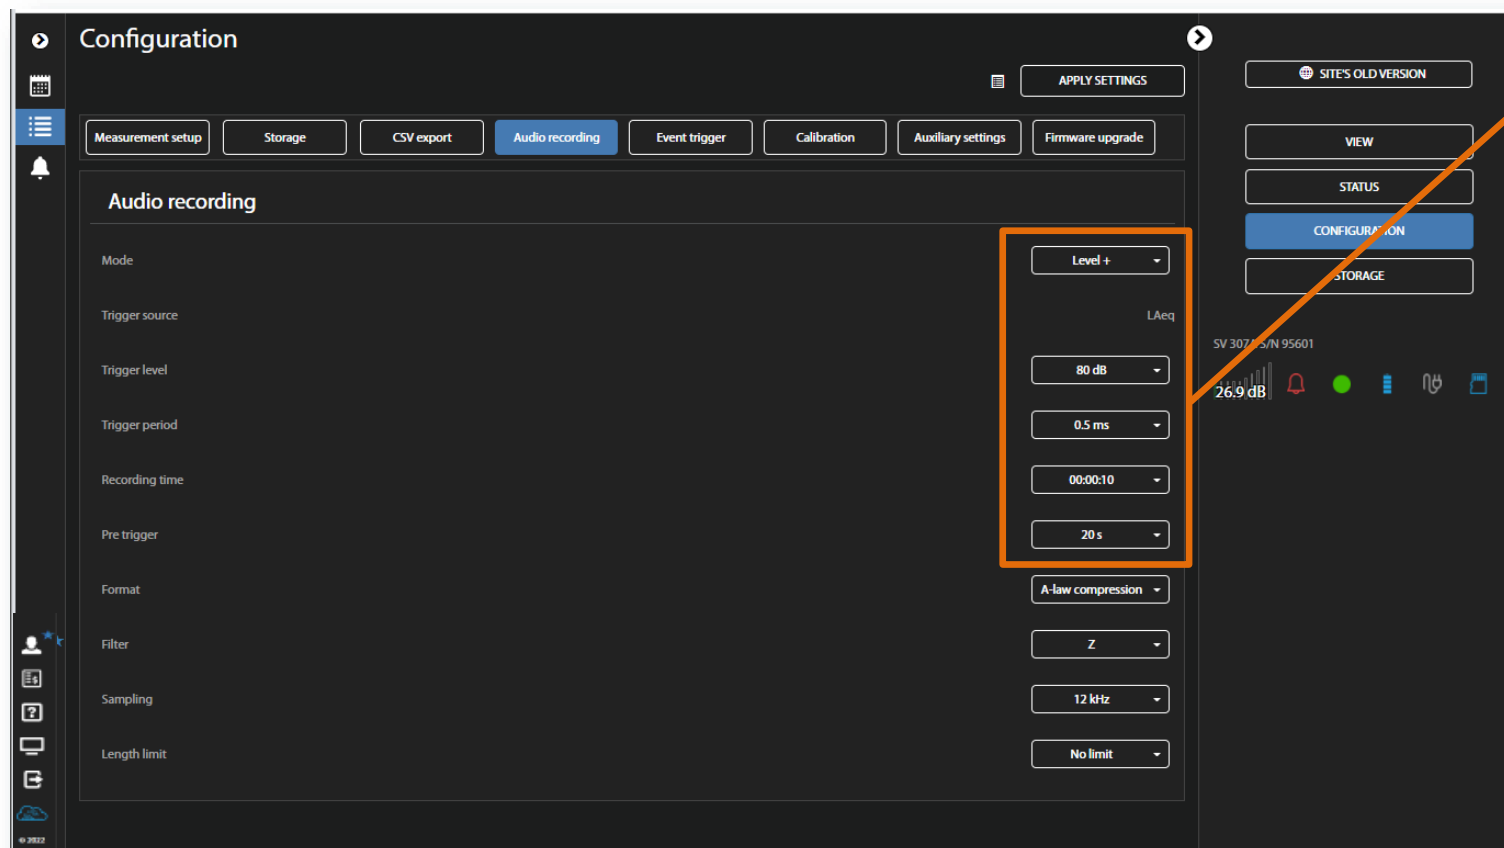

For example,


- *Level + / Level –* modes mean that the audio recording starts when the value of the **Trigger source** (*LAeq*) measured in the first profile by **Trigger period** (*Logger step, 0.5 ms, 0.1 s or 1 s*) is greater/lower than **Trigger level**. In other cases, the recording doesn't start, but if it has already been started, it can be continued during the **Recording time**.



If during the **Recording time** a trigger condition appears, the recording will be prolonged for another **Recording time** from the moment of that trigger condition and so on. If during next recording time there are no triggers, the recording will be stopped after the last trigger plus **Recording time**.

For modes *Slope, Level, Gradient* and *Int. Period* you can start recording prior the trigger condition. To do this set **Pre trigger** to 1 s, 2 s up to 8 s.

## Event trigger

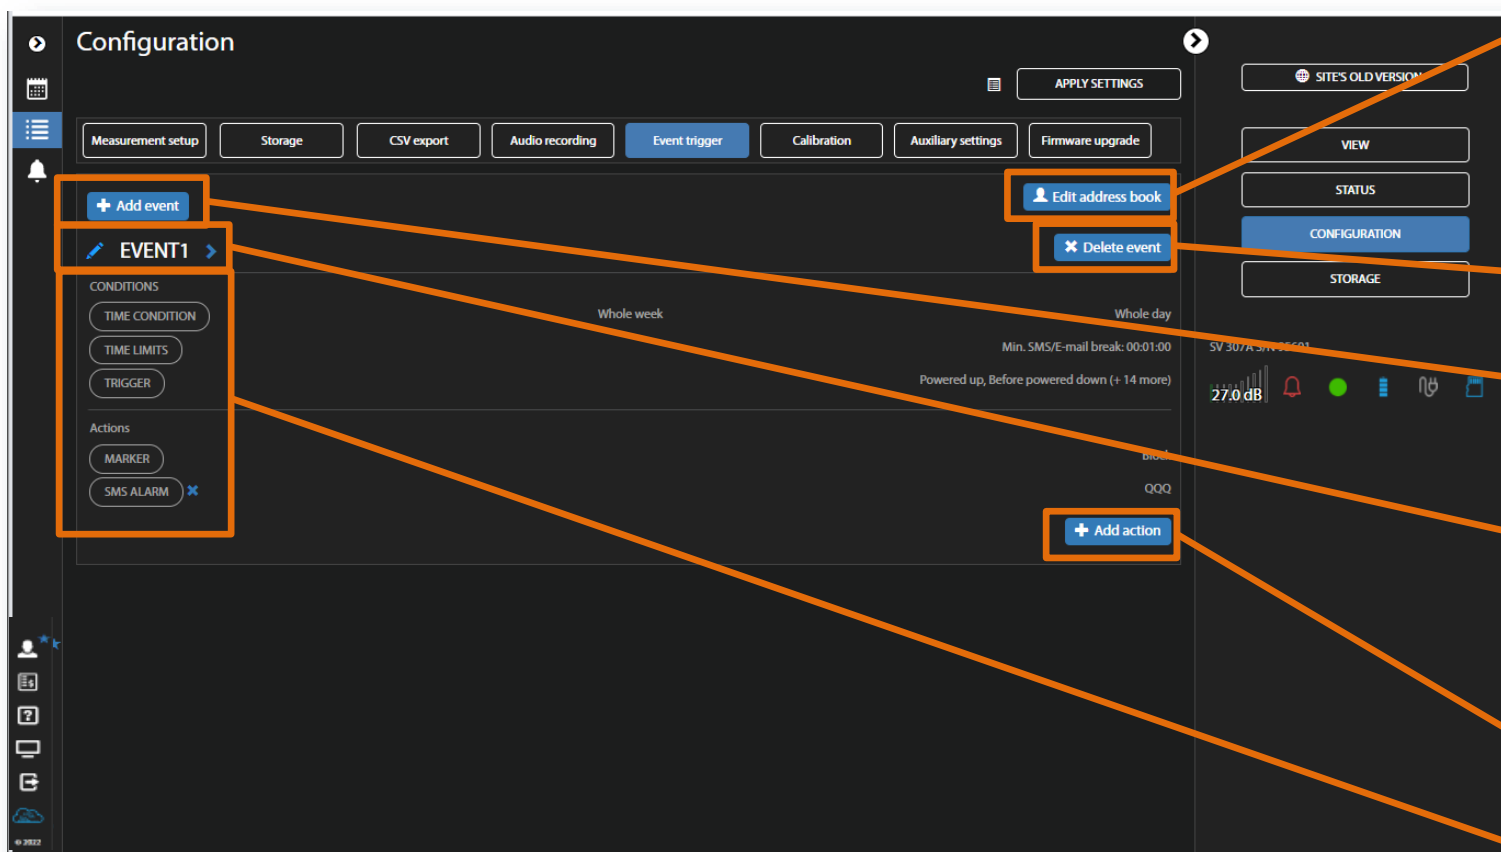In this section you can configure events for triggering audio recording and different alarms. Events are specified as a combination of superimposed **CONDITIONS** (logical AND) such as specific time intervals (**TIME CONDITION**) in which measurement threshold levels are exceed or system events occur in logical OR (**TRIGGER**) taking into consideration minimum period of break between SMS and/or E-mail notifications (**TIME LIMITS**). Each Event may be connected with special actions (**Actions**) such as: block marker recording to the logger file (**MARKER**), audio signal recording to the wave file (**AUDIO**), generation of an alarm signal on the I/O socket (**I/O ALARM**), sending SMS with alarm notification (**SMS ALARM**) or sending e-mail with alarm notification (**E-MAIL ALARM**).



- Click **Edit address book** to edit or add new contacts for sending alarm notifications,
- click **x Delete event** to delete the event,
- click **+Add event** to add new event section,
- click  to rename the event and click , to hide the event settings,
- click **+Add action**, to add new action,
- edit **CONDITIONS** and **Actions** in this section.

### TIME CONDITION

Monday	<input checked="" type="checkbox"/>	Whole day	<input type="checkbox"/>
Tuesday	<input checked="" type="checkbox"/>	Start (hh:mm)	00:00
Wednesday	<input checked="" type="checkbox"/>	Stop (hh:mm)	00:00
Thursday	<input checked="" type="checkbox"/>		
Friday	<input checked="" type="checkbox"/>		
Saturday	<input checked="" type="checkbox"/>		
Sunday	<input checked="" type="checkbox"/>		

OK CANCEL

### TIME LIMITS

Min. SMS/E-mail break (hh:mm:ss)

00:01:00

OK CANCEL

## Configuring Conditions

If you click the **TIME CONDITION** button the TIME CONDITION configuration box will pop-up. In this box, you can select days and periods for events registration.

If you click the **TIME LIMITS** button the TIME LIMITS configuration box will pop-up. In this box, you can select minimum period of break between SMS and E-mail notifications. This enables to avoid hail of alarms in case of frequently recurring events.

Press OK to confirm settings.

### TRIGGER CONDITIONS

No conditions

Add

+ Threshold + Meteo + System

OK CANCEL

### SYSTEM CONDITION

Title		Type	
Measurement start, Low storage space (+ 2 more)		System	
Powered up	<input type="checkbox"/>	Before powered down	<input type="checkbox"/>
Measurement start	<input checked="" type="checkbox"/>	Measurement stop	<input type="checkbox"/>
Mains connected	<input type="checkbox"/>	Mains disconnected	<input type="checkbox"/>
Low battery	<input type="checkbox"/>	Battery OK	<input type="checkbox"/>
Low ext. battery	<input type="checkbox"/>	Ext. battery OK	<input checked="" type="checkbox"/>
Low storage space	<input checked="" type="checkbox"/>	Storage OK	<input type="checkbox"/>
System check	<input type="checkbox"/>	Live check	<input type="checkbox"/>
Instr. error	<input type="checkbox"/>		
Meteo on	<input checked="" type="checkbox"/>	Meteo off	<input type="checkbox"/>
Device Tilt	<input type="checkbox"/>	Device Vertical	<input type="checkbox"/>
Vibration	<input type="checkbox"/>		
Location change	<input type="checkbox"/>		

OK CANCEL

If you click the **TRIGGER** button, the TRIGGER CONDITIONS configuration box will pop-up. In this box, you can add the condition type: **+Threshold**, **+Meteo** or **+System**. These conditions are mutually exclusive for the same event.

The System type trigger activates the event when some of the system conditions appear.

You can select several or all conditions presented in the SYSTEM CONDITION configuration box

### THRESHOLD CONDITION

**Title** LAeq, 1 s (Profile 1) >= 75 dB

**Type** Level

**Source** LAeq, 1 s (Pr 1)

**Trigger count** Continuous

**Min. duration** 00:00:00

**Threshold** 75 dB

OK CANCEL

The Threshold type trigger activates the event when some result (**Source**) exceeds the **Threshold** level under **Trigger count** condition: if Trigger count is **Continuous**, exceeding the threshold level must last longer than **Min. duration** or such exceeding will be repeated at least several times (1 time, 2 times, ... 10 times).

The selected result will be compared with the threshold level, defined in the **Threshold** position.

### ADD EVENT ACTION

+ Audio + I/O alarm + SMS alarm + E-mail alarm

CANCEL

### EDIT SMS ALARM ACTION

Recipients

+ Add recipient

OK CANCEL

### ADDRESS BOOK - SELECT CONTACT

Name	Phone number	E-mail	
+ User 1	+4811111111	user1@svantek.com	
+ User 2			

+ Add contact


OK CANCEL

## Creating Actions

To create new action, click **+Add action** and in the ADD EVENT ACTION box, click the action you wish to add and to configure: **Audio** (audio signal recording), **I/O alarm** (generation of the positive voltage at the instrument I/O socket), **SMS alarm** or **E-mail alarm**. SMS and E-mail alarms require selecting the recipients from the ADDRESS BOOK.

After occurrence of the event, an **Audio** action will be performed during the time the event is active, other actions - at the event's beginning.

## Calibration

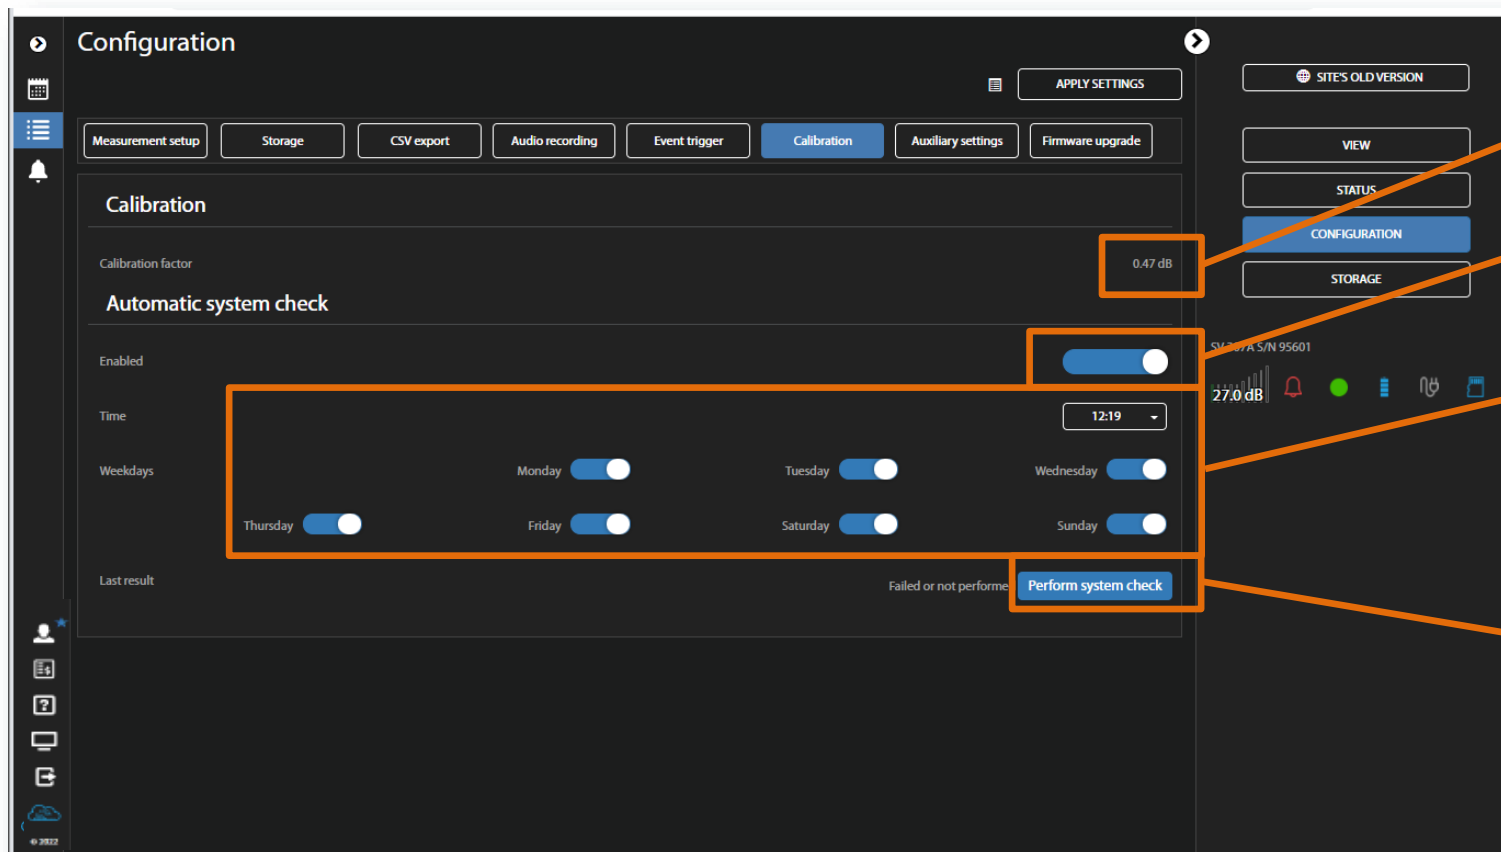

In the **Calibration** section, you can:

- check the current calibration factor,
- switch on the **Automatic system check** and
- set time and days of the week when the system check will be performed automatically,
- manually **Perform system check**.

When **Automatic system check** is enabled the calibration factor of the instrument will be periodically verified using the built-in speaker.



**Note:** The system check is not a calibration. During Automatic system check procedure, a calibration factor is not updated.

## Auxiliary settings

Configuration

APPLY SETTINGS

SITE'S OLD VERSION

VIEW

STATUS

CONFIGURATION

STORAGE

Measurement setup

Storage

CSV export

Audio recording

Event trigger

Calibration

Auxiliary settings

Firmware upgrade

Station descriptions

Station name

Project name

Location name

Geolocalization

Latitude

Longitude

External device

External device

GPS

Gps enabled

Powering

External battery

Battery charging mode

Mittauspaikka\_1

Projekti\_1

Palokka

52.06634

20.8028

None

On

Off

Full capacity

SV 307A S/N 95601


26.9 dB

In the **Auxiliary settings** section, you can:

- enter **Station description**: **Station name**, **Project name** and **Location name**,
- enter the instrument's geographical location in Latitude and Longitude coordinates (if GPS is enabled),
- select the **External device**: *None*, *Meteo-SP 275* or *Meteo-ES 642*,
- enable/disable GPS,
- configure power mode: enable/disable **External battery** and set **Battery charging mode** (*Full capacity* or *Optimized*).

## Firmware upgrade

In the **Firmware upgrade** section, you can upload new firmware on the instrument's SD-card and perform upgrade process remotely.

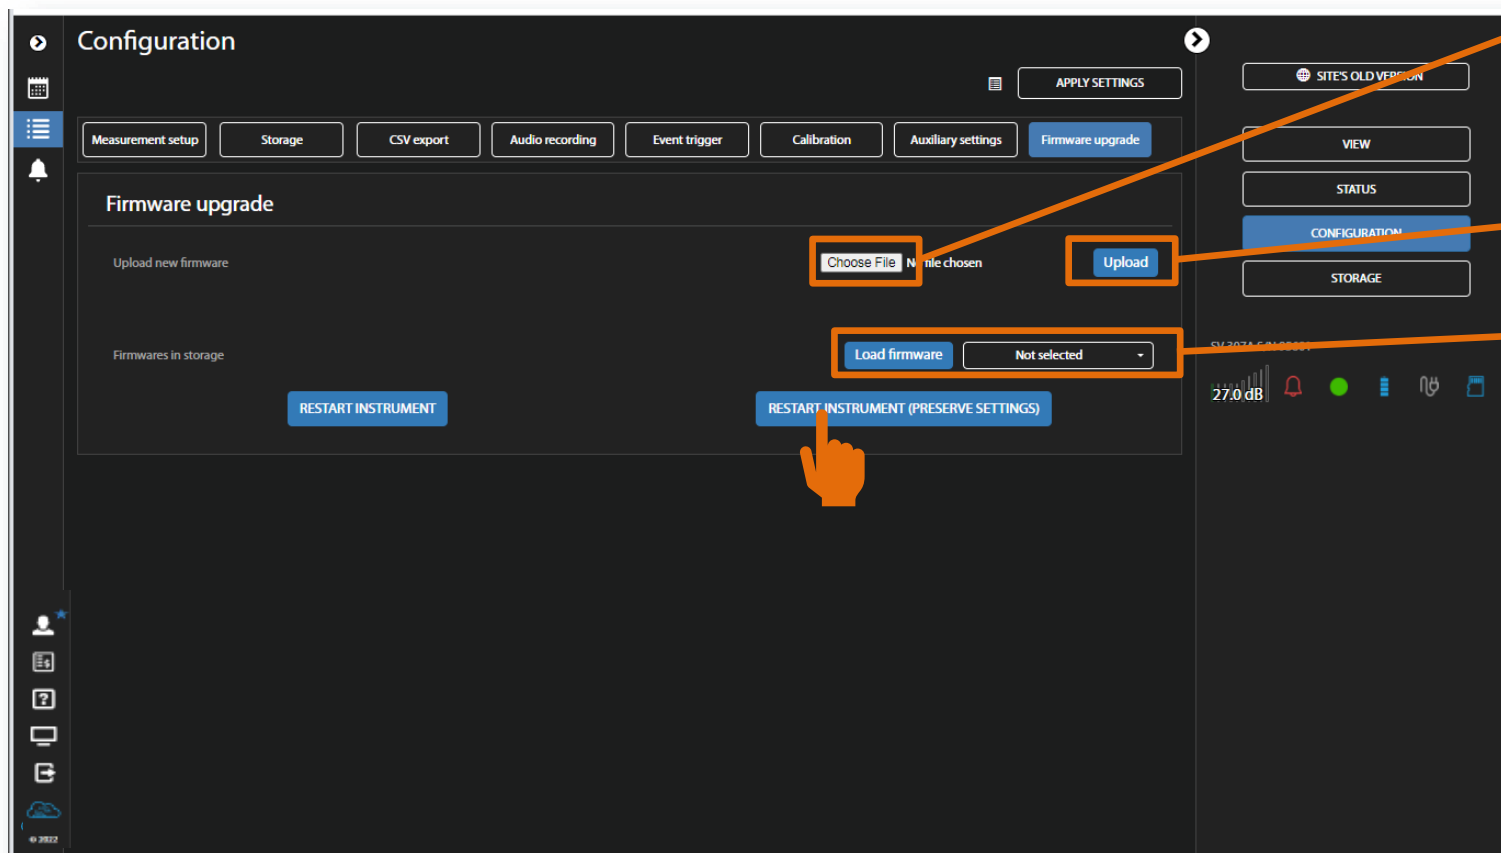

- Click **Choose file** and select the new firmware \*.bin file on the PC.
- Click **Upload** to upload the selected file.
- After the upload is finished select new firmware package in the firmware selector and click **Load firmware**.
- Click **RESTART INSTRUMENT** or **RESTART INSTRUMENT (PRESERVE SETTINGS)** to finalize the process and wait 60 seconds for the connection to renew. The measurements will restart automatically.




**Note:** Before upgrading the instruments firmware, make sure the measurement is stopped.




#### 2.4.4. STORAGE view

The **Storage** view presents a list of files saved in the instrument's memory. The list includes only files from a single directory on the memory card and it initially shows the content of the current working directory.

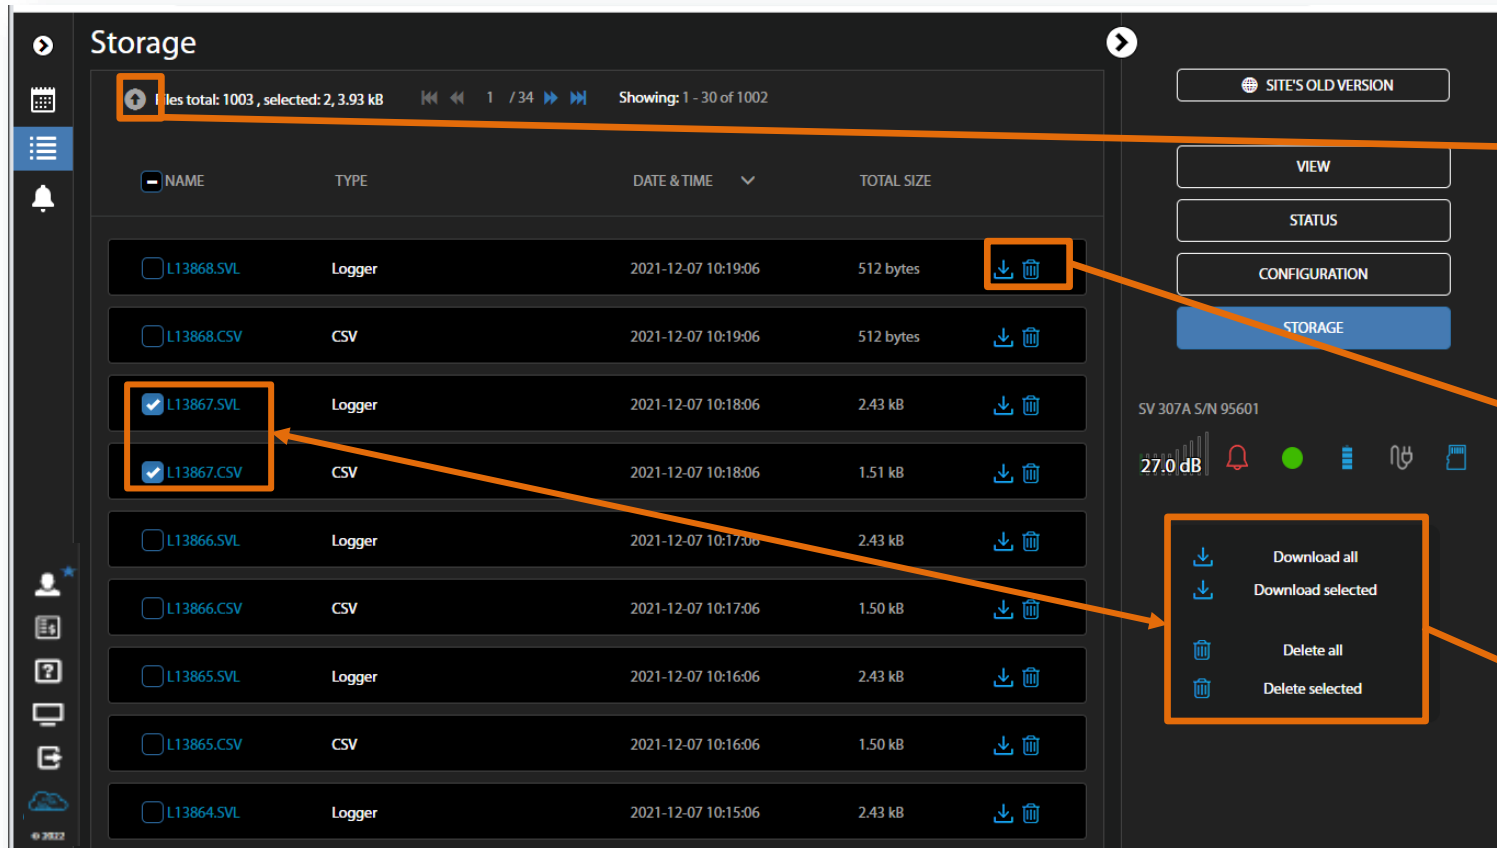

In this view, you can:

- navigate through the folder structure by clicking the “folder up” button .
- download or delete individual files by clicking the icons on the file line,
- select several or all files and download or delete selected files or all files,



**Note:** In the case the **AUTOMATIC DOWNLOAD** function is switched on the **Storage** view becomes inactive.

### 3 SVANNET AUTOMATIC MONITORING SERVICES

*Automatic Monitoring Service* offers fully automated management of multi-point noise, vibration and dust monitoring tasks with the use of **Project list** tools such as Automatic Files Download, Data Storage, Advanced Alarms, Data Sharing and Reporting enable unattended monitoring.

Automated functions include threshold alarms, status reports, maintenance of remote connection and measurement runs, devices memory management, data files download and export, periodical reporting and more.

Automatic Monitoring Services enables creation of websites with either public or restricted access. The website can be customised with a logo and individual name. The preview content such as map and measurement results is fully configurable in SvanNET. Access to the website can be either open to the public or protected by a password.

The Audio steaming function that works with new generation noise monitoring stations independently of the WAV audio recording can be activated via a SvanNET license.

#### **Access levels**

SvanNET allows users to create different Projects each with a different Location and Level of Security that prevents users from getting access to information they're not authorized to see. Multiple levels of security (MLS) for different users account offers next levels: Administrator, Manager, Guest and Token.

When you purchase Svantek device that communicates with the Internet, you automatically become the Owner and then you can manage them as Administrator. As an Owner you can create and delete projects, assign Administrator, Manager, Guest or Token rights for the projects. You can also create new share access and define permissions for it.

#### **Data Storage**

The main advantage of Data Storage is a quick access to the measurement data that can be conveniently browsed and downloaded automatically in specified time points. The data is stored on the Microsoft Azure™ cloud platform ensuring reliable connection on the global scale.

## Automatic Files Download (AFD)

Automatic Files Download maintains the remote connection with monitoring stations and downloads the measurement data for each project point separately. AFD ensures that data is safely downloaded and shared before clearing the memory in the monitoring stations. AFD can be integrated as the content provided for customized websites - it can export data to FTP server both in the original Svantek format or converted to the CSV text format. The uploaded data can be easily used as the user's website content.

## Advanced Alarms

SvanNET Projects tools are capable to analyse data files downloaded by AFD in order to generate E-mail Alarms based on exceeding threshold levels during specified time periods (e.g. Leq for the day and at night). System is flexible enough to alert different people depending on the day of the week or time of day.

## Reporting

The functionality of WYSIWYG (What You See Is What You Get) report templates allow the configuration and saving of the view of measurement data in a printable form. Users can create several templates consisting of texts, charts and tables for each measurement project, which in practice allows the creation of different reports based on the same measurement data.

## Automatic Reporting

This function allows users to create reports automatically based on previously configured templates and sending them to the specified recipients periodically.


## Data Sharing


Data Sharing allows other SvanNET users access to selected Projects. Multiple levels of security (MLS) for different user accounts offers the option to limit access to three levels: Administrator, Manager and User.



**Note:** To browse results in Project VIEW, generate reports, alarms, share data within the Automatic Monitoring Service module, the Automatic Files Download function must be enabled and properly configured – see example in Appendix C.


### 3.1. Project list

To open the **Project list**, click  on the Main Panel. In this list you can view the basic information about the project and measurement points as well as statuses of measuring devices included in the project. Here you can create a new project or use tools dedicated to the selected project. The tool panel at the right side is associated with the selected Project. The content of the tool panel depends on the Access level.

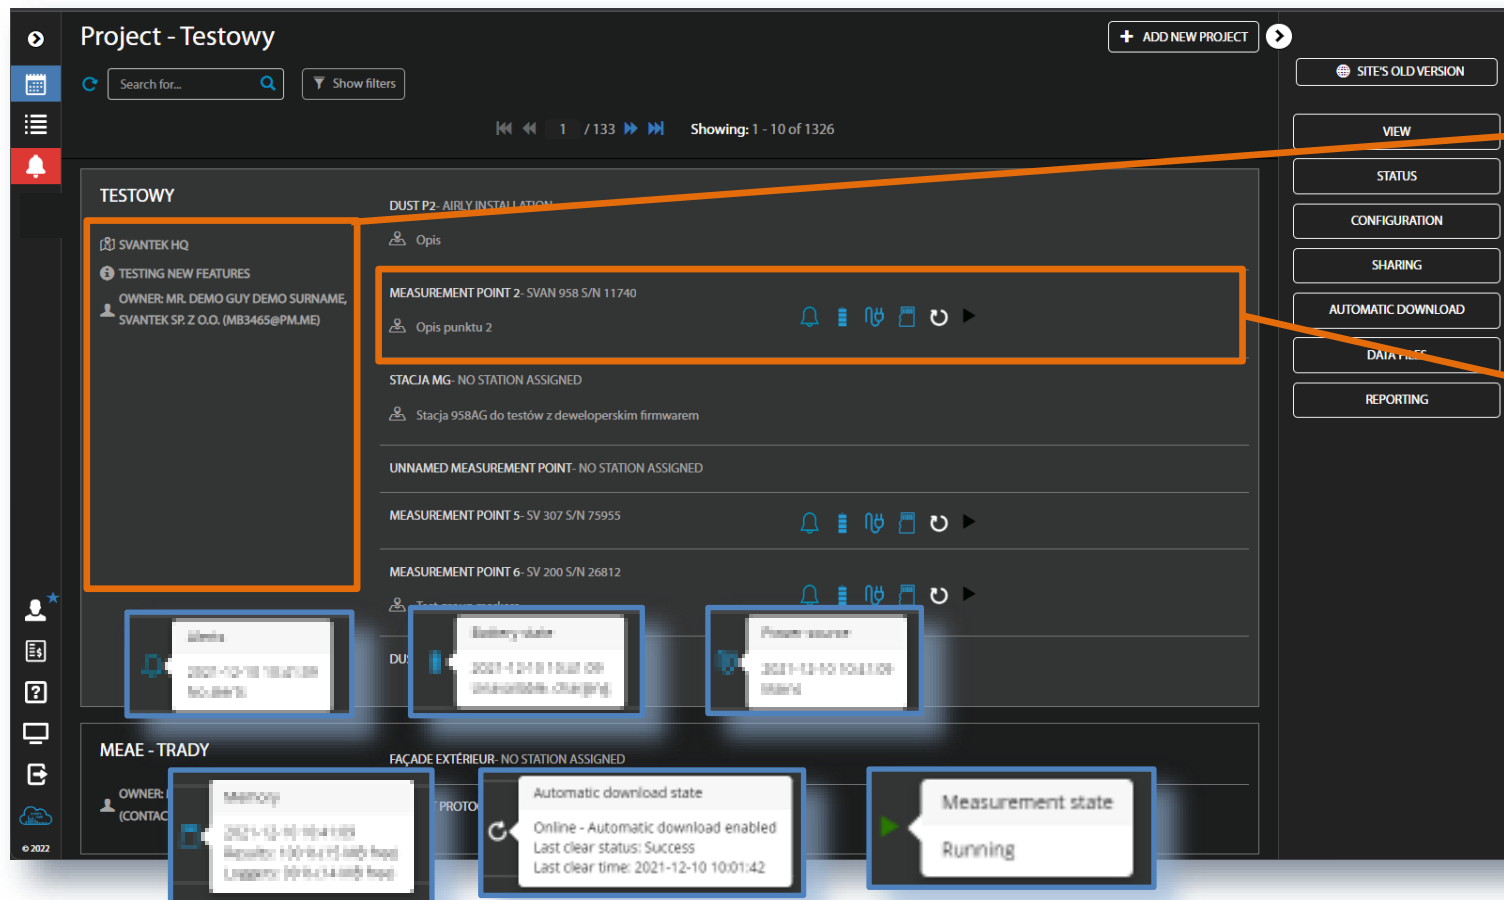

Each project section includes:

- Project credentials: project name, place of measurement, short description and user access level.
- Description of measurement points: point name, instrument type, other information and instrument status icons: alarms, internal battery, external power, memory, automatic download and measurement run.

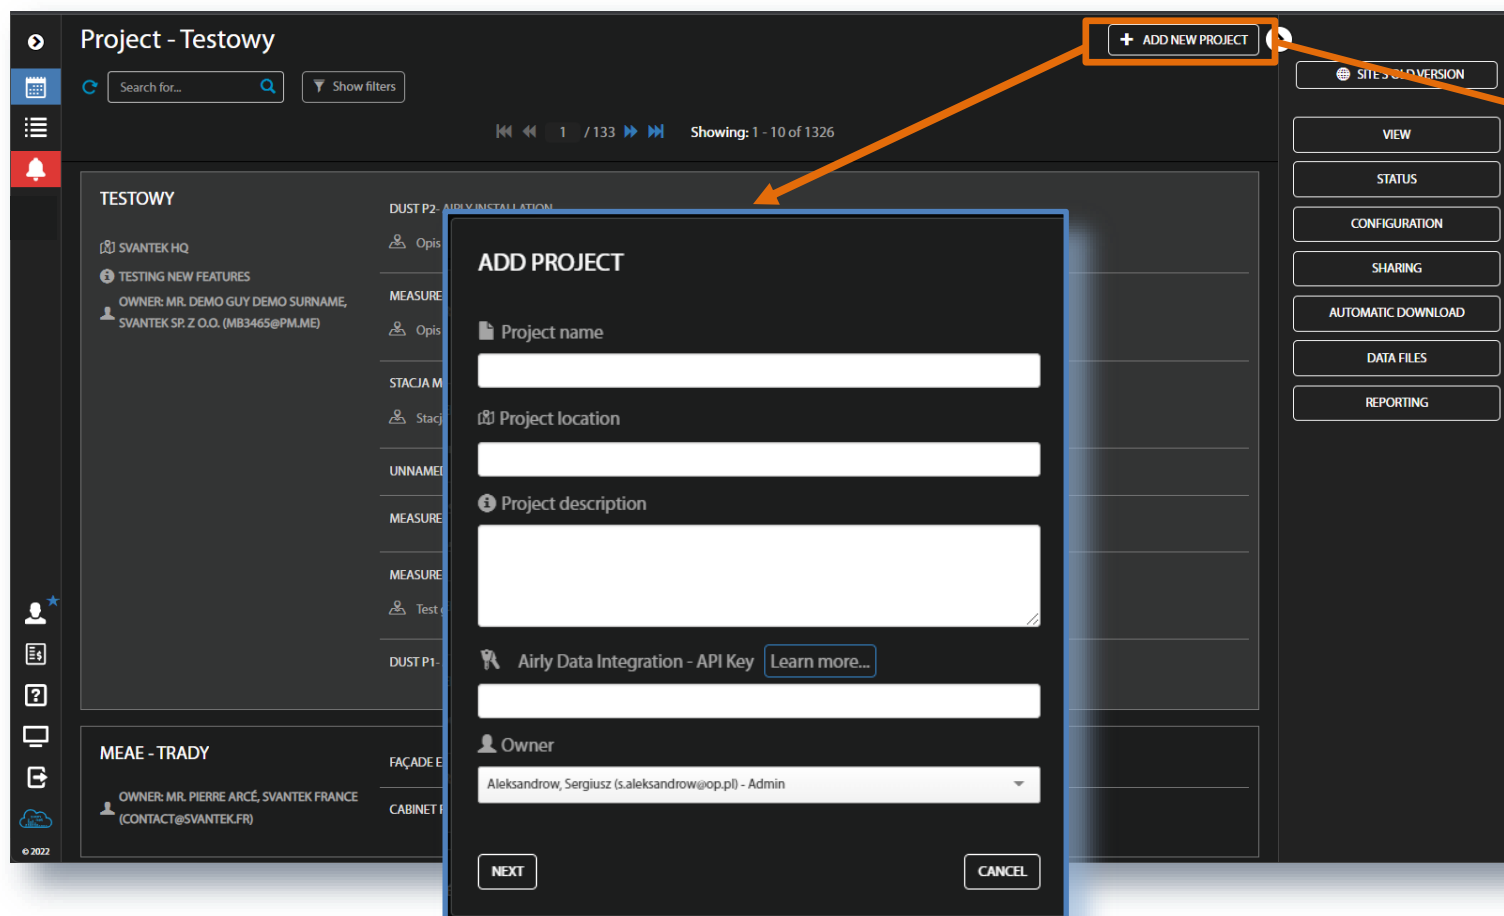


To add new project:


- Click **+ ADD NEW PROJECT** and in the ADD PROJECT dialog box, enter **Project name** and **Project location**, give a project description, enter an Airly Data Integration - API Key and select the Owner.
- Click **NEXT** to go to the measurement point settings in the ADD MEASUREMENT POINT box.

Airly is an external platform that offers weather & dust data from network of Airly sensors. This data can be connected to SvanNET project to provide weather and air pollution information to nearby measurement points. To use it, an Airly account must be created and API key provided as means for the system to exchange data. More information can be obtained on <http://airly.eu>

## Measurement point settings

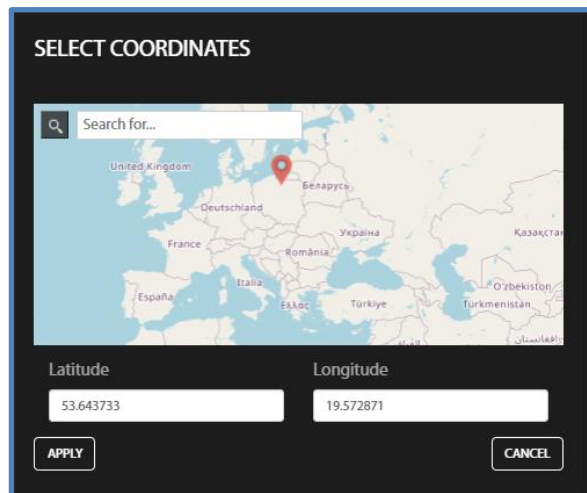

The 'SELECT COORDINATES' dialog box features a map of Europe with a red location pin. Below the map, there are input fields for 'Latitude' (containing '53.643733') and 'Longitude' (containing '19.572871'). At the bottom, there are 'APPLY' and 'CANCEL' buttons.

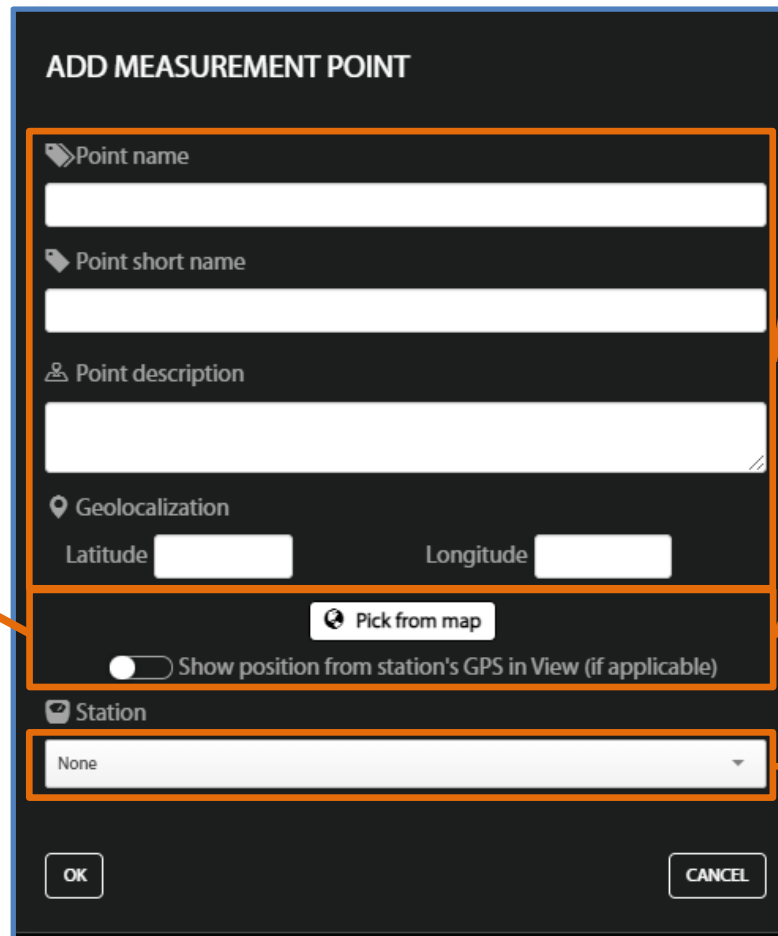


The 'ADD MEASUREMENT POINT' dialog box contains several sections: 'Point name' with a text input field; 'Point short name' with a text input field; 'Point description' with a text input field; 'Geolocalization' with 'Latitude' and 'Longitude' input fields; a 'Pick from map' button; a toggle switch for 'Show position from station's GPS in View (if applicable)'; and a 'Station' dropdown menu currently set to 'None'. At the bottom are 'OK' and 'CANCEL' buttons. Orange boxes highlight the 'Point name', 'Point short name', 'Point description', 'Geolocalization' fields, the 'Pick from map' button, the 'Station' dropdown, and the 'OK' button.

- In the ADD MEASUREMENT POINT box, enter: **Point name, Point short name, Point description, Geolocalization of the monitoring station (Latitude and Longitude).**
- Click **Pick from map**, find localization of your station on the map and click **APPLY**.
- Assign the station from the list of your stations and click OK to confirm the measurement point settings.
- Click the **OK** button to create the measurement point.

## Project tools

The Tool panel structure depends on the access type. The Tool panel for the OWNER enables all available functions and associated views. To switch the function, point cursor on the appropriate button (it will change its colour to blue) and click it.

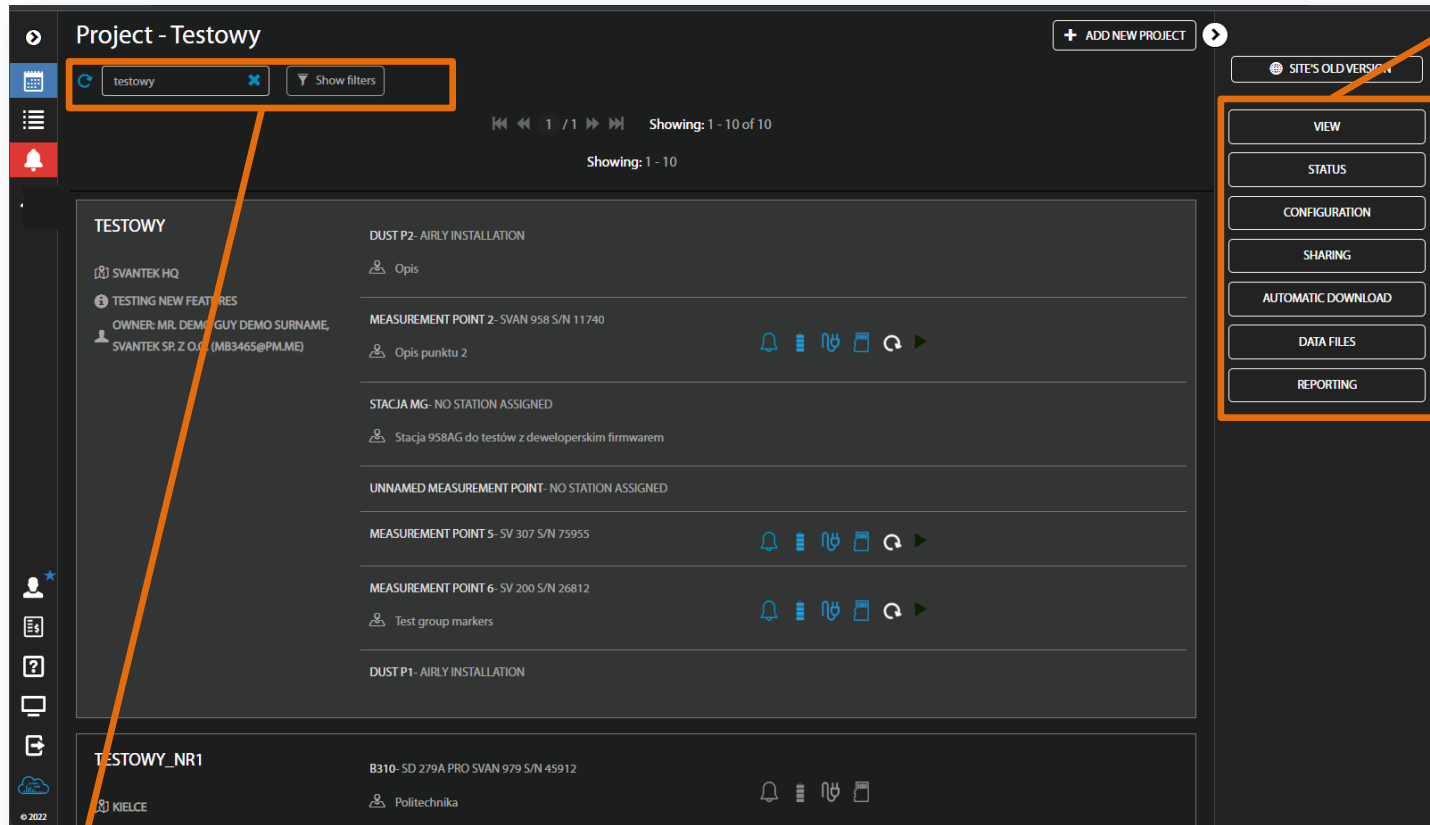


- If you have more than 10 projects, the project browser and project filter appear.

- **REPORTING** – automatically create reports (Chapter [3.8](#)).

- Tool buttons allow you to:
  - **VIEW** - view measurement results and make reports (Chapter [3.2](#)).
  - **STATUS** - check Project and instruments status, start/stop measurements (Chapter [3.3](#)).
  - **CONFIGURATION** - add/delete and configure measurement points (Chapter [3.4](#)).
  - **SHARING** - add new users with specific access rights (Chapter [3.5](#)).
  - **AUTOMATIC DOWNLOAD** - configure automatic download (Chapter [3.6](#)).
  - **DATA FILES** - manually download files (Chapter [3.7](#)).


## 3.2. Project VIEW (all access levels)

The VIEW tool enables viewing of all measurement results for all measurement points of the project and creating a report. You can view data in several panels: *Project description*, *Configuration Info*, *Live data*, *Map*, *Charts*, *Tables*, *Events*, *Heatmaps*, *Weather/Dust* and *Text*. You can also use a template to create a view with freely chosen and arranged panels. All panels are customizable so you can create a report based on this view using functionality of WYSIWYG (What You See Is What You Get).

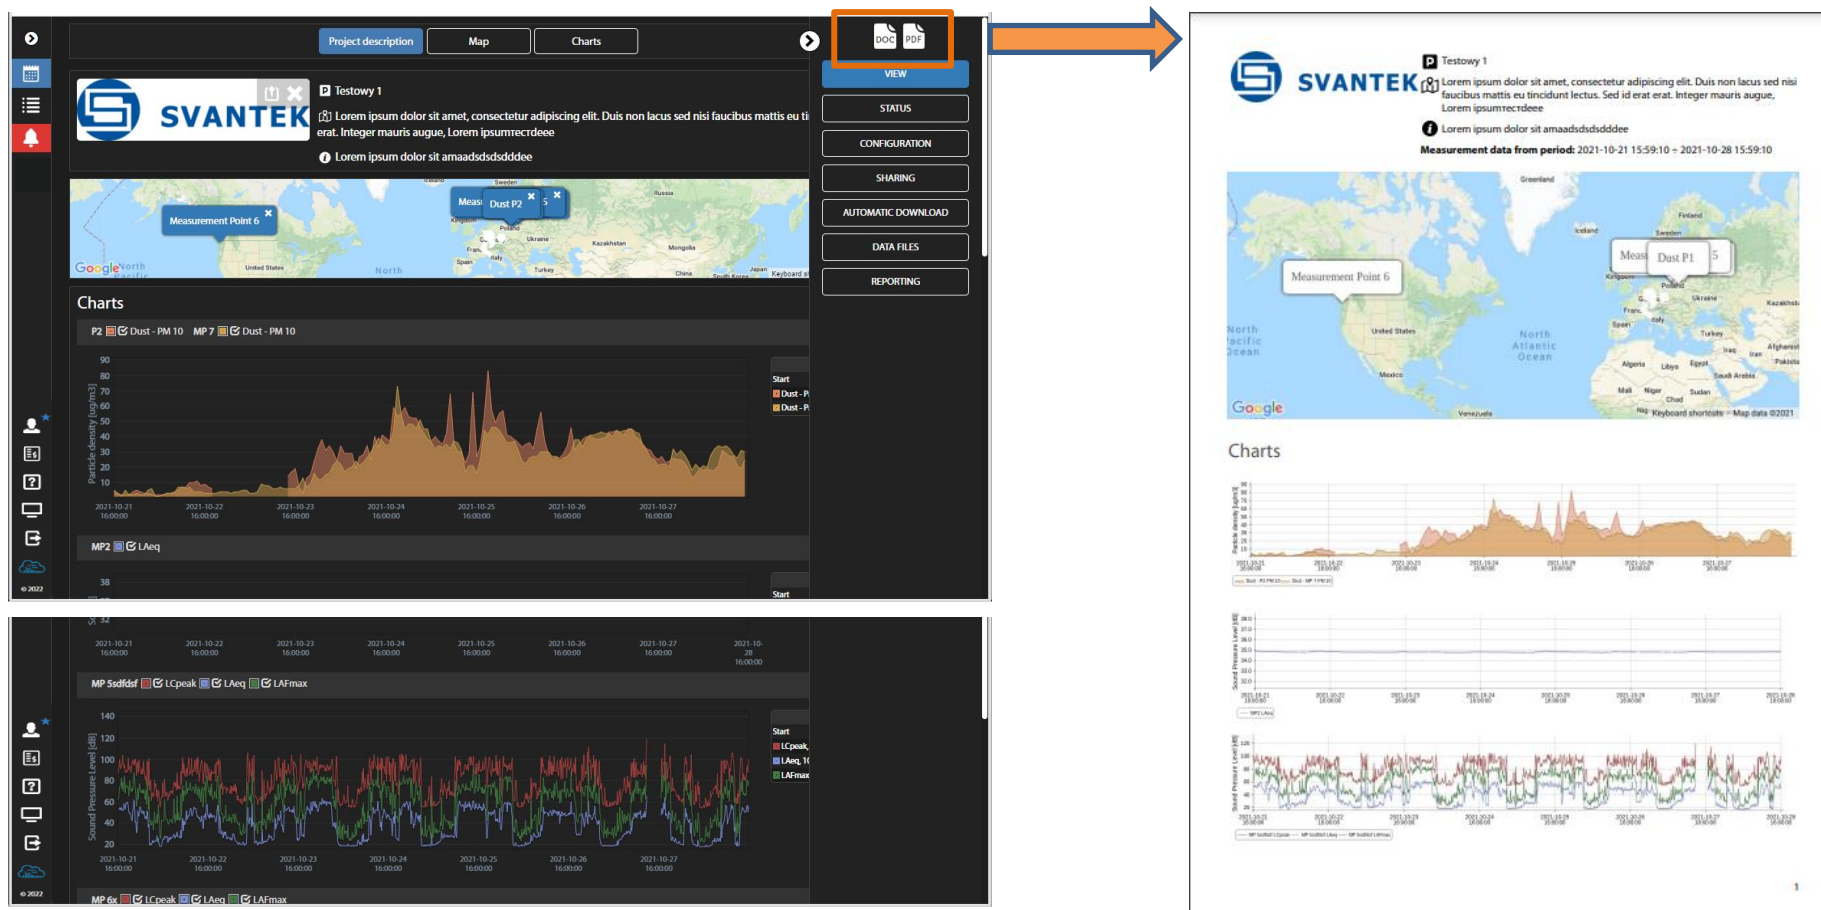


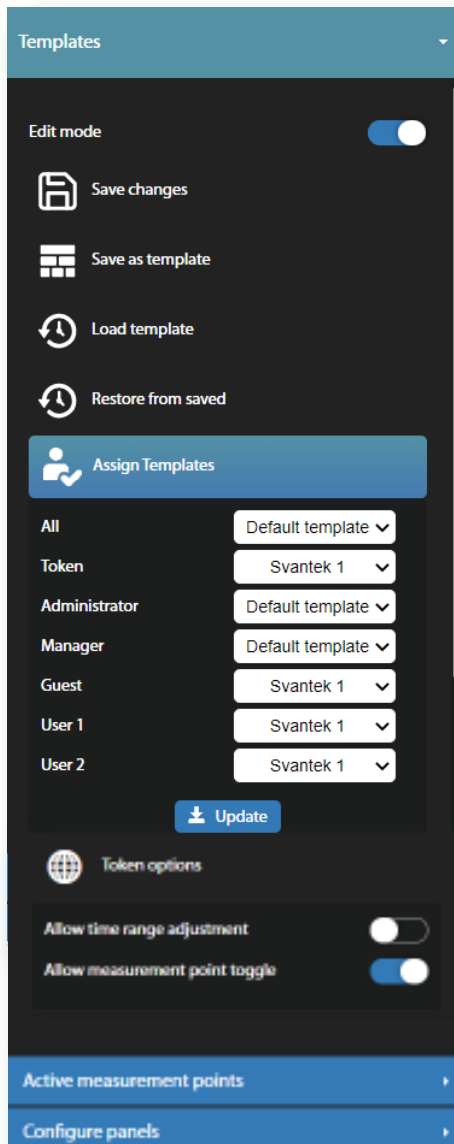


You can switch between active panels using buttons, located at the top of the VIEW window.

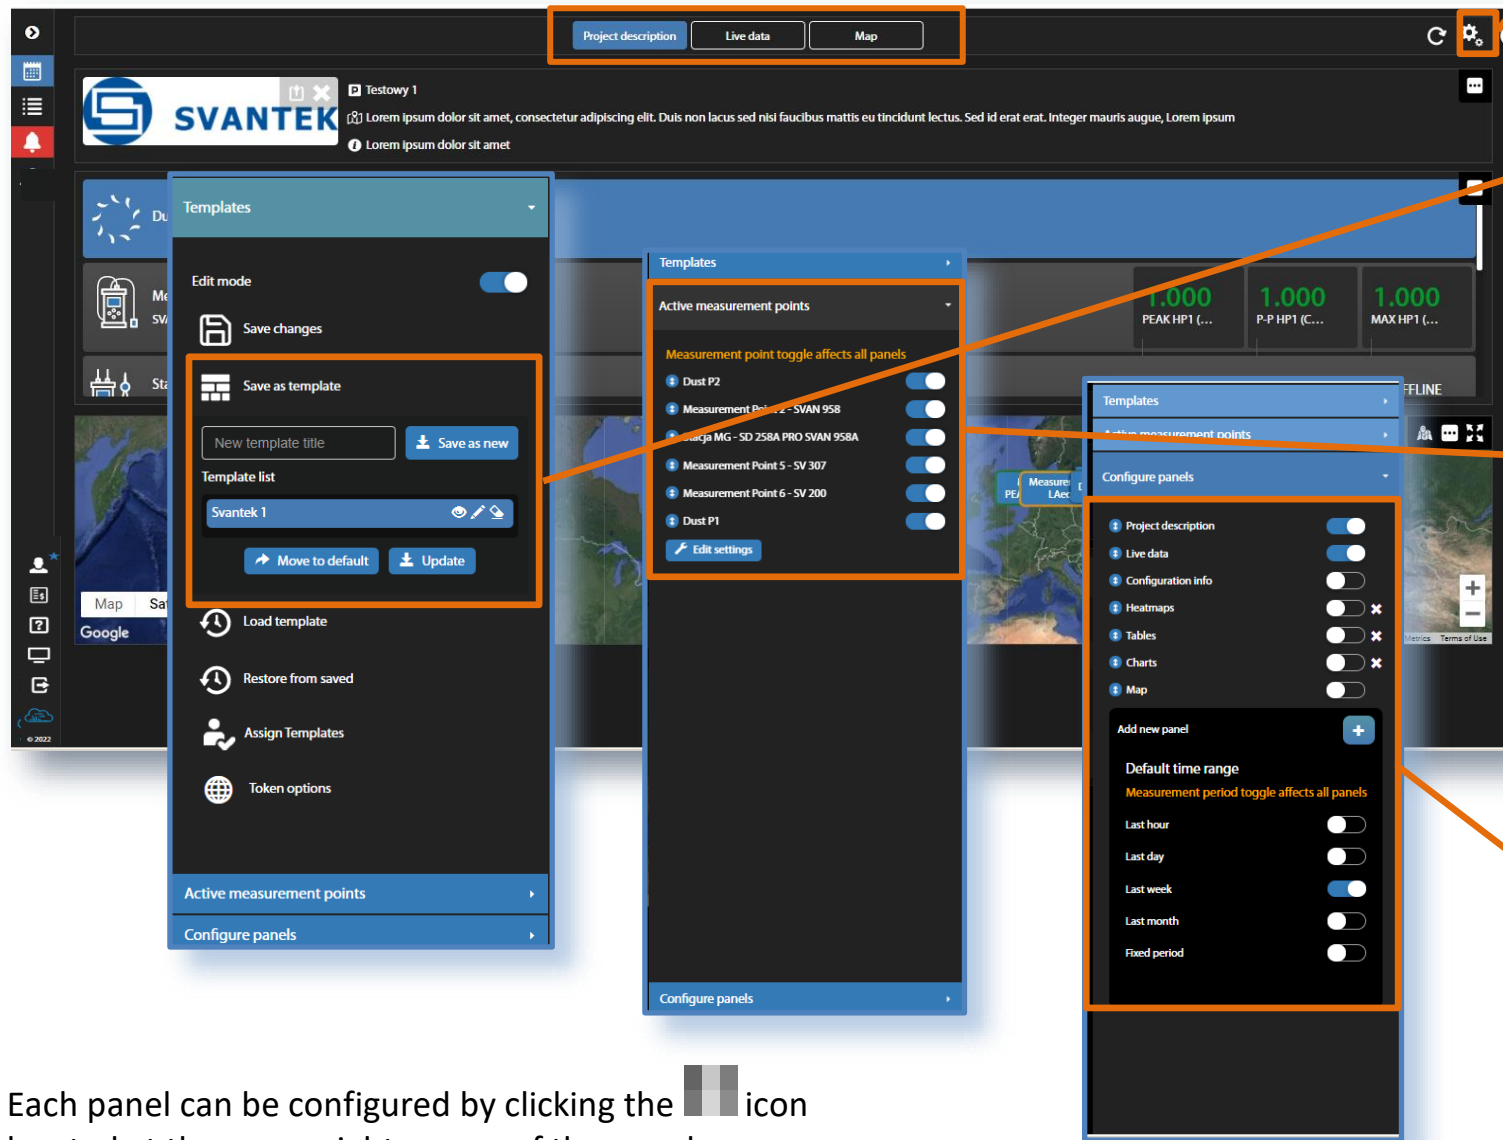

- Click here to configure Templates, Measurement points, Panels.
- In the **Templates** tab, you can save changes, save or load the template and assign templates to a Sharing or Token.
- In the **Active measurement point** tab, you can select measurements point to be displayed, edit project and points settings and rearrange point order in the report.
- In the **Configure panels** tab, you can activate, deactivate, add, remove panels and set period for data presentation.

Each panel can be configured by clicking the  icon located at the upper right corner of the panel.



## Assigning templates

There is a default template that the user can always return to. Changes made by the user in the VIEW mode are saved in his own view and current backup copy (Save changes) to which he can always return to (Restore from saved). He can save the current state as a template (Save as template) to use it later (Load template).

Templates can be assigned to individual SHARING levels (**Assign Templates**).


Assigning templates works in such a way that the user receives the View window layout as prepared in the template assigned to him. For example, based on the presented screenshot, Manager, after entering this project, will get the layout from the 'Default' template, while others will get the layout from the 'Svantek 1' template'.

As a rule, the parameterization of the panels is editable only by the project Owner and those who have the 'Change Project Configuration' permission granted under SHARING (i.e. Administrator). Administrators can edit any element of the template and, although they get the layout from the template assigned to their sharing, when they make changes, they create their own working copy, which they later read automatically (change of components does not change the template, only the Administrator's working copy - only 'Save as template' updates the template).

Not administrators are limited only to modifying general options: active measurement points and default time range (these are displayed by default according to the template). Users who have access via a Token do not have this option by default, but they can be switched on in **Token Options**.

The **Project description** panel presents the project image and project description. The **Configuration info** panel presents instruments selected settings for all measurement points. The **Text** panel allows you to edit and insert text fragments between other panels for report purposes.

Click here to upload or delete the Project Logo.


- Click  to check or edit **Project descriptions**.
- Icons allow you to add new text sections and extend the panel to the full screen.
- Icons allow you to add/remove formatted text and images to the view.
- Icons allow you to prepare an Excel report in CSV format, select the configuration information to be displayed and extend the panel to the full screen.



The **Map** panel presents the location of the measurement points. The **Live data** panel presents current values of selected results for project's measurement points and description of the selected measurement point.

The screenshot shows the SvanNET software interface. The top panel is the **Map** panel, displaying a map of Europe with measurement points marked. The bottom panel is the **Live data** panel, showing a list of measurement points and their corresponding noise and vibration data. Arrows point to specific UI elements:

- Three icons allow you to control the map, edit the panel and extend the map to the full screen.
- Click to check or edit **Project point descriptions** (Point name, Point short name, Point description) and **Live data** presentation settings (Number of viewed results and thresholds for result's colours).
- Move mouse cursor over the result box and select the result to be displayed.

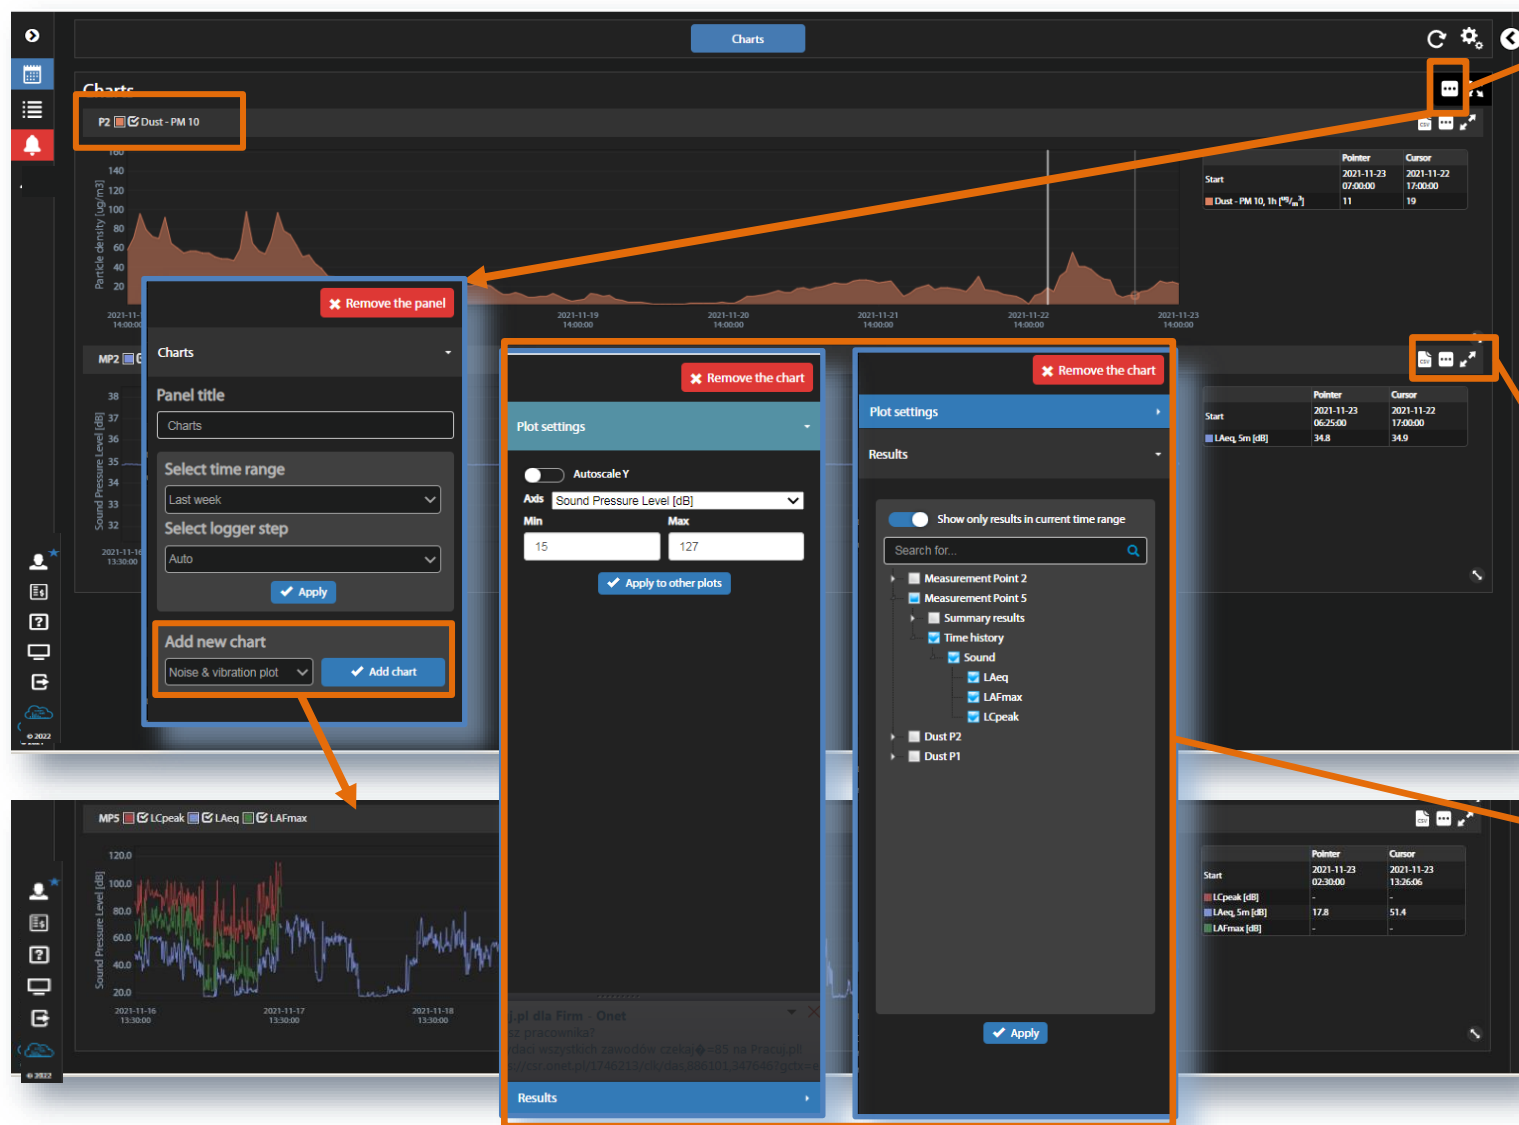The **Charts** panel presents time-histories of selected results for selected measurement points in the form of a graph. Current pointer and cursor data are presented at the right chart side. To adjust the colour of graphs, click to the result boxes at the left corner.



- Click  on the panel to check or edit the general configurations of the Charts panel (Panel title, time range, logger step) and to add new charts.
- Three icons allow you to export to CSV, edit individual chart's configuration and extend the chart area.
- Click  on each chart section to edit **Plot settings** and **Results** selection for all points (**Summary results** and **Time history** results).

The **Tables** panel presents time-histories of selected results for selected measurement points in the form of a table.

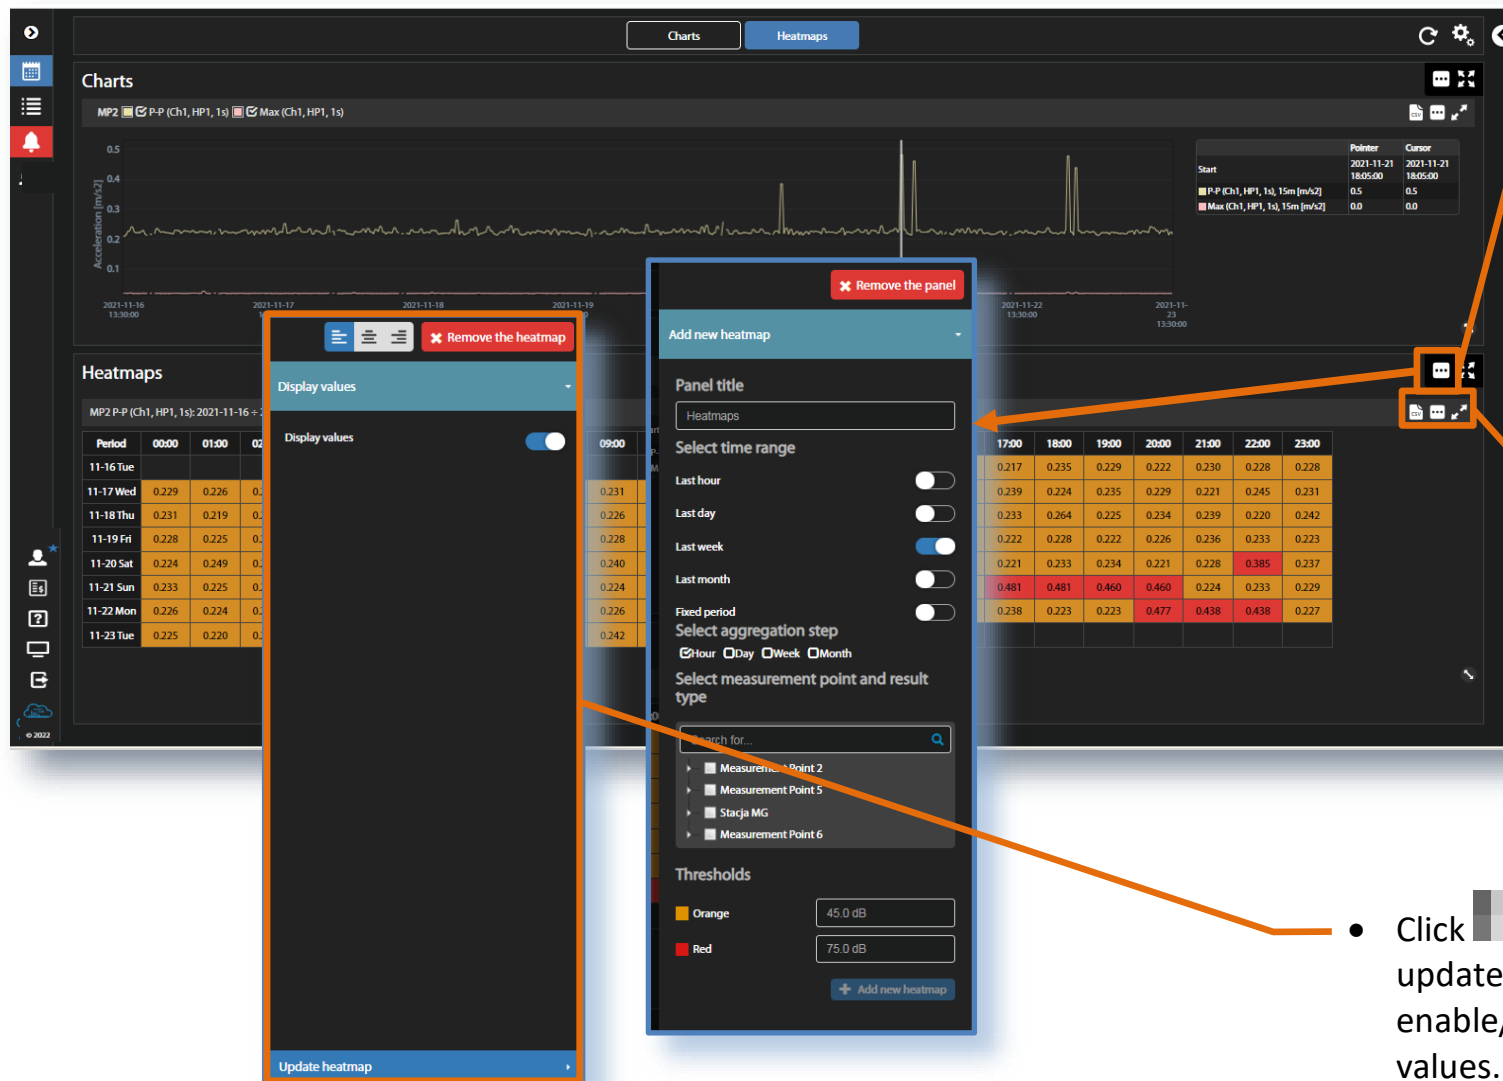
The screenshot shows the SvanNET interface with the **Charts** and **Tables** panels. The **Tables** panel displays a table of measurement data. Three callout boxes show the configuration options for the Tables panel: **Add new table**, **Edit table**, and **Filters**. Arrows point from the callouts to the corresponding UI elements in the main interface.



**Table Data:**

Date & time	Measurement Point 5 LCpeak [dB]	Measurement Point 5 LAeq [dB]	Measurement Point 5 LAFmax [dB]
2021-11-16 14:00:00	101.6	47.0	75.1
2021-11-16 15:00:00	102.3	46.2	78.9
2021-11-16 16:00:00	102.6	56.7	87.3
2021-11-16 17:00:00	95.8	60.4	81.6
2021-11-16 18:00:00	92.4	58.4	78.7
2021-11-16 19:00:00	102.2	53.0	78.7

- Click  on the Tables panel to add the new table with settings (title, time range, logger step, result types).
- Three icons at each table section allow you to export to CSV, edit individual table's configuration and extend the table section.
- Click  on each table section to edit table settings (time range, logger step, result types). You can choose Filters for the selected results.


The **Heatmaps** panel presents time-histories of selected results for selected measurement points in the form of a table in which cells are coloured according to the defined thresholds.





- Click  on the Heatmap panel to add the new heatmap with settings (title, time range, aggregation step, point, one result type and thresholds).
- Three icons at each heatmap section allow you to export to CSV, edit individual heatmap's configuration and extend the heatmap section.
- Click  on each table section to update heatmap settings and enable/disable displaying result's values.

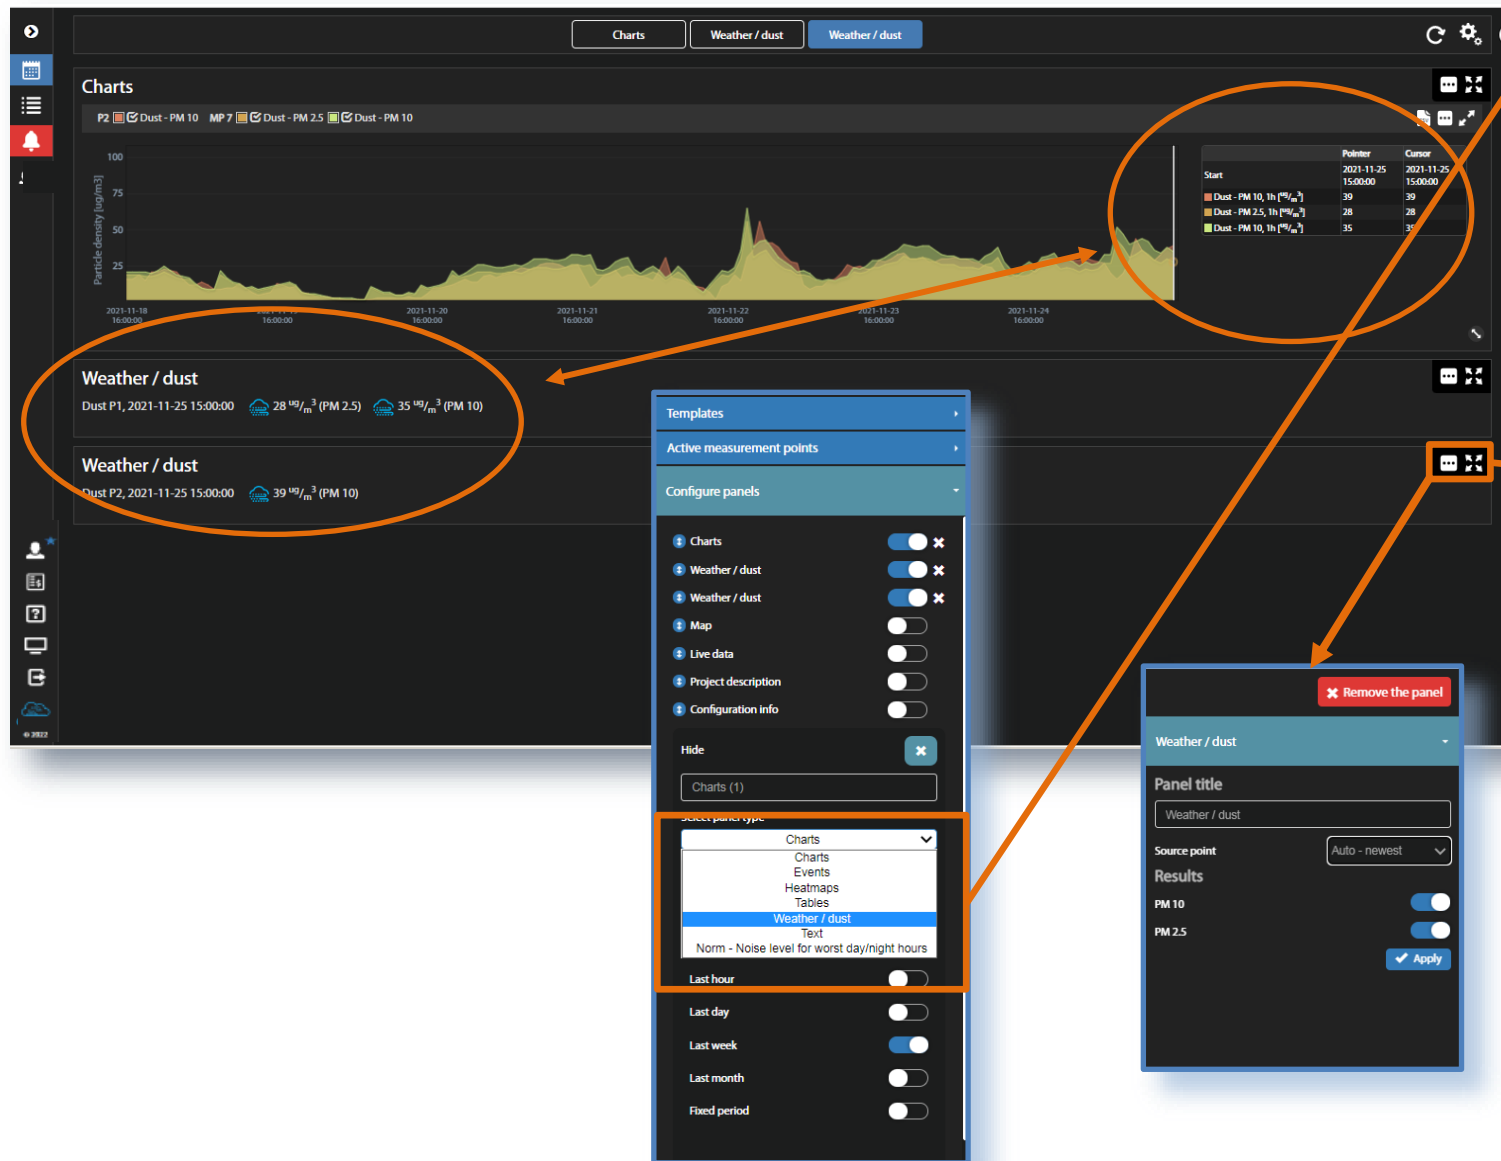


The **Weather / dust** panel presents last results measured by weather stations or dust monitors in the selected measurement point.



- To add the Weather / Dust panel, click . In the **Configuration panels** tab click **Add new panel** and select this panel type.
- Click  on each Weather / Dust panel to select measurement point and enable/disable displaying results values.




The **Events** panel presents events occurred during the selected period. Events can be configured at the project or device levels. The presented example shows events caused by exceeding 90 dB Leq Alarm threshold level during time-history (TH) measurements.

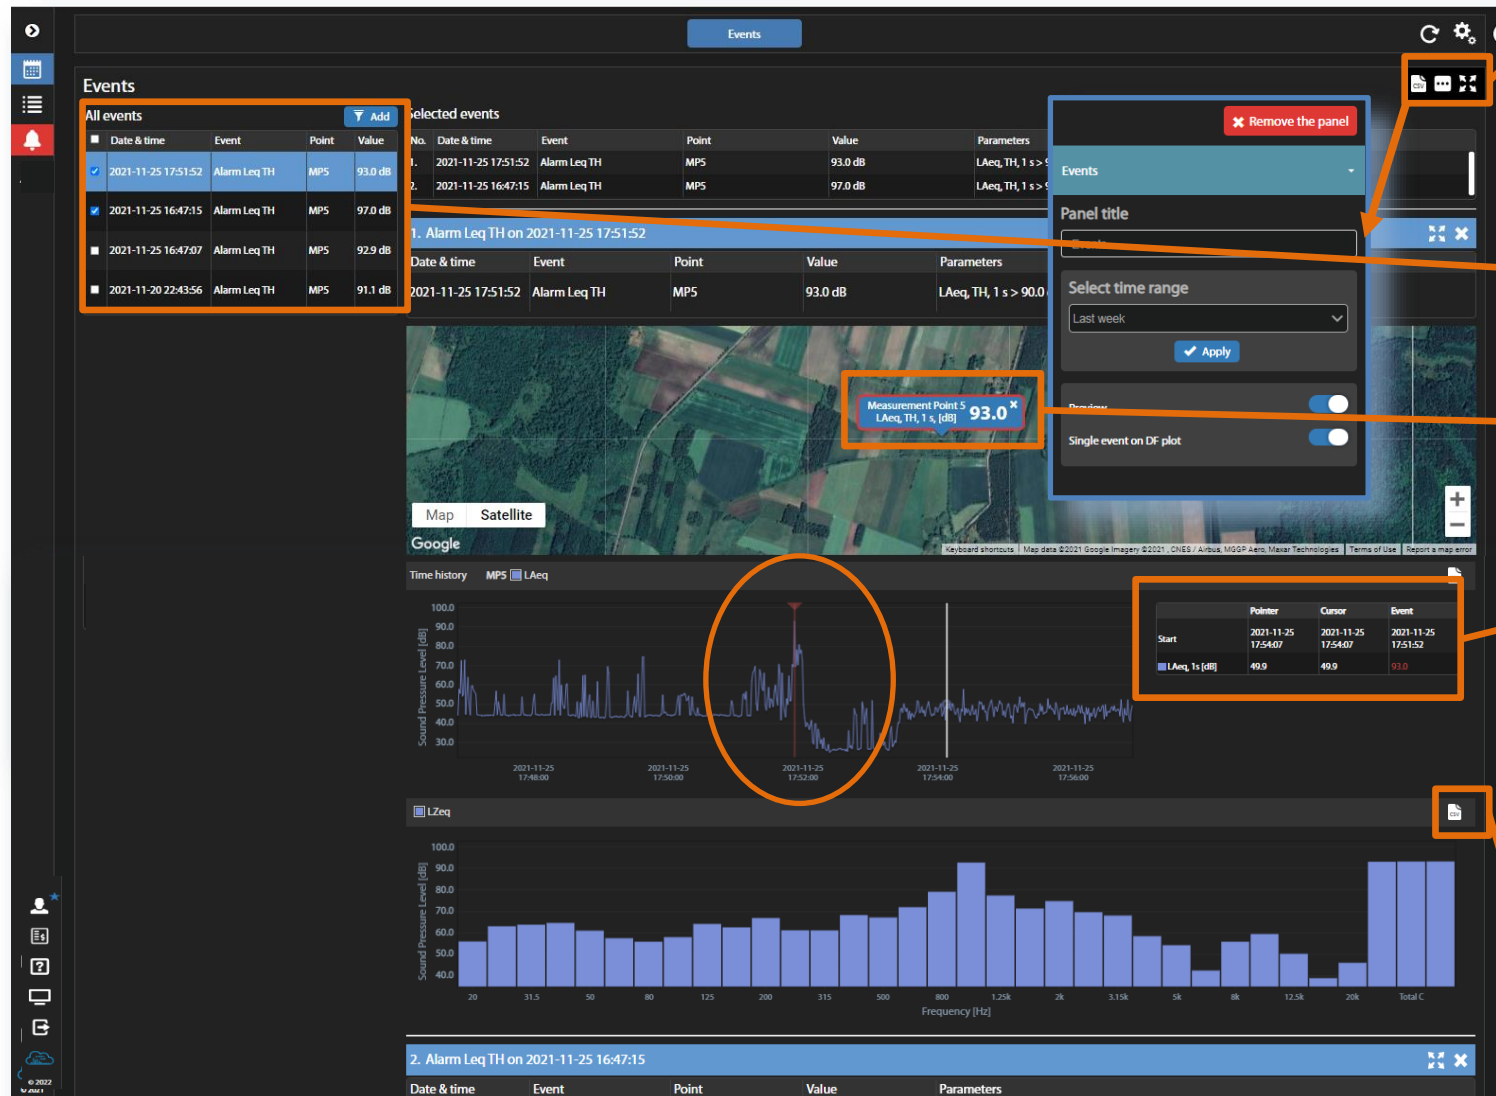





- Three icons allow you to export to CSV, edit Events Panel configuration and extend the panel.
- Filter and check event in the events table to show their details.
- Location of the point where the event has occurred is shown on the map.
- Event point is marked on the graph and its value is displayed in the table together with the pointer and cursor values. The spectrum is presented for the event point.
- The Time-history and Spectrum can be exported as CSV.

### 3.3. STATUS view (all access levels)

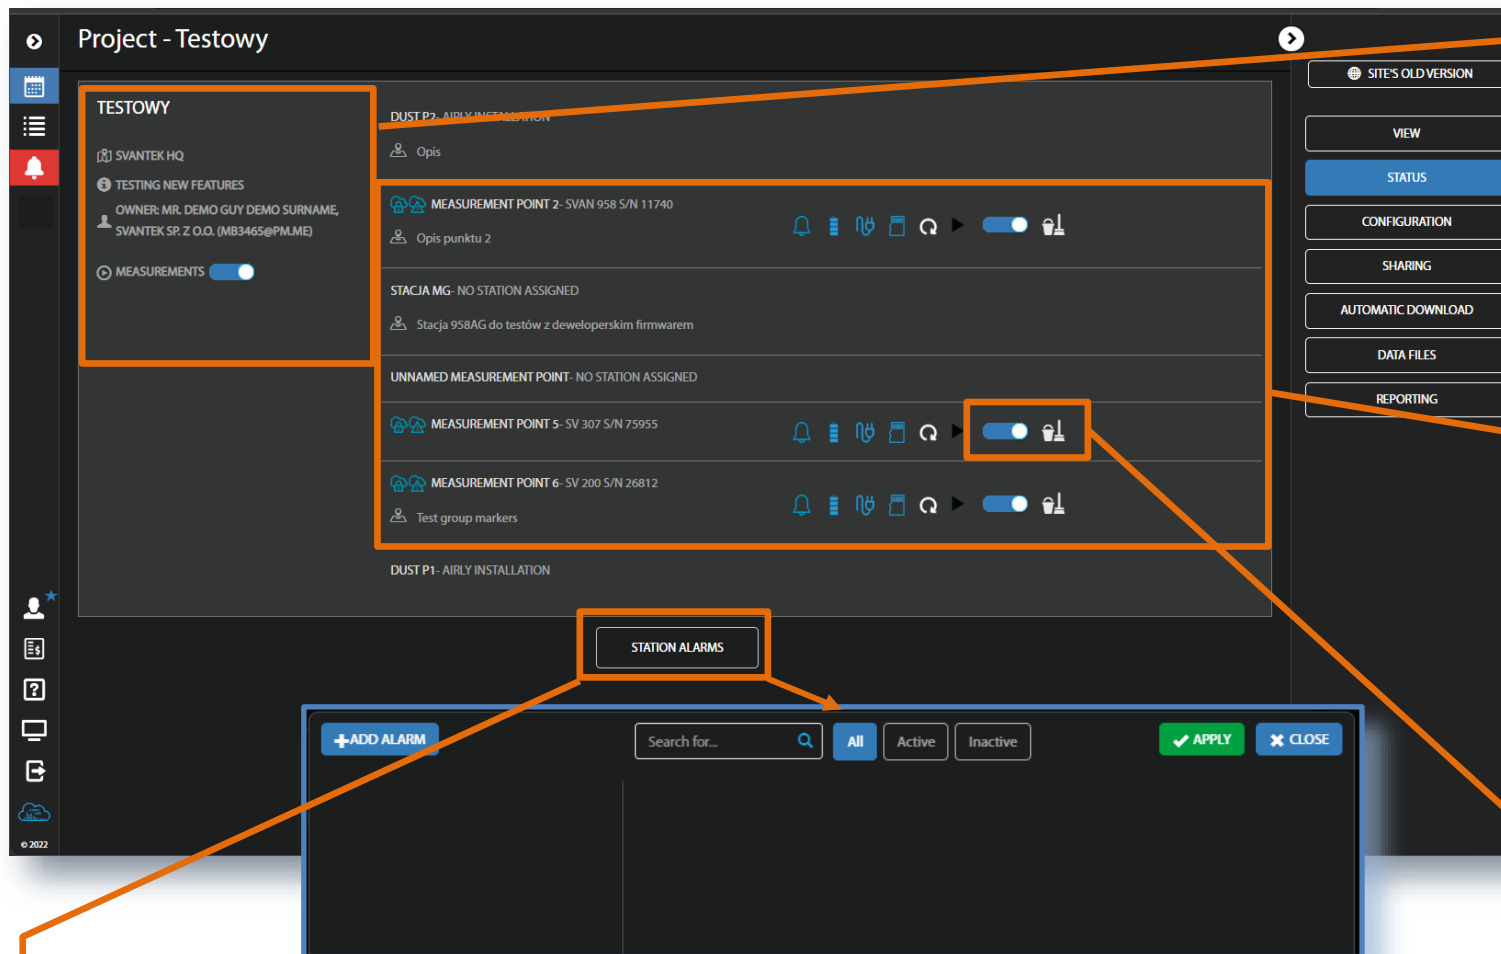

- This section presents the Project related information. You can also start/stop measurements for all measurement points simultaneously.
- This section presents measurement points related information – names, serial numbers of the instruments and their status with the help of icons.
- You can also start/stop measurements for each measurement point individually and clear instrument's memory.
- You can configure the STATION ALARMS related to the system conditions of the monitoring stations, such as battery status, connection status, memory status, measurement status, etc. Alarms are based on Conditions and relate to Actions, that are default e-mails to the specified recipients, and refer to Measurement points.

Click **+ADD ALARM**, to configure CONDITIONS, ACTIONS and MEASUREMENT POINTS settings. Alarm CONDITIONS can be defined in the EDIT CONDITION box, opened when you click the **Status** button.

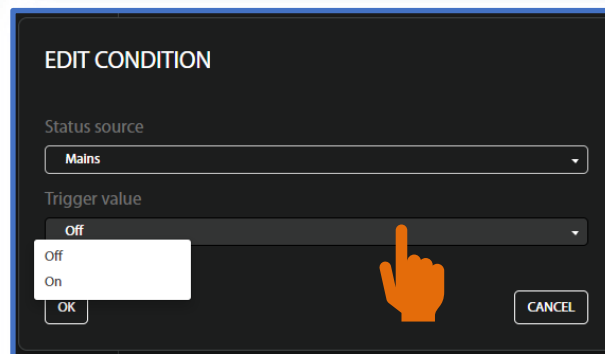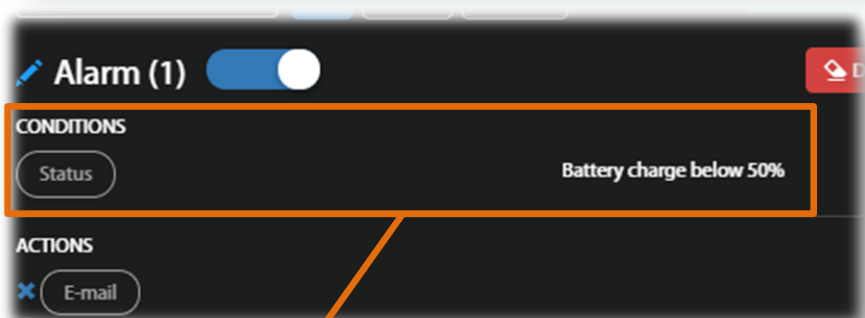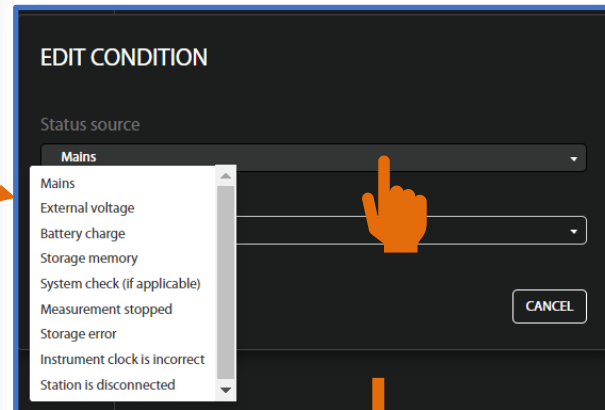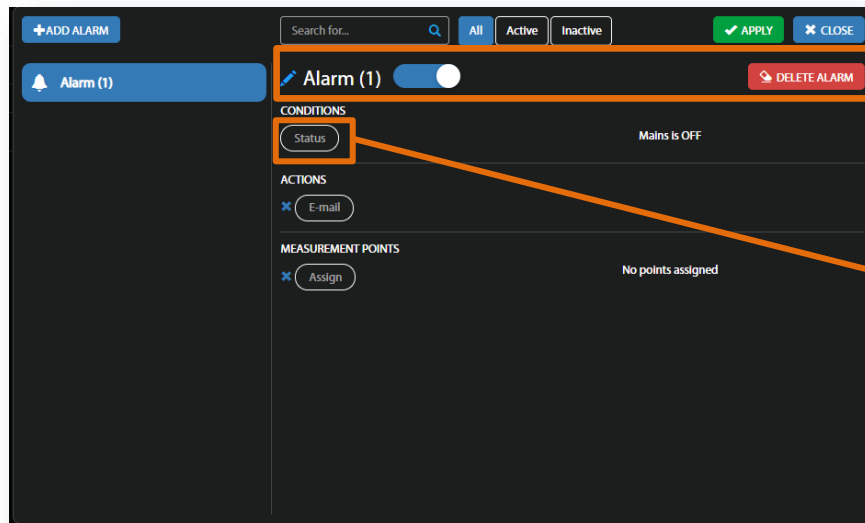

- Click **OK** and new CONDITION will be displayed in the CONDITIONS area.

- In this line you can rename, switch on/off or delete the Alarm.
- Click **Status source** and select: *Mains, External voltage, Battery charge, Storage memory, System check, Measurement stopped, Storage error, Instrument clock is incorrect, or Station is disconnected.*
- Click **Trigger value** and choose the required threshold level for the selected **Status source**.

ALARMS relate to ACTIONS, that are default e-mails to the specified recipients, and refer to MEASUREMENT POINTS.

The image illustrates the process of configuring an alarm in SvanNET. It shows the main alarm configuration screen, two modal windows for editing email recipients and assigning stations, and a final view of the configured alarm.

- Click the **E-mail** button to enter/edit e-mail recipients.

ACTIONS may have additional options depending on the selected Status source, e.g. **Start Measurement** for the *Measurement Stopped* Status source.

- Click the **Assign** button to assign alarm to the station(s).
- Made selections are displayed in the ACTIONS and MEASUREMENT POINTS sections.

Station Alarms description is given in Appendix A.

### 3.4. CONFIGURATION view (Owner/Administrator access level)

The screenshot displays the 'Project - Testowy+1' configuration page. The main area lists project details and measurement points. Callouts highlight the following elements:

- EDIT PARAMETERS:** A button in the top left of the project details section, which opens the 'MODIFY PROJECT' modal.
- Edit settings:** Buttons next to each measurement point, which open the 'MODIFY MEASUREMENT POINT' modal.
- Edit station configuration:** A button next to each measurement point, which opens the 'MODIFY MEASUREMENT POINT' modal.
- + Add measurement point:** A button at the bottom of the measurement points list, which opens the 'MODIFY MEASUREMENT POINT' modal.

**MODIFY PROJECT Modal:**

- Project name: Testowy+1
- Project location: Lorem ipsum dolor sit amet, consectetur adipiscing elit. Duis non lacus sed nisi faucibus m
- Project description: Lorem ipsum dolor sit amet
- Airly Data Integration - API Key: [Learn more...]
- Owner: Demo Surname, DemoGuy (mb3465@pm.me) - Client
- Buttons: DELETE PROJECT, OK, CANCEL

**MODIFY MEASUREMENT POINT Modal:**

- Point name: Measurement Point 2
- Point short name: MP2
- Point description: Opis punktu 2
- Geolocalization: Latitude 52.298402, Longitude 19.791870
- Buttons: Pick from map, Load last known station's position
- Show position from station's GPS in View (if applicable): [Toggle]
- Station: SVAN 958 S/N 11740
- Buttons: DELETE MEASUREMENT POINT, OK, CANCEL

- Click **EDIT PARAMETERS** to modify project parameters or delete the project.
- Click **Edit settings** to modify measurement point parameters or delete the point.
- Click **Edit station configuration** to configure the monitoring station (Chapter 2).
- You can also add new measurement point clicking the +Add measurement point button.

### 3.5. SHARING view (Owner/Administrator access level)

In this view, you can configure access parameters of the project, among others - Project sharing.

Project - Testowy+1

TESTOWY+1

LOREM IPSUM DOLOR SIT AMET, CONSECETUR ADIPISCING ELIT. DUIS NON LACUS SED NISI FAUCIBUS MATTS EU TINCIDUNT LECTUS. SED ID ERAT ERAT. INTEGER MAURIS AUGUE, LOREM IPSUM

LOREM IPSUM DOLOR SIT AMET

MR. DEMOGUY DEMO SURNAME, SVANTEK SP. Z O.O. (MB3465@PM.ME)

+ Add user + Manage share access

Visitor access token

Get link

Link sharing ON Replace Delete

Guest Edit

Save Delete Cancel

Guest Add user Cancel

Enter e-mail address...

USER SHARE ACCESS

Use this panel to configure custom share access to use in your projects and which templates to use for particular share accesses in the current project. You may configure up to 10 sharing accesses in addition to default ones (Guest, Manager, Administrator, Token).

+ Add new share access

Share access: Administrator Default template

Permissions: Browse Project View, Browse Data Files, Delete in Data Files, Change Station Configuration, Change Project Configuration, Change Project Sharing, Change Project Automatic Download

Share access: Manager Default template

Permissions: Browse Project View, Browse Data Files, Delete in Data Files

Share access: Guest Svantek 1

Permissions: Browse Project View

Share access: Token Svantek 1

Permissions: Browse Project View

Share access: User 1 Edit Delete Svantek 1

Permissions: Browse Project View, Browse Data Files, Delete in Data Files, Change Station Configuration, Change Project Sharing, Change Project Automatic Download

Share access: User 2 Edit Delete Svantek 1

Permissions: Browse Project View, Browse Data Files, Change Project Sharing

APPLY CANCEL

VISITOR TOKEN LINK

Link sharing is enabled - anyone with link can see project live data

https://svannet.com/rc/project.php?token=754a7e4bb99c1c22b1c0666b5...

Open in new tab Copy link address

Token template: Auto-generated token template

OK

- Click **+Add user** to add new access to the project. The new user field will appear for entering e-mail address, selecting access level.
- Click **Edit** to edit this user's access to the project. The line will be changed enabling changing access level or deleting the user.
- Click **+Manage share access** to add new or edit existing Access level.
- Click **Get link** to copy the visitor token link.



**Note:** User e-mail is his SvanNET account and LOGIN. If an account with a given email address exists, the user will be invited to the Project; if not - an invitation to create an account on SvanNET will be sent to the given e-mail and the invitation to the Project will be attached after creating the account.

**USER SHARE ACCESS**

Use this panel to configure custom share access to use in your projects and which templates to use for particular share accesses in the current project. You may configure up to 10 sharing accesses in addition to default ones (Guest, Manager, Administrator, Token).

**+ Add new share access**

Share access: **Administrator** Default template

Permissions: Browse Project View, Browse Data Files, Delete in Data Files, Change Station Configuration, Change Project Configuration, Change Project Sharing, Change Project Automatic Download

Share access: **Manager** Default template

Permissions: Browse Project View, Browse Data Files, Delete in Data Files

Share access: **Guest**

Permissions: Browse Project View

Share access: **Token** Svantek 1

Permissions: Browse Project View

Share access: **User 1** Edit Delete Svantek 1

Permissions: Browse Project View, Browse Data Files, Delete in Data Files, Change Project Automatic Download

Share access: **User 2** Edit Delete Svantek 1

Permissions: Browse Project View, Browse Data Files, Change Project Sharing

---

**Custom Sharing Rank** Default template

Browse Project View ☐

Browse Data Files ☐

Delete in Data Files ☐

Change Station Configuration ☐

Change Project Configuration ☐

Change Project Sharing ☐

Change Project Automatic Download ☐

In the USER SHARE ACCESS box, you can add new share access or edit existing ones and assign a template to a specific Access level.

- Click the selector box and assign a template to this access level Rank.
- Click **+Add new share access** and in the additional section which will appear in the bottom of the USER SHARE ACCESS box, give a 'Customer Sharing Rank' to the new access and give **Permissions:** *Browse Project View, Browse Data Files, Change Station Configuration, Change Project Configuration, Change Project Sharing and Change Project Automatic Download.*

### 3.6. AUTOMATIC DOWNLOAD view (Owner/Administrator access level)

The Automatic download function allows you to download files created by instruments automatically to the set destination. You can also configure automatic clearing of the instrument's memory and the SvanNET memory.

- Enable/disable automatic download.
  - Select download period and types of files for automatic download.
  - Set the start day from which the data will be processed.
  - Set files upload destination in the ENTER CUSTOM FTP DETAILS box.
  - Configure automatic download and multi-point alarms.
  - Set time zone.
  - Set parameters of the SvanNET memory clearing – period of clearing and limit of memory used.
- If you switch on SCHEDULED MEMORY CLEANING, the special area will appear allowing you to configure automatic clearing the memories of project instruments.



In the ENTER CUSTOM FTP DETAILS section, you can define the parameters for connecting to the FTP / SFTP server and what results will be sent to it. In detail it is described in Appendix B.

The image shows two screenshots of a software interface. The first screenshot, titled "ENTER CUSTOM FTP DETAILS", contains the following fields and options:

- Type:
- Host name:
- User name:
- Password:
- Remote folder:
- File upload types:
- Information: 

ⓘ Please note that the system only uploads files that are no longer modified by the instrument - it is strongly recommended to configure logger splitting or set up scheduled clearing to facilitate frequent FTP uploads. Auto Export is not a subject to this restriction.
- Buttons:  (highlighted with an orange box),  (highlighted with an orange box), ,

An orange arrow points from the "Configure Auto Export" button to the second screenshot. The second screenshot, titled "CONFIGURE AUTO EXPORT", contains the following fields and options:

- Mode:
- Start time:
- Complete only: ☐ Off
- Sorting: ☐ Asc
- Empty columns: ☐ Off
- Battery info: ☐ Off
- Battery history: ☒ On
- Time format:
- Naming:
- Measurement Point 5 - Stacja Michala (SV 307 S/N 75955): ☒
- Measurement Point 6 - SV 200 S/N 26812: ☒
- Buttons:
- Buttons: , ,


Below the "CONFIGURE AUTO EXPORT" screen is a "Connection test - SUCCESS" log window showing the following steps:

- Logging to ftp.svantek.com.pl:21 (SSL)
- Connected!
- Logged In!
- Creating subfolder test\_MB/mp-test-957204
- SUCCESS - Subfolder created successfully!
- test\_MB/mp-test-957204/upload-test-e05e4d - new file upload!
- Preparing upload test\_file -> test\_MB/mp-test-957204/upload-test-e05e4d
- SUCCESS - Upload successful!
- Deleting test file test\_MB/mp-test-957204/upload-test-e05e4d
- SUCCESS - Successfully deleted file test\_MB/mp-test-957204/upload-test-e05e4d
- Deleting created subfolder test\_MB/mp-test-957204
- SUCCESS - Successfully deleted subfolder test\_MB/mp-test-957204


Orange arrows indicate the flow from the "Configure Auto Export" button in the first screen to the "CONFIGURE AUTO EXPORT" screen, and from the "Test connection" button in the first screen to the "Connection test" log window.

- Auto Export allows you to send data to the FTP / SFTP server in the form of CSV files in specified periods. The results source is the data exported to the SvanNET database from the downloaded files.
- Click **Test connection** to run the FTP / SFTP connection testing functionality. The procedure assumes: establishing a connection, logging in, creating a test folder, uploading a test file, and then deleting the test file and directory.


AUTOMATIC DOWNLOAD ALARMS are generated based on the information contained in the downloaded files (selected FILE TYPES).

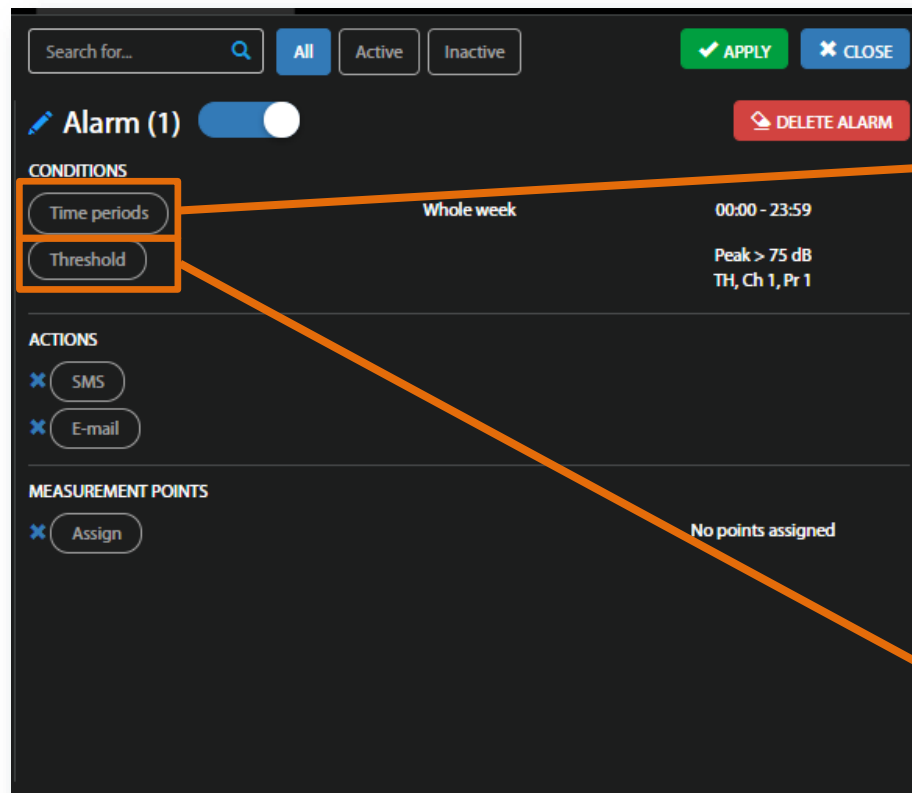

The main alarm configuration interface is a dark-themed window. At the top, there is a search bar, filter buttons for 'All', 'Active', and 'Inactive', and 'APPLY' and 'CLOSE' buttons. Below this, the 'Alarm (1)' section has a toggle switch and a 'DELETE ALARM' button. The 'CONDITIONS' section contains two buttons: 'Time periods' and 'Threshold'. The 'Time periods' button is highlighted with an orange box, and an orange arrow points from it to the 'TIME CONDITION' dialog. The 'Threshold' button is also highlighted with an orange box, and an orange arrow points from it to the 'EDIT CONDITION' dialog. The 'ACTIONS' section has 'SMS' and 'E-mail' buttons. The 'MEASUREMENT POINTS' section has an 'Assign' button and a message 'No points assigned'. The current alarm configuration shows 'Whole week' for 'Time periods' and 'Peak > 75 dB TH, Ch 1, Pr 1' for 'Threshold'.

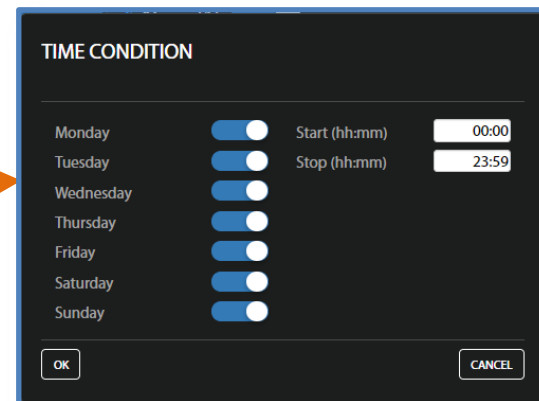

The 'TIME CONDITION' dialog is a dark-themed window. It has a title bar 'TIME CONDITION'. Below the title bar, there is a list of days of the week with corresponding toggle switches. To the right of the toggles, there are input fields for 'Start (hh:mm)' and 'Stop (hh:mm)'. The 'Start' field is set to '00:00' and the 'Stop' field is set to '23:59'. At the bottom, there are 'OK' and 'CANCEL' buttons.

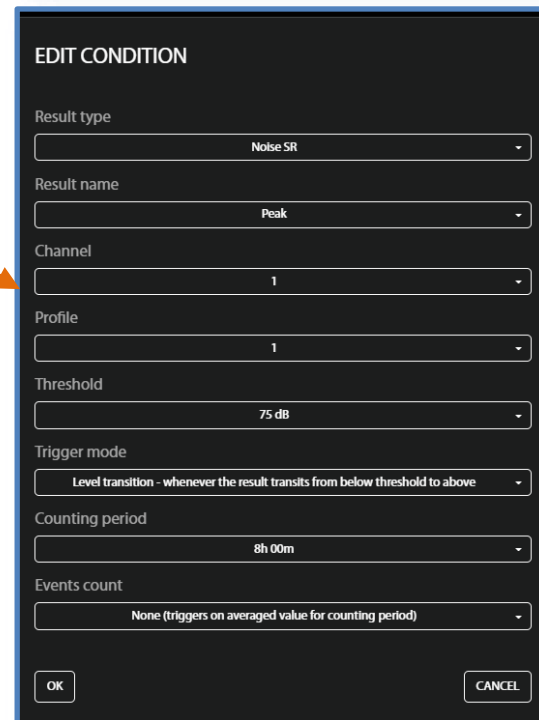

The 'EDIT CONDITION' dialog is a dark-themed window. It has a title bar 'EDIT CONDITION'. Below the title bar, there are several dropdown menus and input fields. The 'Result type' dropdown is set to 'Noise SR'. The 'Result name' dropdown is set to 'Peak'. The 'Channel' dropdown is set to '1'. The 'Profile' dropdown is set to '1'. The 'Threshold' dropdown is set to '75 dB'. The 'Trigger mode' dropdown is set to 'Level transition - whenever the result transits from below threshold to above'. The 'Counting period' dropdown is set to '8h 00m'. The 'Events count' dropdown is set to 'None (triggers on averaged value for counting period)'. At the bottom, there are 'OK' and 'CANCEL' buttons.

- Click **Time periods** to defined times and days of the week when alarms will be considered
- Click **Threshold** to configure alarm conditions related to the measurements. In the EDIT CONDITIONS box, you can define: **Result type**, **Result name**, **Channel**, **Profile**, **Frequency**, **Exposure limit**, **Threshold**, **Trigger mode**, **Counting period**, **Events count**.

As type of the result that will be compared with the threshold level (**Result type**) you can select:

- time-history or summary results for noise measurements (*Noise TH, Noise SR*),
- time-history or summary results for acceleration vibration measurements (*Vib Acc TH, Vib Acc SR*),
- time-history or summary results for velocity vibration measurements (*Vib Vel TH, Vib Vel SR*),
- time-history or summary results for displacement vibration measurements (*Vib Dil TH, Vib Dil SR*).

Noise TH  
Noise SR  
Vib Acc TH  
Vib Acc SR  
Vib Vel TH  
Vib Vel SR  
Vib Dil TH  
Vib Dil SR

The result selected in the **Result name** (measured in the selected **Channel** and **Profile**) will be compared with the **Threshold** level or **Exposure limit** depends on the selected **Result type**:

- Noise TH: *Peak, Max, Min, Leq, Spectrum-Peak, Spectrum-Max, Spectrum-Min* or *Spectrum-Leq*;
- Noise SR: *Peak, Max, Min, Spl, Leq, Lden, Ltm3, Ltm5, Spectrum-Peak, Spectrum-Max, Spectrum-Min* or *Spectrum-Leq*;
- Vib Acc TH/Vib Vel TH/Vib Dil TH: *Peak, P-P, Max, RMS, Spectrum-Peak, Spectrum-RMS*;
- Vib Acc SR/ Vib Vel SR/Vib Dil SR: *Peak, P-P, Max, RMS, VDV, Spectrum-Peak, Spectrum-RMS*.

Peak  
Max  
Min  
Leq  
Spectrum - Peak  
Spectrum - Max  
Spectrum - Min  
Spectrum - Leq

When the Spectrum result is selected, additional position **Frequency** appears in the EDIT CONDITION box enabling setting the frequency (central octave/third octave or FFT) which will be considered while comparing the result with the threshold.

**Trigger mode** defines the way the threshold level is compared with the result:

- *Level transition – whenever the result transits from below threshold to above,*
- *Level trigger – whenever the result's value is higher than threshold.*

Level transition - whenever the result transits from below threshold to above  
Level trigger - whenever the result's value is higher than threshold

**Counting period** and **Events count** define additional conditions for triggering the event. Counting period is a timeframe during which it is possible to:

- average the result (**Counting period** is other than *None* and **Events count** is *None*) or
- fix the number of threshold level exceeding (**Counting period** is other than *None* and **Events count** is other than *None*).

Counting periods start at 00:00 of the local time. After finishing of the previous period, the next one starts.

Search for...  All Active Inactive ✓ APPLY ✗ CLOSE

**Alarm (1)** ☒

**CONDITIONS**

Time periods: Whole week 00:00 - 23:59

Threshold: Peak > 75 dB TH, Ch 1, Pr 1

**ACTIONS**

✗ SMS ✗ E-mail

**MEASUREMENT POINTS**

✗ Assign No points assigned

---

**ACTIONS**

✗ SMS ✗ E-mail

**MEASUREMENT POINTS**

✗ Assign

+0123456789	+48123456789
user1@svantek.com	user2@svantek.com
Measurement point 1	Measurement point 2

**EDIT SMS RECIPIENTS**

SMS recipients (comma separated)

OK CANCEL

**EDIT E-MAIL RECIPIENTS**

E-mail recipients (comma separated)

OK CANCEL

**ASSIGN MEASUREMENT POINTS**

Measurement point 1 - Demo station Alpha (SV 200A S/N 12345) ☒

Measurement point 2 - Demo station Beta (SD 277A SVAN 977 S/N 23456) ☒

Measurement point 3 - Demo station Eta (SV 307 S/N 67890) ☐

OK CANCEL

- Click the **SMS** button to enter/edit phone numbers.
- Click the **E-mail** button to enter/edit e-mail recipients.
- Click the **Assign** button to assign alarm to the station(s).
- Made selections are displayed in the ALARM section.

Multi-point alarms are generated when several automatic download or instrument alarms occur within specified time interval.

MULTI-POINT ALARMS are being generated when several events also associated with different measurement points (also generated by some instruments, like SV 307 or SVAN 958AG) appear in the time interval (**Tolerance**) and relate to ACTIONS, like SMS or E-mail notifications.

**Alarm (1)**

Search for...

APPLY CLOSE

DELETE ALARM

**CONDITIONS**

Tolerance 00:01:00

Trigger Measurement Point 2

Alarm RMS  $RMS > 1.000 \text{ m/s}^2$   
TH, Ch 1, Pr 1  
Whole week  
00:00 - 23:59

Trigger Measurement Point 5

Alarm Leq TH  
Leq > 90 dB  
TH, Ch 1, Pr 1  
Whole week  
00:00 - 23:59

+ ADD TRIGGER

**ACTIONS**

SMS User1 User2

E-mail

**EDIT TOLERANCE**

Tolerance

00:00:00

OK CANCEL

**ADD TRIGGER**

Measurement point

Select measurement point...

Event

Select event...


OK CANCEL

- Click the **Tolerance** button to select in the EDIT TOLERANCE pop-up box the time interval during which multi-point events will be considered.
- Click the **+ADD TRIGGER** button to select in the ADD TRIGGER box the measurement point and the event definition for the selected point.

In the presented example the multipoint alarm will be generated if in the point 2 when  $RMS > 1.000 \text{ m/s}^2$  and in the point 5 when  $Leq > 90 \text{ dB}$  within the time interval equal to 1 minute.

- Made selections are displayed in the ALARM section.

Instrument's MEMORY CLEARING is important feature of SvanNET especially when the wave recording is activated, or you use CSV files. By default, the automatic memory cleaning is disabled. Memory cleaning requires interrupting the measurement. If you enable the memory cleaning schedule you can also enable the instrument internal clock synchronization during this interruption.

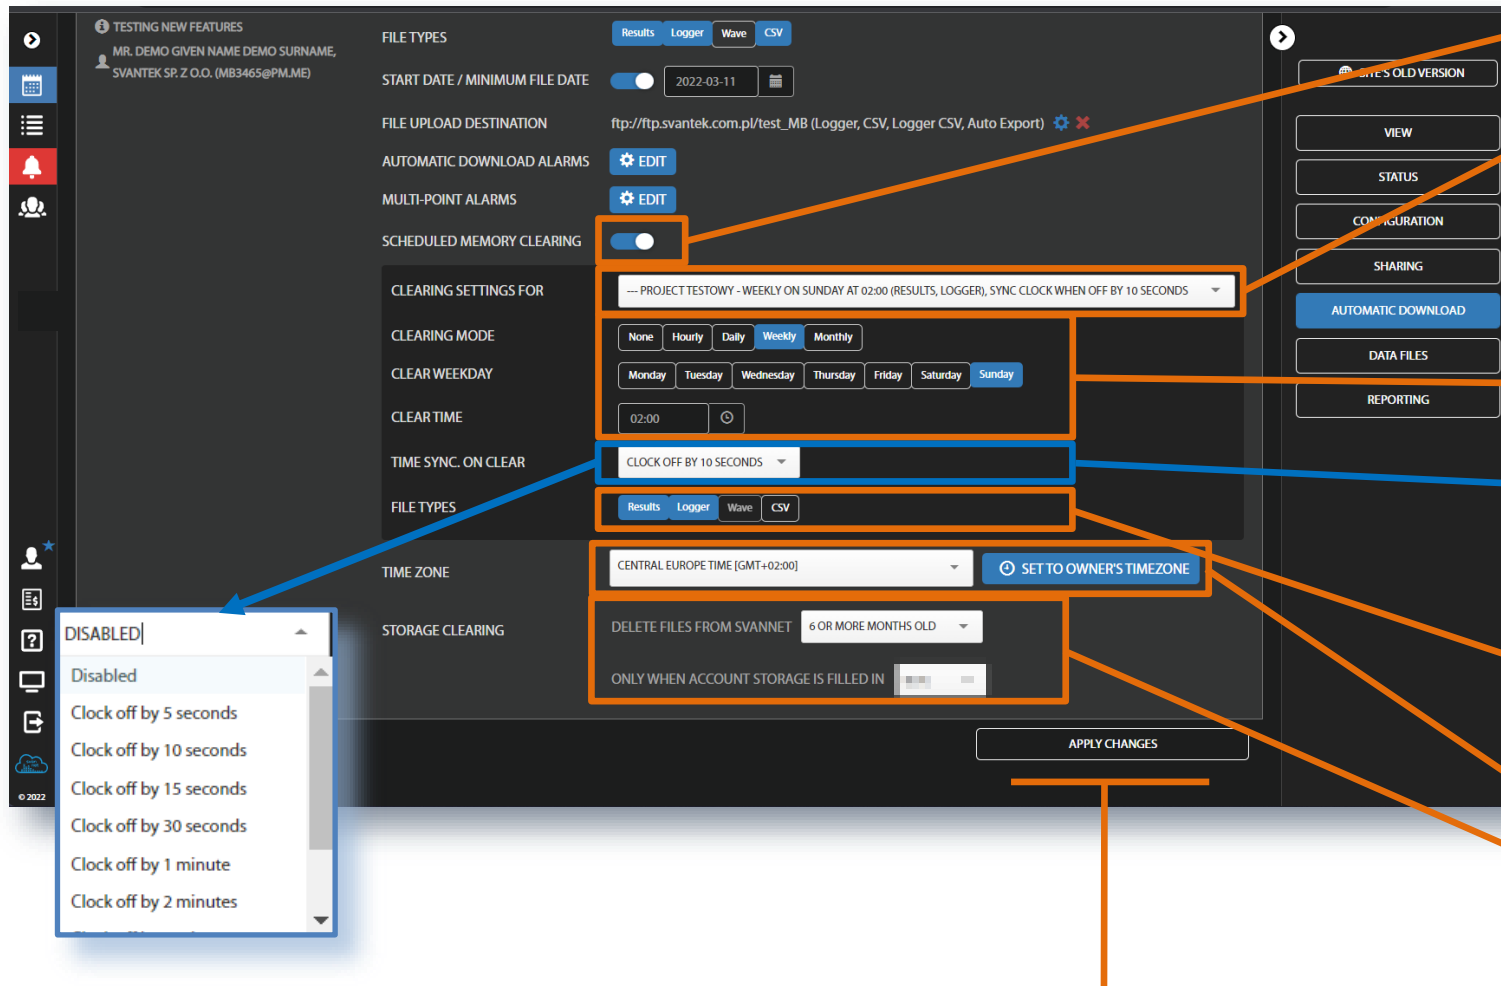

- Switch on automatic memory cleaning.
- Select the all instruments of the project or the one, located in the selected point.
- Set the clearing schedule.
- Select the minimum discrepancy in time which will initiate time synchronization.
- Select file types that will be cleared.
- Set the time zone.
- Set the clearing conditions for file age and memory used.

- Click **APPLY CHANGES** !

### 3.7. DATA FILES view (Owner/Administrator and Manager access levels)

All data is securely stored on the SvanNET server and access is secured using SSL encryption which ensures safety of transmission. With user login and password, you are assured that any user only has access to appropriate data (statuses, logs, files, configuration of owned stations). Downloading data from SvanNET is fast and easy. You can download all or just selected results.

Project - Testowy

Storage usage: 4.71 GB File count 103308 Selected: 2, Selected files' size: 4.58 MB

Testowy - ALL PROJECT FILES Show filters

NAME / CREATION DATE & TIME	TYPE	UPLOAD DATE & TIME	TOTAL SIZE
mp-2- 2022-04-13 09:35:10 - @R31.SVN ✓	Results	2022-04-13 10:00:16	1.42 kB
mp-2- 2022-04-13 02:05:10 - B...fer_1.SVN	Logger	2022-04-13 10:00:14	2.88 MB
mp-5- 2022-04-13 00:00:00 - L12...33.SVL	Logger	2022-04-13 10:00:08	2.61 MB
mp-6- 2022-04-13 02:01:10 - L300...	Logger	2022-04-13 10:00:06	1.97 MB
mp-2- 2022-04-13 09:45:15 - @R31.SVN ✓	Results	2022-04-13 09:45:15	1.42 kB
mp-2- 2022-04-13 08:20:10 - @R26.SVN ✓	Results		
mp-2- 2022-04-13 08:05:10 - @R25.SVN ✓	Results		
mp-2- 2022-04-13 07:50:10 - @R24.SVN ✓	Results		
mp-2- 2022-04-13 07:35:10 - @R23.SVN ✓	Results		

Download files

Download files as CSV

Send files to FTP

Send files to FTP as CSV

Send files to dropbox

Send files to dropbox as CSV

Delete files from SvanNET

ENTER CUSTOM FTP DETAILS

Type: FTP

Host name: Site address[port]

User name: saleksandrow@op.pl

Password: \*\*\*\*\*

Remote folder: Remote subfolder to upload files to

Test connection

OK CANCEL

This view presents list of files that were created by the instruments.

- Click here to activate filters for files.
- Click here to download this file.
- Download options are applied to all selected files.
- Delete option.
- If you select “Send files to FTP” or “Send files to FTP as CSV” option, you will be asked to enter customer FTP details.

### 3.8. REPORTING view (Owner/Administrator access levels)

The REPORTING view shows the list of all generated reports – manual and automatic. In this view, you can manage the report list – search, sort reports, repeat generating, download / delete reports and, in case of automatic reports, email them to all recipients.

The screenshot displays the 'Project - Testowy' reporting interface. At the top, there's a 'List of generated reports' title. Below it, a table lists reports with columns for Status, Date & time, Type, Period from, Period to, Template, and Format. The table contains 10 entries, mostly 'Auto (Daily report)' and one 'Auto (Weekly report)'. To the right of the table, there are action icons: a mail icon, a refresh icon, a download icon, and a delete icon. Above the table, there are filters for 'Date from...', 'Date to...', 'Show 10 entries', and a 'Search:' field. On the right side of the interface, there are buttons for 'Configure automatic reports', 'VIEW', 'STATUS', 'CONFIGURATION', 'SHARING', 'AUTOMATIC DOWNLOAD', and 'DATA FILES'. At the bottom, there's a pagination bar showing 'Showing 1 to 10 of 138 entries' and 'Previous 1 2 3 4 5 ... 138 Next'.

- Click here to configure new automatic reports.
- Select reports by text string.
- Select reports for the defined period.
- These icons allow you to repeat generating a report, download / delete reports and, in case of automatic reports, email them to all recipients.
- Click here to display the list of automatic report configurations of this type.



The screenshot shows two overlapping windows from the SvanNET application. The top window, titled 'Project - Testowy', displays the 'List of automatic report configurations - Weekly report'. It features a table with columns: Active, Title, Recipients, Period, Template, Start time, Format, and Max wait time. The 'Weekly report' entry is highlighted with an orange box. An orange arrow points from this box to the bottom window.

The bottom window, also titled 'Project - Testowy', displays the 'List of generated reports - Weekly report'. It includes a search bar and a table with columns: Status, Date & time, Type, Period from, Period to, Template, and Format. The table lists several generated reports. An orange box highlights the action icons (email, refresh, download, delete) for the first report. Another orange arrow points from this box to the right-hand text.

**Table 1: List of automatic report configurations - Weekly report**

Active	Title	Recipients	Period	Template	Start time	Format	Max wait time
<input checked="" type="checkbox"/>	Weekly report	recipient@test.mail.com	Week	mb-test-3	2022-02-18 12:00:00	PDF	No wait time

**Table 2: List of generated reports - Weekly report**

Status	Date & time	Type	Period from	Period to	Template	Format
✓	2022-05-06 13:00:02	Auto (Weekly report)	2022-04-29 13:00:00	2022-05-06 13:00:00	mb-test-3	PDF
✓	2022-04-29 13:00:01	Auto (Weekly report)	2022-04-22 13:00:00	2022-04-29 13:00:00	mb-test-3	PDF
✓	2022-04-22 13:00:01	Auto (Weekly report)	2022-04-15 13:00:00	2022-04-22 13:00:00	mb-test-3	PDF
✓	2022-04-15 13:00:02	Auto (Weekly report)	2022-04-08 13:00:00	2022-04-15 13:00:00	mb-test-3	PDF
✓	2022-04-08 13:00:01	Auto (Weekly report)	2022-04-01 13:00:00	2022-04-08 13:00:00	mb-test-3	PDF
✓ ⓘ	2022-04-01 13:00:01	Auto (Weekly report)	2022-03-25 12:00:00	2022-04-01 12:00:00	mb-test-3	PDF
✓ ⓘ	2022-04-01 12:00:01	Auto (Weekly report)	2022-03-25 12:00:00	2022-04-01 12:00:00	mb-test-3	PDF
✓ ⓘ	2022-03-25 12:00:01	Auto (Weekly report)	2022-03-18 12:00:00	2022-03-25 12:00:00	mb-test-3	PDF

- Click the Title of the automatic reports to see the list of the generated reports.
- These icons allow you to repeat generating a report, download / delete reports and email the report to all recipients.

To configure the new automatic reports, click **Configure automatic reports** in the REPORTING view and click **+Add new** in the *List of automatic report configuration's* view.

**Project - Testowy**

Title

Period

Day

Relative period ☐

Template

Default template

Recipients

+ Add recipients

Format

DOCX

Wait until period has complete data ☐

SAVE CANCEL

**Callout 1:** Relative period ☒ Start time

**Callout 2:** Wait until period has complete data ☒ Max wait time (1-10 days) 1

- Enter the **Title** of the reports.
- Select the **Period** of collecting data for the report (*Day, Week, Month, 3Months, 6Months, Year*).
- Enable **Relative period** if you want reports to be generated for the period from the **Start time + Period**.
- Select **Template** for reports. Templates are created in the VIEW section.
- Select format of the reports (*DOCX* or *PDF*).
- Enable **Wait until period has complete data** and select **Max wait time** if you want to have always complete data for the period in the reports. If data are incomplete SvanNET will wait **Max wait time** and then send the report with available data.

## APPENDIX A – STATION ALARMS DESCRIPTION

The SvanNET alarms have next meanings:

- **Mains**
  - Trigger Value: Off – alarm is generated when the system detects loss of power supply
  - Trigger Value: On – alarm is generated when the system detects appearance of power supply
- **External voltage**
  - Trigger Value: xx.xx V – alarm is generated when the system detects an external power drop below the selected value. In this case, external power means power supply and all various battery packs
- **Battery charge**
  - Trigger Value: xx % - alarm is generated when the system detects a decrease in the percentage of battery charge below the selected threshold.
- **Storage memory**
  - Trigger Value: xx MB/GB - alarm is generated when the system detects a decrease in the free storage memory below the selected threshold.
- **System check (if applicable)**
  - Alarm is generated when the system detects failure in execution of the system check procedure (not live check).
- **Measurement stopped**
  - Alarm is generated when the system detects lack of measurement. Applies only to stopped measurements - states such as start delay, waiting for synchronization and pause are treated as a running measurement
  - Instrument action: Start measurement
- **Storage error**

- Alarm is generated when the system detects an SD-card error. The check assumes that a measurement is in progress and data are recorded; the writing of the logger file is checked by changing of the free space on the card (which means that the device is writing data).
- Instrument action: Restart measurement
- **Instrument clock is incorrect**
  - Trigger value: xx seconds / xx minutes – alarm is generated if the RTC indication of the device is inconsistent with the current system time (based on owner's time zone) by  $\pm$  of the selected value
  - Instrument action: Set instrument clock to server time (based on owner's time zone) –measurement is stopped, instrument clock is set (based on owner's time zone), measurement is resumed
- **Station is disconnected**
  - Trigger value: xx minutes / xx hours – alarm is generated when the station remains disconnected from SvanNET for a time equal to the selected value.

Alarms are reported once after the occurrence of an alarm condition. The occurrence of an alarm condition will generate selected actions (e.g. e-mail) at the moment of changing the status compared to the previous check (i.e. if at 8:15 there is power supply, at 8:30 mains is off, at 8:45 mains is still off, the system will generate an alarm at 8:30 and will be still until mains is on and off again).

## APPENDIX B – CUSTOM FTP DETAILS DESCRIPTION


In the **ENTER CUSTOM FTP DETAILS** setting box, you can define the parameters for connecting to the FTP / SFTP server and define what results will be sent to it. Following parameters can be set as:

- **Type:**
  - FTP - File Transfer Protocol mode; the system will send data using the FTP protocol
  - SFTP - Secure File Transfer Protocol mode; the system will send data using the SFTP protocol
- **Host name** - name of the server (or IP address) to which we send the data. The optional port number must be entered by separating the server's name and port value with a colon. By default, port 21 (for FTP mode) and 22 (for SFTP mode) are used.
- **User name** - username used to log into the FTP / SFTP server.
- **Password** - password used to log in with the entered username.
- **Remote folder** - directory path to which data is to be uploaded. It can take a relative value (e.g. test folder / svantek) or absolute value (/ home / mb / login1 / test folder / svantek), but the actual interpretation of this path depends on the FTP server with which we communicate. As a rule, SvanNET places files in subfolders corresponding to the measurement points (e.g. test folder / svantek / point-1), so the entered path represents the folder for the entire project.
- **File upload types** - enables uploading of data files downloaded directly from the device to the server. SvanNET only uploads complete files, i.e. files that the device has saved, closed and will no longer add new data to them. This often requires setting up logger splitting in the devices in order to obtain data on the server at specific intervals. The individual options should be interpreted as follows:
  - *Results* - results files currently only written by the SVAN 958 and SVAN 958A instruments
  - *Logger* - logger files (.SVL or Buffer.SVN)
  - *Wave* - Wave type files (.WAV)
  - *CSV* - CSV type files (.CSV)
  - *Results CSV* - results files converted to CSV by SvanNET. The target file will have the name of the converted file + .CSV extension

- *CSV Logger* - logger files converted by SvanNET to CSV. The target file will have the name of the converted file + .CSV extension. The devices, at present, adopt the CSV file naming convention in line with the logger name (i.e., for example, the L123.SVL logger writing device also writes the L123.CSV file). So, if the CSV and CSV Logger options are selected here, the system will send loggers in the form of .CSV with an additional suffix of the name “-exported” (eg L123-exported.CSV).

Files are uploaded to the subfolders corresponding to the measurement points, assuming the name mp-{ordinal number}, i.e. e.g. test folder / svantek / mp-1 for the first point.

- **Test connection** - button allows you to run the FTP / SFTP connection functionality testing. The procedure assumes: establishing a connection, logging in, creating a test folder, uploading a test file, and then deleting the test file and directory. The result of the operation will be properly reported and, additionally, the displayed log of activities will allow you to direct the user in case of errors. In case of success, the procedure may make changes to the parameters defining the connections in order to optimize them for later use by the system.

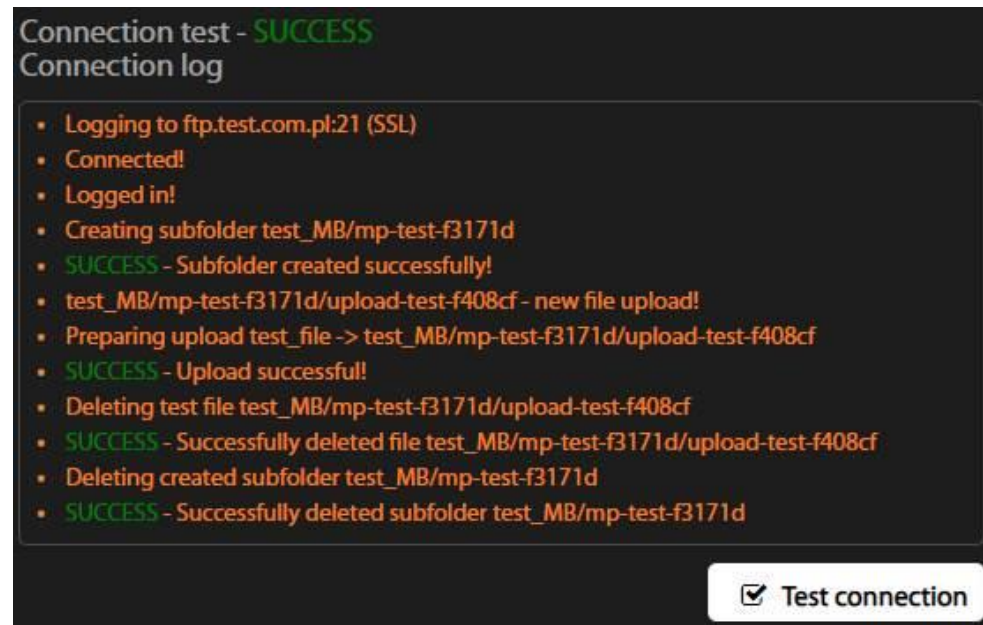

- **Edit Auto Export** - button that allows you to configure the Auto Export functionality. Auto Export allows you to send data in the form of CSV files in specified periods. The source of the results is the data exported to the SvanNET database from the downloaded files. Unlike uploading files to FTP, this mode is independent of the splitting of files in the instruments and can send data as soon as they are downloaded from the instrument via SvanNET. To configure the functionality, set the parameters in the CONFIGURE AUTO EXPORT box:

**CONFIGURE AUTO EXPORT**

Mode: Daily Choose results

Start time: 2021-07-14 - TH LAeq (Ch1,P1)

Complete only: Off

Sorting: Asc

Empty columns: Off

Battery info: Off

Battery history: Off

Time format: Date & time

Naming ⓘ: data\_%s\_%t.csv

Measurement Point 2 - SVAN 958 S/N 11740

Stacja MG - SD 258A PRO SVAN 958A S/N 69896

Measurement Point 5 - SV 307 S/N 75955

Measurement Point 6 - SV 200 S/N 26812

Export now 2021-07-14 Measurement Poi...

+Add auto export

OK CANCEL

- **Mode** - data grouping period: *Daily* - contains data for one day from midnight to midnight, *Hourly* - contains data for one clock hour counting from midnight (i.e. from 01:00:00 to 02:00:00), *5 minutes* - contains data for 5 minutes from midnight (e.g. from 01:05:00 to 01:10:00)

**Note:** The file will contain results at least partially within the measured period, i.e. a 10-minute result marked with a 02:03:00 time stamp will be included in the file exported for the period 01:00:00 - 02:00:00.

- **Start time** - initial date of data processing. For example, setting August 1 in *Daily* mode will cause the system to start exporting data from August 1 (even if earlier data is available) and, after sending data from August 1 to August 23, it will wait for the next data and send them as soon as they are available.
- **Complete only** – if switched on enforces completeness of sent data. If enabled, the system will only send files that contain data for the complete period. For example: if we have the *Daily* mode, the files from August 23 will be sent only when the data for the entire day will appear in the SvanNET system.
- **Sorting** - data row sort direction: *Asc* – ascending, *Desc* – descending.
- **Empty columns** - if switched on enforces the CSV file structure to be preserved even if some data is not available. The format assumes that each data record is one row and each result is one column. If the selected result does not exist in the whole period, then, with this option enabled, an empty column will be inserted. If it is switched off - there will be no such column.
- **Battery info** - if switched on additionally adds information about the last known (in a given period) set of information about the station's power supply at the measuring point.
- **Battery history** - if switched on additionally adds information about the station's power supply for each record of the exported data.
- **Time format** - if switched on allows you to specify the formatting of the time stamp in each data record: *Date & time* - hour and time, *Time only* - only time.
- **Naming** - allows you to define the way of formatting the target file. The convention entails entering a file name (with a possible subfolder separated by “/”) using certain functional codes:



%m - instrument type name  
%n - instrument type number  
%s - instrument serial number  
%p - project name  
%i - point index  
%o - point name  
%r - point short name  
%t - date/time of exported period  
%ty - year of exported period  
%tm - month of exported period  
%td - day of exported period  
%th - hour of exported period  
%ti - minute of exported period  
%ts - second of exported period

If a subfolder name is defined, the system will automatically adopt a subfolder with the name corresponding to the measuring point name.

- **Choose results** - button allows you to select a result set for data export.

**Note:** there is a strong correlation with the choice of measuring points, which is presented below. The set of available results to choose from is the set of common results that exist for all selected stations, so some results and measurement points may not be shown for selection (e.g. the LAeq result was selected and point 3 does not have such a result in the database, this is 3 will not be shown on the selection list; consequently, if we have selected point 3, then if we enter the result selection option, the result of LAeq will not be shown).

## APPENDIX C – EXAMPLE OF AUTOMATIC FILES DOWNLOAD CONFIGURATION

SvanNET features such as Project View, reporting, Auto Exports and Project Alarms rely on receiving data from Svantek instruments (stations). Stations measure results such as noise, vibration, dust or meteorological data and store them in their memory as files. These files can be uploaded to the SvanNET cloud and then processed to create viewable measurement data and alarms. To ensure that results are properly acquired by SvanNET system, two components need to be properly configured:

### Station

The station must be properly configured to store measured data. To do this, data logging to files (for example, a logger) must be enabled and the logged results must be selected. The configuration depends on the type of station, but the basic concept remains the same. Using SV 307 as an example, the following steps must be taken (see Chapter [2.4.3](#)):

1. Open the **WEB INTERFACE** view and go to the station **Configuration** section.
2. In the **Measurement Setup** tab, ensure that proper **Measurement Function** is selected for the required measurements.
3. (optional) In **Measurement Setup** tab, select **Start Sync** to start measurements at full clock intervals. For example, selecting 1 hour ensures that the measurement always starts from the full hour. Note that, depending on when the measurement is started, the instrument may remain idle until the selected period is reached (for example, starting a measurement with 1 hour synchronization at 11:43 will cause the instrument to wait 17 minutes before the actual start of measurements).
4. In the **Storage** tab, make sure that **Enable data logger** is ON.
5. (optional, but highly recommended) In the **Storage** tab, configure **Logger splitting**. Normally, once a measurement is started, the instrument will start logging data to the log file until the measurement is stopped, the memory runs out, or the file size exceeds 4 GB. However, especially in a remote communication environment, it is recommended to work with smaller files, both for performance and data integrity reasons. With **Logger splitting** enabled, the logger will be split according to the rule. For example, if you select *Every 1h*, a set of files will be created, each containing 1 hour of measurements. Smaller files may be preferable in some configurations, but even if there are no special requirements, it is recommended to set at least *Every day* with one split time setting (thus creating one file each day).
6. In the **Storage** tab, in the **Time History** section, select one or more results as required by the project. Time History results are recorded using integration periods ranging from 100 ms to 1 hour (may vary by instrument).

7. (optional) In the **Storage** tab, in the Summary Results section, set **Save summary results** to ON and select one or more results as required by the project. Summary Results are recorded independently of Time History results with their own integration period from 1 second to 24 hours and cover a wider range of result types than the Time History section.
8. complete the setting by clicking **Apply Settings**.

This will cause the instrument to start generating logger files (.SVL) in Svantek format. These files are the main source of measurement data for the SvanNET system.

## Automatic Download

In order to retrieve data from instrument files, the Automatic Download function must be configured. Make sure the instruments are properly assigned to measurement points and navigate to the **Automatic Download** section of the Project. In this section, follow those steps to set up the system for data acquisition (see Chapter [3.6](#)):

1. **Enable the AUTOMATIC DOWNLOAD option.**
2. Set the **DOWNLOAD PERIOD**. Depending on how often the data needs to be downloaded, select the appropriate download period. While choosing lower values will result in the system being updated more frequently with new measurement data, the downside is more data consumption. Because each download sequence sends its own set of requests, the more frequently the instrument polls the data, the more data will be used to download the data. This is especially important for remote communication using a GSM connection, where the amount of data used directly affects the cost of the SIM card. For most purposes, downloading every 15 minutes is the optimal setting. For more frequent downloads, it is not recommended to download with a frequency of less than 1 minute.
3. Select **FILE TYPES** to download. Select the **Logger** files as this is the primary data source for SvanNET. The **Results** files can be used as an additional source of data, but these files are created only by SVAN 958 and SVAN 958A and are considered a deprecated feature. The **CSV** files are not used for the main SvanNET data repository, while the **WAVE** files can be used for displaying events.
4. (optional) Set **START DATE / MINIMUM FILE DATE**. The instrument may contain old data (e.g. from an old project). Setting the project start date can be useful to prevent unnecessary files from being processed - files with dates earlier than the start date will not be downloaded.

5. (optional) Configure **SCHEDULED MEMORY CLEARING**. Depending on instrument and amount of recorded data, it may be useful to configure memory clearing. This function will erase data from the instrument memory (but only once the data has been first downloaded by SvanNET), thus creating a place to save new data.
6. Click **APPLY CHANGES**.

This will cause the system to automatically start downloading files from instrument based on the provided configuration. Once the file is downloaded (even if the instrument is still writing to it), it will be processed and results will be prepared for use with the project functions."